

Pickup and interference in particle astrophysics experiments: techniques and tools

JOHN McMILLAN

Department of Physics and Astronomy, The University of Sheffield
Sheffield, South Yorkshire, S3 7RH, Great Britain

j.e.mcmillan@sheffield.ac.uk

December 28, 2021

Abstract

Contamination of signals by pickup and interference is a recurrent problem in physics experiments, the suppression of which consumes much time and effort. Techniques are presented which allow the time-domain assessment of mitigation techniques. A pick-off circuit is presented which facilitates the investigation of AC power-line borne transients without danger to the experimenter or damage to oscilloscopes. The circuit is simple to construct and low-cost. The output of this circuit may be used to veto or identify interference produced events so that they are not subsequently included in analysis.

I. INTRODUCTION

In the conduct of particle astrophysics experiments, the experimenter must deal with pulsed signals from a range of detectors. The contamination of these signals with interference and pickup is a recurrent problem and the suppression of interference consumes considerable time and effort.

Doubtless, this is also true in a variety of other disciplines. The major difference being that particle astrophysics projects are often undertaken in less than ideal experimental conditions, rather than in the comfort of a purpose built laboratory, and the interference level is more severe. Consequently, the advice given here will almost certainly find application in related disciplines.

It is not the intention of this note to provide a universal tutorial on interference, pickup and techniques for its mitigation, as these can be found elsewhere [1, 2, 3, 4, 5, 6, 7]. Hemming [8] provides useful information for those planning a new experiment or facility. Fitch [9]

provides a particularly useful analysis of problems with diagnostics in nanosecond pulsed power systems, while Kerns [10] provides an anecdotal account of problems at an accelerator laboratory.

Rather, this note is intended to present diagnostic techniques which allow the quantification of interference, so that the experimenter can judge whether mitigation techniques being applied are having the desired effect. Additionally, there is the possibility of vetoing interference generated events, or identifying them as such, so that they can be dealt with in subsequent analysis.

The signal pulses typically have duration of a few nanoseconds to a microsecond. Some pulses are simple yes/no trigger signals which need to be counted or registered. Others contain pulse height or shape information which needs to be measured and is normally related to energy deposited. These signals are produced by semiconductors or photomultipliers and can have amplitudes of only a few millivolts.

In all cases it is likely that these pulse signals must be monitored for a considerable period of time, from hours up to some years in the worst cases. It is in the nature of the subject that interest lies in rare events. Hence, the contamination of the recorded data with a significant proportion of spurious events often leads to the failure of the experiment.

The interference can either be propagated by electromagnetic waves at radio frequencies (RF) or it can be power-line borne. More rarely it can be transmitted over signal or data circuits. It can either be a continuous RF-signal or, more difficult to analyse, be comprised of sporadic pulses. However it is propagated, there will be a route by which it couples into the detector output, either producing unwanted false events or masking genuine signals.

In the majority of cases, the source of the interference is beyond the control of the experimenter. It may be generated by electrical equipment in adjacent laboratories or buildings, by load switching by the utility supplier, or it may even be produced by lightning strikes.

For particle and nuclear physics applications, the most problematic transients are of sub-microsecond duration, as these closely mimic expected signals from detectors. They correspond to frequencies in the 10MHz – 1GHz range, and in which broadcasts, mobile telephony and data services are operating.

II. POWER-LINE FILTERS

It is impossible to overemphasise the importance of providing power-line filters. The construction of an experiment or experimental facility without substantial power-line filtering is simply a waste of experimenters' time. Commercial instrument crates and power supplies usually incorporate power-line filters but these are of variable quality and may be inadequate. Low voltage supplies intended for powering computers or logic circuitry need only have sufficient filtering that the logic levels are not compromised. When working with millivolt signals in a harsh environment, more substantial filters should be employed.

Power-line filters are industrially available from a number of manufacturers. They typically feature two or three stages of low pass LC π -filter and can provide 40dB or more of attenuation for signals in the 10MHz region. The filter should be conservatively rated to handle sufficient current for the experiment or facility.

If there is a specific item of equipment which is known to be a source of power-line noise and which is under the control of the experimenter, it is worth providing a separate filter for the power-line leading into it. This category includes pulsed particle generators, magnet power supplies, pumps and almost anything with a high power motor. The intention is that this will reduce interference contaminating the supply to data acquisition systems.

Note that these filters go further than simple surge protectors. These latter are semiconductor or similar devices intended to protect equipment from over-voltage surges and which have non-ohmic response such that above a specified voltage they dump current. They are useful for the function for which they are designed, and can be used effectively to complement a filter, but they are no replacement.

Similarly, 'uninterruptible power supplies' (UPS) are just that. They are a system of rechargeable batteries and inverters intended to provide continuous power to equipment in the event of power outages. Such devices are no substitute for a filter and their rapid switching during outages is likely to exacerbate interference problems.

III. ANTENNA FOR DETECTING RF

To detect the presence of RF electromagnetic pulses, a simple whip antenna is normally sufficient. This can be 10 or 20cm of stiff wire or a telescopic aerial of the type used on portable radios. It should be connected to the core of a length of 50 Ω cable terminated at the far end. The output from this can be displayed on an oscilloscope. If there is considerable low-frequency signal present, it is sometimes useful to crudely filter the antenna signal by coupling it through a capacitor of about 10pF.

Typical laboratories will have continuous stream of pulses in the millivolt region with larger pulses reaching into the volts or tens of volts. Depending on the nature of the RF signals present, it may be possible to diagnose their origin from the waveform. It may also be possible to move the antenna and determine source and directionality.

If the RF interference has significant continuous content of a specific frequency, it might be worth using a dipole, a loop antenna or even a directional Yagi antenna as a diagnostic tool.

The output from the antenna should be examined in the time domain on an oscilloscope, while comparing detector signals on other channels. It can be quickly established at what level the detector signals are affected by RF interference.

IV. POWER-LINE PICK-OFF CIRCUIT

Power-line noise presents a monitoring problem which makes diagnostics and determining the success of mitigation attempts difficult. Simply connecting the input of an oscilloscope to the power-line supply is dangerous and likely to damage the instrument. Using a high-voltage probe appears possible, but these are intended for measuring high voltage signals rather than transients superimposed on high voltage AC supplies. They have large divider ratios which reduce the transients down to unmeasurable levels.

A number of manufacturers offer power-line transient analysers. These instruments are designed to record voltage trends, dropouts, and power quality over a long period of time. Typically, they provide a log with time stamps of transients and outages which can be analysed later. They do not provide an output that can be viewed in the time domain with an oscilloscope, in order to compare power-line transients with experimental signals.

To address the monitoring problem, a simple pick-off circuit was developed. Being simple, the circuit presented is also of negligible cost compared with commercial power-line transient analysers.

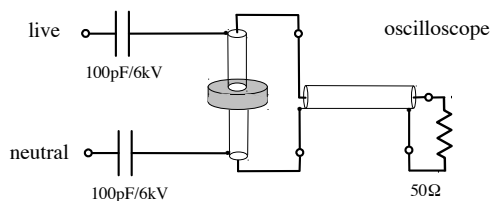


Figure 1: Schematic of pick-off circuit.

i. Design and Construction

The idea for the circuit is taken from Paul and Hardin [11], who identify a method of isolating the measurement from the power source, but who are interested in frequency domain measurements of interference over a wide range. The HF current probe presented by Wyatt [12] has also been influential but is intended for a different application. A simpler circuit, denoted "garbage detector" can be found in Hayes and Horowitz [13]. It does not use nanosecond pulse techniques and its operation will be dependent on the high frequency response of the power transformer used.

The schematic of the pick-off circuit can be seen in figure 1. It is intended to pass signals in the 10MHz – 1GHz range, while effectively suppressing the power waveform at 50 or 60Hz and its immediate harmonics. The circuit comprises an isolating transmission line transformer which is coupled to the power-line supply through low value high voltage ceramic capacitors.

The transformer is the simplest possible 1:1 Guanella transmission line transformer [14, 15]. Alternatively, if better impedance matching was of interest, the isolation transformer proposed by Winningstad [14] could be used, but this requires $Z_0/2$ transmission line which is not readily available. If lower frequency operation was required, a design based on the isolation transformer proposed by Kaplan [16] would be effective.

The transformer was made by winding five turns of RG-174 coaxial cable through a toroidal ferrite core. For those unfamiliar with



Figure 2: *Transmission line transformer*

nanosecond pulse transformers, it really is arranged as drawn, with the 'primary circuit' formed by the coaxial braid and the 'secondary circuit' formed by the inner core. In the interests of simplicity of drawing, the schematic shows only a single penetration of the core.

The toroid was a 23mm outside diameter Ferroxcube TN23/14/7-4C65, which is a low permeability NiZn ferrite intended for use in wideband transformers. Similar materials are available from other manufacturers. If very high voltage spikes are expected, the output of the transformer could be further fitted with clamp diodes to prevent damage to the oscilloscope.

A unit containing three of the circuits described above was constructed in an insulated box. The three circuits were wired live-neutral, live-earth and neutral-earth. The connection to the power-line was via an IEC 60320 C13 socket and the three output connections were BNC sockets. By having three separate circuits, comparisons can be made to determine whether transients are differential live-to-neutral or common mode with respect to earth.

ii. Response of the Pick-off Circuit

The circuit presented does not provide a flat response to transient signals at all frequencies. In use, it is necessary to know how the signal observed is related to the input.

A 1V pulse with risetime 0.7ns, fwhm 3.5ns and fall 4.0ns was applied to the input. This produced an output pulse of amplitude 280mV, risetime 1.0ns, fwhm 3.8ns and fall 2.2ns. It also had substantial ringing on its tail.

Applying sine waves to the input and measuring the input and output amplitudes gave the frequency response function shown in figure 3. It is demonstrably far from flat. In the re-

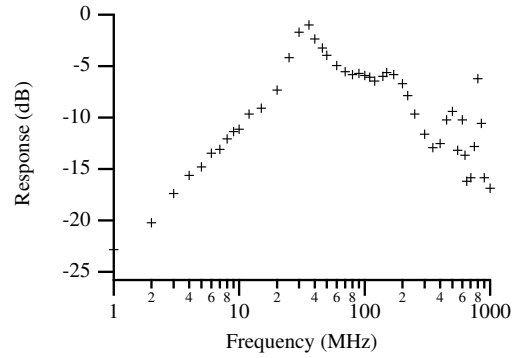


Figure 3: *Measured response of pick-off circuit.*

gion above 600MHz there are clear resonances which are due to the power-line input cable being inadequately matched in its characteristic impedance.

By understanding the response in the frequency domain and observing transient behaviour in the time domain, useful diagnostics of power-line transients can readily be obtained.

V. USING THE TOOLS

Either the antenna or the power-line pickoff circuit can be used to trigger an oscilloscope and other channels can be used to examine the detector signals. In this way vulnerabilities can be determined and any mitigation techniques applied can be assessed.

Further, either the antenna or the power-line pickoff circuit can be connected to a discriminator to generate a logic flag, which can be used in event-based experiments to identify those events which are coincident with RF or

power-line transients. This logic flag can be used to veto interference generated events, or it can be recorded by the data acquisition system so that these events can be identified later and excluded from subsequent analysis.

This approach is particularly useful when severe interference is encountered which is beyond the control of the experimenter. Obviously it results in a reduction of the effective on-time of the experiment. The reduction may itself be modulated by some anthropogenic activity and care must be taken in the analysis of this.

VI. ACKNOWLEDGMENTS

I would like to thank all those who have contributed to this project over many years. I would also like to thank Steve Collins for useful discussions.

REFERENCES

- [1] J.R. Barnes. *Electronic System Design; Interference and Noise Control Techniques*. Prentice Hall, Englewood Cliffs, NJ., USA, 1987.
- [2] M. Gruber. *The ARRL RFI Book*. ARRL, Newington, Ct., USA, second edition, 2007.
- [3] H.J. Ott. *Electromagnetic Compatibility Engineering*. John Wiley, NJ., USA, 2009.
- [4] C.R. Paul. *Introduction to Electromagnetic Compatibility*. John Wiley, Hoboken, NJ., USA, second edition, 2006.
- [5] R.E. Taylor. Radio frequency interference handbook. NASA Technical Report SP-3067, 1971.
- [6] G. Vijayaraghavan, M. Brown, and M. Barnes. *Practical Grounding, Bonding, Shielding and Surge Protection*. Newnes, Oxford, 2004.
- [7] W.R. Vincent et al. The mitigation of radio noise from external sources at radio receiving sites. NPS-EC-07-002, Naval Postgraduate School, Monterey, Ca., USA, 2007.
- [8] L.H. Hemming. *Architectural Electromagnetic Shielding Handbook: A Design and Specification Guide*. IEEE Press, NY., USA, 1992.
- [9] R.A. Fitch. Salving diagnostics in the pulse-power environment. 1st IEEE Pulsed Power Conference, Proceedings, Paper IIID-5, 1976.
- [10] Q. A. Kerns. Electrical noise around accelerators. *AIP Conf. Proc.*, 281(1):91–100, 1992.
- [11] C.R. Paul and K.B. Hardin. Diagnosis and reduction of conducted noise emissions. *IEEE Trans. Electromagnetic Compatibility*, 30(4):553–560, 1988.
- [12] K. Wyatt. The HF current probe: Theory and application. *Interference Technology*, 12:1–6, 2012.
- [13] T.C. Hayes and P. Horowitz. *Student Manual for the Art of Electronics*, pages 57–58. Cambridge University Press, Cambridge, 1989.
- [14] C. N. Winningstad. Nanosecond pulse transformers. *IRE Transactions on Nuclear Science*, 6(1):26–31, March 1959.
- [15] J. Seveck. *Transmission line transformers*. Noble Publishing Corporation, Atlanta, Georgia, USA, 4th edition, 2001.
- [16] Z. Kaplan. Simple, fully isolated, pulse transformer. *Review of Scientific Instruments*, 55(8):1355–1356, 1984.