

WAVEFORM FEATURE IMPLEMENTATION FOR FRIB LLRF CONTROLLERS*

S. Zhao[†], E. Bernal-Ruiz, M. Konrad, Z. Li, H. Maniar, D. Morris, Facility for Rare Isotope Beams, Michigan State University, East Lansing, MI, USA

Abstract

Waveform feature is one of the requirements for the FRIB LLRF controllers. It is desired that the LLRF controllers store the internal data (e.g. the amplitude and phase information of forward/reverse/cavity signals) for at least one second of sampled data at the RF feedback control loop rate (around 1.25 MHz). One use case is to freeze the data buffer when an interlock event happens and read out the fast data to diagnose the problem. Another use case is to monitor a set of signals at a decimated rate (user settable) while the data buffer is still running, like using an oscilloscope. The detailed implementation will be discussed in the paper, including writing data into the DDR memory through the native interface, reading out the data through the bus interface, etc.

INTRODUCTION

The Facility for Rare Isotope Beams (FRIB) is a scientific user facility for nuclear physics research being built at Michigan State University (MSU). The low level radio frequency (LLRF) controller for the FRIB project is designed to accommodate various cavity and tuner types [1] (see Table 1).

Table 1: FRIB Cavity Types

System	Area	Frequency (MHz)	Type	Tuner
MHB F1	FE	40.25	RT	N/A
MHB F2	FE	80.5	RT	N/A
MHB F3	FE	120.75	RT	N/A
RFQ	FE	80.5	RT	temperature
MEBT	FE	80.5	RT	2-phase stepper
QWR	LS1 FS1	80.5	SC	2-phase stepper
MGB	FS1	161	RT	5-phase stepper
HWR	LS2/3 FS2	322	SC	pneumatic

With the direct-sampling and under-sampling techniques the analog-to-digital converter (ADC) can sample RF signals of five different frequencies (in harmonic relation) ranging from 40.25 MHz to 322 MHz with the same sampling frequency. Non-In-Phase/Quadrature (non-IQ) sampling is also adopted to reduce the effect of harmonics. RF output synthesis is done by generating four points (I, Q, -I, -Q) per waveform and using band-pass filters to pick up

* Work supported by the U.S. Department of Energy Office of Science under Cooperative Agreement DE-SC0000661

[†] Email address: zhaos@frib.msu.edu

the fundamental or higher harmonics of interest. There are three RF board variations, and each supports two frequencies. Two types of tuner boards of the same form factor are designed to drive stepper motors or analog tuners.

The FRIB LLRF controller includes: the FRIB general purpose digital board (FGPDB), one of the three RF board variations, one of the two types of tuner boards or none, a front panel board, a power supply and a chassis (see Fig. 1).



Figure 1: FRIB LLRF controller. 1. Power supply; 2. Tuner board; 3. RF board; 4. FGPDB; 5. Front panel and board.

Besides flexibility, the FRIB LLRF controller also features: 1. digital self-excited loop (SEL) allowing cavities to be driven with tuners unlocked; 2. advanced control algorithms for high performance [2]; 3. comprehensive external and internal interlocks to protect the cavities, amplifiers, and other equipment; 4. auto-start procedure to automate cavity turn-on for efficient operation; 5. waveform storage for monitoring and diagnosis.

FGPDB

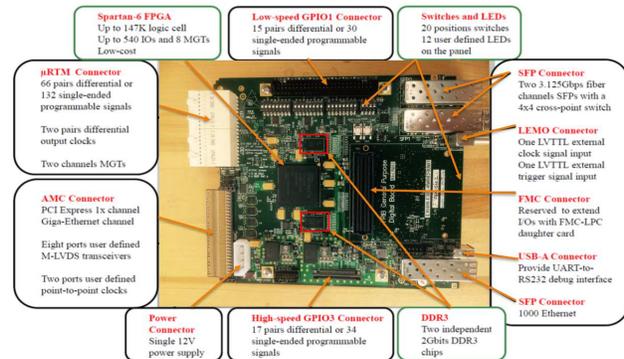


Figure 2: FGPDB peripherals and interfaces.

The FGPDB is a common digital board based on the Xilinx Spartan-6 field programmable gate array (FPGA) XC6SLX150T-FGG900 that was designed at FRIB to

128 bytes, the memory is still able to hold around 1.7 seconds of data which meets the requirement of one second.

To keep track of the data in the memory, various pointers and flags are used. *pStart* is a pointer to mark the address of the starting sample of the current run; *pCurrent* is a pointer to track the address where the current sample is being written; *pTrigger* is a pointer to mark the trigger point; *flagFull* is a flag to indicate whether or not the circular buffer has been filled at least once. The *flagFull* will be set when the circular buffer is filled for the first time ($pCurrent == pStart$); it will be reset when the buffer starts running again for the next time. *TrigPos* is a user settable parameter that determines how many more samples to acquire after the trigger condition is met before the circular buffer freezes.

Data Retrieving

For the first use case, the circular buffer is already frozen when the user tries to retrieve the data. There is no risk of data being overwritten while reading the data out. However, for the second use case the circular buffer is still running. To avoid loss of data, the fast data in the circular buffer (Chip #2) is copied over to the Microblaze memory space (Chip #1) based on user settable parameters, then the data is read out without time constraints.

This is accomplished by defining two user commands, the request waveform data (REQ_WF_DATA) command (in Fig. 6) and the read waveform (READ_WAVEFORM) command (in Fig. 7), which are based on User Datagram Protocol (UDP) communication [6].

REQ_WF_DATA Cmd Request			
Offset (Byte)	Length (Byte)	Field	Definition
0	4	Packet ID	>= 1 (incremented for each packet sent)
4	4	Command	8
8	4	Length	Total number of samples required. Must match Waveform NELM field
12	4	Decimation Factor	Number of samples to be read. DF=1 (all data read), DF=2 (one out of two) ...

REQ_WF_DATA Cmd Response			
Offset (Byte)	Length (Byte)	Field	Definition
0	4	Packet ID	>= 1 (incremented for each packet sent)
4	4	Command	8
8	2	Session ID	The session ID assigned to the connection by the IOC
10	2	Status	Status 0 if success; !=0 if error (see LCP status codes)
12	4	Length	Total number of samples available to be read
16	4	Decimation Factor	Number of samples to be read. DF=1 (all data read), DF=2 (one out of two) ...
20	4	Sequence Number	Sequence Number of the package requested. Increased by 1 on each request

Figure 6: The data format of request and response of the REQ_WF_DATA command.

When the user sends a REQ_WF_DATA command with specified *Length* (≤ 8 K) and *Decimation Factor* (1 to 256), one out of every *Decimation Factor* sample(s) and a total number of *Length* samples of data are copied to the waveform buffer in Chip #2. The response packet will include a *Sequence Number* as an identifier of the newly requested waveform.

Then the user can send the READ_WAVEFORM command to read out the waveform of interest by specifying the *Waveform ID* (1 to 14). The *Offset* in the waveform buffer and the *Count* of samples to be read need to be specified as well. The *Count* is limited to 256 by the standard maximum transmission unit (MTU) of 1500. If the 9000 MTU jumbo packet is supported, this limit can extend to 2048. The payload of the response packet starts with the

time stamp (two 32-bit registers) of the first data sample in the current packet followed by the *Count* number of values of the specified *Waveform ID*.

By reading multiple waveforms (with different *Waveform ID*) from the same waveform buffer (same *Sequence Number*), user can display multiple traces (up to 14) on the same time axis. By changing the *Decimation Factor*, user can easily change the time scale of the waveform. This is very similar to using an oscilloscope.

READ_WAVEFORM Cmd Request

Offset (Byte)	Length (Byte)	Field	Definition
0	4	Packet ID	>= 1 (incremented for each packet sent)
4	4	Command	3
8	4	Waveform ID	ID of the waveform to be read
12	4	Offset	First value to be read from the waveform. Increased on each read by Count to read total length
16	4	Count	The number of values to return from the waveform on each read

READ_WAVEFORM Cmd Response

Offset (Byte)	Length (Byte)	Field	Definition
0	4	Packet ID	>= 1 (incremented for each packet sent)
4	4	Command	3
8	2	Session ID	The session ID assigned to the connection by the IOC
10	2	Status	Status 0 if success; !=0 if error (see LCP status codes)
12	4	Waveform ID	ID of the waveform actually read from (0xFFFFFFFF if req ID invalid)
16	4	Offset	The offset of the first value actually returned (0xFFFFFFFF if none)
20	4	Count	The number n of values returned (0 if none)
24	4	Sequence Number	Sequence Number of the package this data belongs to.
28	8	TimeStamp	Value from GTS (0 if no data returned) of first value acquired [6:3:32]-Date/Time part of the timestamp [31:0]-Sub-second part of the timestamp
36	4*n	Waveform Values	n 32-bit values from the requested waveform

Figure 7: The data format of request and response of the READ_WAVEFORM command.

SUMMARY

Waveform storage feature is a useful tool for monitoring and diagnosis. The implementation meets all of the requirements and provides users with the flexibility in presenting the waveform data. The new tool will be very helpful during the next phase commissioning at FRIB. In the future, different trigger conditions could be added to the second use case providing more flexibility.

REFERENCES

- [1] S. Zhao *et al.*, "The LLRF Control Design and Validation at FRIB," in *Proc. NAPAC'19*, Lansing, MI, USA, Sep. 2019, paper WEPLM03.
- [2] J. Vincent *et al.*, "On active disturbance rejection based control design for superconducting RF cavities," *Nuclear Instruments and Methods in Physics Research A*, vol. 643, no. 1, pp. 11-16, 2011.
- [3] Z. Y. Li *et al.*, "FRIB Fast Machine Protection System: Engineering for Distributed Fault Monitoring System and Light Speed Response," in *Proc. LINAC'16*, Lansing, MI, USA, Sep. 2016, paper THPLR046, pp. 959-961.
- [4] "Spartan-6 FPGA Memory Controller," Xilinx documents UG388 (v2.3), https://www.xilinx.com/support/documentation/user_guides/ug388.pdf.
- [5] "Spartan-6 FPGA Memory Interface Solutions," Xilinx documents UG416 (v1.4), https://www.xilinx.com/support/documentation/ip_documentation/mig/v3_8/ug416.pdf.
- [6] M. Konrad *et al.*, "EPICS Support Module for Efficient UDP Communication with FPGAs," in *Proc. ICALEPCS'19*, New York, NY, USA, Oct. 2019, paper MOPHA075.