

# Chapter 1

## Dynamic Energy Management

Nicholas Moehle, Enzo Busseti, Stephen Boyd, and Matt Wytock

**Abstract** We present a unified method, based on convex optimization, for managing the power produced and consumed by a network of devices over time. We start with the simple setting of optimizing power flows in a static network, and then proceed to the case of optimizing dynamic power flows, *i.e.*, power flows that change with time over a horizon. We leverage this to develop a real-time control strategy, model predictive control, which at each time step solves a dynamic power flow optimization problem, using forecasts of future quantities such as demands, capacities, or prices, to choose the current power flow values. Finally, we consider a useful extension of model predictive control that explicitly accounts for uncertainty in the forecasts. We mirror our framework with an object-oriented software implementation, an open-source Python library for planning and controlling power flows at any scale. We demonstrate our method with various examples. Appendices give more detail about the package, and describe some basic but very effective methods for constructing forecasts from historical data.

---

Nicholas Moehle

Department of Mechanical Engineering, Stanford University, e-mail: [nicholasmoehe@gmail.com](mailto:nicholasmoehe@gmail.com)

Enzo Busseti

Department of Management Science and Engineering, Stanford University, e-mail: [ebusseti@stanford.edu](mailto:ebusseti@stanford.edu)

Stephen Boyd

Department of Electrical Engineering, Stanford University, e-mail: [boyd@stanford.edu](mailto:boyd@stanford.edu)

Matt Wytock

Gridmatic, Inc., e-mail: [matt@gridmatic.com](mailto:matt@gridmatic.com)

## 1.1 Introduction

We present a general method for planning power production, consumption, conversion, and transmission throughout a network of interconnected devices. Our method is based on convex optimization. It provides power flows that meet all the device constraints, as well as conservation of power between devices, and minimizes a total cost associated with the devices. As a by-product, the method determines the locational marginal price for power at each point on the network where power is exchanged.

In the simplest setting we ignore time and consider static networks. In the next simplest setting, we optimize power flows for multiple time periods, over a finite time horizon, which allows us to include ramp rate constraints, energy storage devices, and deferrable loads. We leverage this to develop a real-time control method, model predictive control, which uses forecasts of unknown quantities and optimization over a horizon to create a plan, the first step of which is used or executed in each time period. It is well known that, despite uncertainty in the forecasts, model predictive control often works reasonably well. Finally, we consider an extension of model predictive control that explicitly handles uncertainty in the forecasts by considering several possible scenarios, and creating a full contingency plan for each one, coupled by the requirement that the power flows in the first period of each contingency must be the same.

In addition to providing optimal power flows, our method computes the locational marginal price of power over the network. These prices can be used as the basis of a system of payments, in which each device is paid for the power it produces, or pays for the power it consumes, and each transmission line or conversion device is paid its service. We show that, under this payment scheme, the optimal power flows maximize each individual device's profit, *i.e.*, the income from payments to it minus the cost of operating the device. This means that the optimal power flows are not only socially optimal, but also provide an economic equilibrium, *i.e.*, there is no incentive for any device to deviate from the optimal power flows (in the absence of price manipulation).

Our exposition is accompanied by `cvxpower`, a Python software implementation of our method, which is available at <http://github.com/cvxgrp/cvxpower>. `cvxpower` is an object-oriented package which provides a declarative language for describing and optimizing power networks. Object-oriented software design is well suited for building complex applications with many inter-operating components, whose users need not understand the internal details of these components. In this sense, we aim to abstract away the technical details of the individual devices in the network, as well as the underlying optimization problem, allowing users to focus on modeling. More advanced users can extend our software framework, for example, by defining and implementing a new device.

Most of the ideas, and much of the material in this paper has appeared in other works or is well known. Our contribution is to assemble it all into one

coherent framework, with uniform notation and an organization of ideas that shows how a very basic method of optimizing static power flows generalizes naturally to far more complex settings. We also note that more sophisticated work has appeared on closely related topics, such as using convex optimization relaxations to solve (nonconvex) AC power flow optimization problems, or advanced forms of robust model predictive control. Some of this work is discussed in the section below on related work, as well as in the main body of this paper.

### 1.1.1 *Related work*

Mathematical optimization has been used to manage electric power grids for nearly a century. Modern overviews of the field are provided by [35] and [33], and many examples by [1]. For an overview of economic and financial issues related to energy markets see [17].

#### *Optimal dispatch.*

One of the earliest applications of optimization to power systems is the optimal dispatch problem, which considers the problem of planning the operation of multiple generators in order to meet power demand. This method dates back to 1922. (See [10].) and a good classical treatment can be found in [32]. This early work was based on the *incremental rate method*, which involves solving the optimality conditions of a convex optimization problem by hand, using graphical methods. (These conditions are (1.4) in our formulation, for a problem with a single net.) For a typical, modern formulation, see [35, Ch. 3]. Variations, including minimum generation constraints and the possibility of turning off generators, are typically called the *unit commitment problem*. (See, *e.g.*, [35, Ch. 4] or the survey [27].) These additions to the problem formulation, which model the important limitations of many types of power generation, generally result in a nonconvex optimization problem.

#### *Static optimal power flow.*

The static optimal power flow problem extends the optimal dispatch problem by considering the spatial distribution of generators and loads in a network. In addition to planning operation of the generators, the system operator must also consider how power flows through this network to the loads. It was first formulated in [8]; a modern treatment can be found in [35, Ch. 8]. Good historical treatments of the development of optimization for power systems can be found in [16] and [7].

### *DC optimal power flow.*

Most formulations of optimal power flow consider AC power, which typically results in a nonconvex problem. This substantially complicates the formulation, and we do not consider it in this paper. Our formulation is similar to the so-called *DC optimal power flow*, or the *network optimal power flow* problem described in [33]. This simplified problem does not consider the physical method by which power flows through the network, and has the benefit of retaining convexity, which we exploit in our exposition. We also note that convexity raises the possibility of a distributed solution method; this idea is explored in [18]. The possibility of using a blockchain to coordinate transactions in such a distributed method is considered in [26], and a similar decentralized market structure is studied in [20].

### *AC optimal power flow.*

We do note that although the AC optimal power flow problem is not convex, substantial progress has been made in the last 10 years toward approximating the AC problem using convex optimization. These involve relaxing the (nonconvex) quadratic equality constraints associated with AC power flow, and result in second-order cone programs or semidefinite programs; see [19] and [33, Ch. 3] for details.

### *Symbolic languages for optimization.*

Object-oriented programming is ideal for software that encapsulates technical details and offers a simple interface to (even advanced) users. This has been used to develop languages for specifying optimization problems [21, 15, 11, 34, 13]. On top of these, domain-specific languages have been developed, for example for portfolio management in finance [4].

## **1.1.2 Outline**

We start with a simple network power flow model, and increase the complexity of the formulation in each subsequent section, adding additional levels of complexity. In §1.2, we begin with a basic network model, representing the distribution of devices across a network. This allows our formulation to capture spatial phenomena, and in particular, the fact that the price of power can vary at different locations on a network. (For example, power is typically cheaper close to cheap generators, and more expensive close to loads, especially if transmission is difficult or constrained.) In §1.3, we extend this

model to account for phenomena occurring over time, such as time-varying loads and availability of renewable power generation, energy storage, generator ramp rate restrictions, and deferrable loads. Here we see that the price of power varies both across the network and in time. In §1.4, we use the dynamic formulation for model predictive control, a method that replaces uncertain future quantities with forecasts. As seen in many other applications of model predictive control, the feedback inherent in such a system gives good performance even when the forecasts are not particularly accurate. Finally, in §1.5, we add an explicit uncertainty model to account for our prediction or forecast errors, leading to an improved model predictive control formulation. We also present, in Appendix 1.6, a simple method for forecasting dynamic quantities, such as power availability of renewable generators.

## 1.2 Static optimal power flow

In this section we describe our basic abstractions, which we use throughout the paper (sometimes in more sophisticated forms). Our abstractions follow [18].

In this section we work in a *static* setting, *i.e.*, we consider power flows that are constant over time, or more realistically, constant over some given time interval such as one minute, 15 minutes, or one hour. Thus any power that we refer to in this section can be converted to energy by multiplying by the given time interval.

### 1.2.1 Network model

We work with three abstractions: *devices*, *terminals*, and *nets*. We first describe the setup in words, without equations; after that, we introduce our formal notation.

#### 1.2.1.1 Devices and terminals

*Devices* produce, consume, and transfer power. Examples include generators, loads, transmission lines, and power converters. Each device has one or more *terminals*, across which power can flow (in either direction). We adopt the sign convention that positive terminal power means power flows into the device at that terminal; negative power corresponds to power flowing out of the device at that terminal. For example, we would expect a load (with a single terminal) to have positive power, whereas a generator would have negative power at its (single) terminal. As another example, a transmission

line (or other energy transport or conversion device) has two terminals; we would typically expect one of its terminal powers to be positive (*i.e.*, the terminal at which the power enters) and the other terminal power (at which the power leaves) to be negative. (The sum of these two terminal powers is the net power entering the device, which can be interpreted as the power lost or dissipated.)

We do not specify the physical transport mechanism by which power flows across terminals; it is simply a power, measured in Watts (or kW, MW, or GW). The physical transport could be a DC connection (at some specific voltage), or a single- or multi-phase AC connection (at some specific voltage). We do not model AC quantities like voltage magnitude, phase angle, or reactive power flow. In addition, power can have a different physical transport mechanism at its different terminals. For example, the two terminals (in our sense, not the electrical sense) of an AC transformer transfer power at different voltages; but we keep track only of the (real) power flow on the primary and secondary terminals.

Each device has a *cost function*, which associates a (scalar) cost with its terminal powers. This cost function can be used to model operating cost (say, of a generator), or amortized acquisition or maintenance cost. The cost can be infinite for some device terminal powers; we interpret this as indicating that the terminal powers violate a constraint or are impossible or infeasible for the device. The cost function is a quantity that we would like to be small. The negative of the cost function, called the *utility function*, is a quantity that we would like to be large.

### 1.2.1.2 Nets

*Nets* exchange power between terminals. A net consists of a set of two or more terminals (each of which is attached to a device). If a terminal is in a net, we say it is *connected*, *attached*, or *adjacent* to the net. At each net we have (perfect) power flow conservation; in other words, the sum of the attached terminal powers is zero. This means that the sum of total power flowing from the net to the device terminals exactly balances the total power flowing into the net from device terminals. A net imposes no constraints on the attached terminal powers other than conservation, *i.e.*, they sum to zero. We can think of a net as an ideal bus with no power loss or limits imposed, and without electrical details such as voltage, current, or AC phase angle.

A one-terminal net is not very interesting, since power conservation requires that the single attached terminal power is zero. The smallest interesting net is a two-terminal net. The powers of the two connected terminals sum to zero; *i.e.*, one is the negative of the other. We can think of a two-terminal net as an ideal lossless power transfer point between two terminals; the power flows from one terminal to the other.

### 1.2.1.3 Network

A *network* is formed from a collection of devices and nets by connecting each terminal of each device to one of the nets. The *total cost* associated with the network is the sum of the costs of its devices, which is a function of the device terminal powers. We say that the set of terminal powers in a network is *feasible* if the cost is finite, and if power conservation holds at each net. We say that the set of terminal powers in a network is *optimal* if it is feasible, and it minimizes the total cost among all feasible terminal power flows. This concept of optimal terminal powers is the central one in this paper.

### 1.2.1.4 Notation

We now describe our notation for the abstractions introduced above. We will use this notation (with some extensions described later) throughout this paper.

There are  $D$  devices, indexed as  $d = 1, \dots, D$ . Device  $d$  has  $M_d$  terminals, and there are  $M$  terminals in total (*i.e.*,  $\sum_{d=1}^D M_d = M$ ). We index terminals using  $m = 1, \dots, M$ . We refer to this ordering of terminals as the *global ordering*. The set of all terminal powers is represented as a vector  $p \in \mathbf{R}^M$ , with  $p_m$  the power flow on terminal  $m$  (in the global ordering). We refer to  $p$  as the *global power vector*; it describes all the power flows in the network.

The  $M_d$  terminal powers of a specific device  $d$  are denoted  $p_d \in \mathbf{R}^{M_d}$ . This involves a slight abuse of notation; we use  $p_m$  to denote the (scalar) power flow on terminal  $m$  (under the global ordering); we use  $p_d$  to denote the vector of terminal powers for the terminals of device  $d$ . We refer to the scalar  $(p_d)_i$  as the power on terminal  $i$  of device  $d$ . We refer to the ordering of terminals on a multi-terminal device as the *local ordering*. For a single-terminal device,  $p_d$  is a number (*i.e.*, in  $\mathbf{R}$ ).

Each device power vector  $p_d$  consists of a subvector or selection from the entries of the global power vector  $p$ . We can express this as  $p_d = B_d p$ , where  $B_d$  is the matrix that maps the global terminal ordering into the terminal ordering for device  $d$ . These matrices have the simple form

$$(B_d)_{ij} = \begin{cases} 1 & \text{(global) terminal } j \text{ is the } i\text{th (local) terminal of device } d \\ 0 & \text{otherwise.} \end{cases}$$

We refer to  $B_d$  as the *global-local matrix*, since it maps the global power vector into the local device terminal powers. For a single-terminal device,  $B_d$  is a row vector,  $e_k^T$ , where  $e_k$  is the  $k$ th standard unit vector, and  $k$  is the global ordering index of the terminal. The cost function for device  $d$  is given by  $f_d : \mathbf{R}^{M_d} \rightarrow \mathbf{R} \cup \{\infty\}$ . The cost for device  $d$  is

$$f_d(p_d) = f_d(B_d p).$$

The  $N$  nets are labeled  $n = 1, \dots, N$ . Net  $n$  contains  $M_n$  terminals, and we denote by  $p_n$  the vector of powers corresponding to the terminals in  $n$ , ordered under the global ordering. (Because each terminal appears in exactly one net, we have  $\sum_{n=1}^N M_n = M$ .) Here too we abuse notation:  $M_d$  is the number of terminals of device  $d$ , whereas  $M_n$  is the number of terminals in net  $n$ . The symbol  $p$  by itself always refers to the global power vector. It can have two meanings when subscripted:  $p_m$  is the (scalar) power flow on (global) terminal  $m$ ;  $p_d$  is the vector of power flows for device  $d$ . The power flow on (local) terminal  $i$  on device  $d$  is  $(p_d)_i$ .

The terminals in each net can be described by an *adjacency matrix*  $A \in \mathbf{R}^{N \times M}$ , defined as

$$A_{nm} = \begin{cases} 1 & \text{terminal } m \text{ is connected to net } n \\ 0 & \text{otherwise.} \end{cases}$$

Each column of  $A$  is a unit vector corresponding to a terminal; each row of  $A$  corresponds to a net, and consists of a row vector with entries 1 and 0 indicating which nets are adjacent to it. We will assume that every net has at least one adjacent terminal, so every unit vector appears among the columns of  $A$ , which implies it is full rank.

The number  $(Ap)_n$  is the sum of the terminal powers over terminals in net  $n$ , so the  $n$ -vector  $Ap$  gives the total or net power flow out of each net. Conservation of power at the nets can then be expressed as

$$Ap = 0, \tag{1.1}$$

which are  $n$  equalities.

The total cost of the network, denoted  $f : \mathbf{R}^M \rightarrow \mathbf{R}$ , maps the power vector  $p$  to the (scalar) cost. It is the sum of all device costs in the network:

$$f(p) = \sum_{d=1}^D f_d(p_d) = \sum_{d=1}^D f_d(B_d p). \tag{1.2}$$

A power flow vector  $p$  is called *feasible* if  $Ap = 0$  and  $f(p) < \infty$ . It is called *optimal* if it is feasible, and has smallest cost among all feasible power flows.

### 1.2.1.5 Example

As an example of our framework, consider the three-bus network shown in figure 1.1. The two generators and two loads are each represented as single-terminal devices, while the three transmission lines, which connect the three buses, are each represented as two-terminal devices, so this network has  $D = 7$  devices and  $M = 10$  terminals. The three nets, which are the connection points of these seven devices, are represented in the figure as circles. The



device terminals are represented as lines (*i.e.*, edges) connecting a device and a net. Note that our framework puts transmission lines (and other power-transfer devices) on an equal footing with other devices such as generators and loads.

In the figure we have labeled the terminal powers with the global index. For the network, we have

$$A = \begin{bmatrix} 1 & 1 & 1 & 1 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 & 1 & 0 & 1 & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 & 0 & 1 & 0 & 1 \end{bmatrix}.$$

The conservation of power condition  $Ap = 0$  can be written explicitly as

$$p_1 + p_2 + p_3 + p_4 = 0, \quad p_5 + p_7 + p_9 = 0, \quad p_6 + p_8 + p_{10} = 0$$

(for nets 1, 2, and 3, respectively). The third device is line 1, with global-local matrix

$$B_3 = \begin{bmatrix} 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 \end{bmatrix}.$$

The generators typically produce power, not consume it, so we expect the generator powers  $p_1$  and  $p_{10}$  to be negative. Similarly, we expect the load powers  $p_2$  and  $p_9$  to be positive, since loads typically consume power. If line 3 is lossless, we have  $p_7 + p_8 = 0$ ; if power is lost or dissipated in line 3,  $p_7 + p_8$  (which is power lost or dissipated) is positive.

### 1.2.1.6 Generators, loads, and transmission lines

Our framework can model a very general network, with devices that have more than two terminals, and devices that can either generate or consume power. But here we describe a common situation, in which the devices fall into three general categories: Loads are single-terminal devices that consume power, *i.e.*, have positive terminal power. Generators are single-terminal devices that generate power, *i.e.*, have negative terminal power. And finally, transmission lines and power conversion devices are two-terminal devices that transport power, possibly with dissipation, *i.e.*, the sum of their two terminal powers is nonnegative.

For such a network, power conservation allows us to make a statement about aggregate powers. Each net has total power zero, so summing over all nets we conclude that the sum of all terminal powers is zero. (This statement holds for any network.) Now we partition the terminals into those associated with generators, those associated with loads, and those associated with transmission lines. Summing the terminal powers over these three groups, we obtain the total generator power, the total load power, and the total power dissipated or lost in the transmission lines. These three powers add to zero.

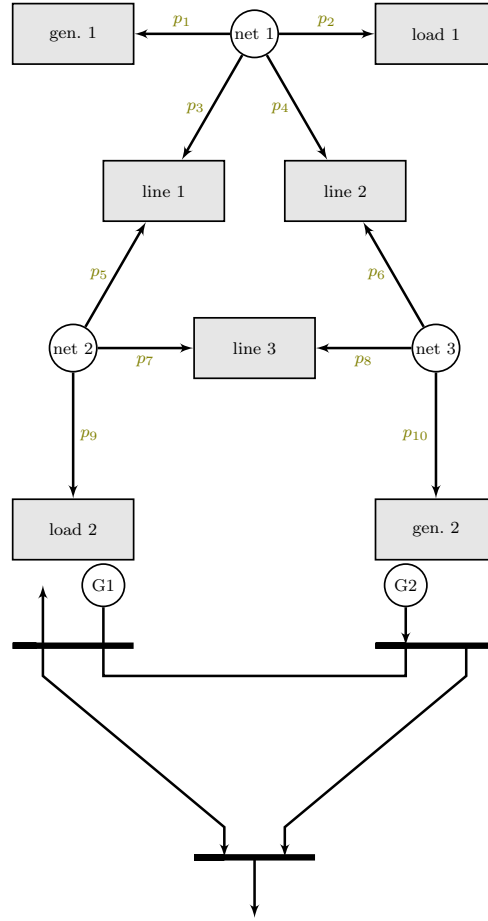


Fig. 1.1: *Left.* The three-bus example network. *Right.* Traditional schematic.

The total generator power is negative, the total load power is positive, and the total power dissipated in transmission lines is nonnegative. Thus we find that the total power generated (expressed as a positive number) exactly balances the total load, plus the total power loss in transmission lines.

### 1.2.2 Optimal power flow

The *static optimal power flow problem* consists of finding the terminal powers that minimize the total cost of the network over all feasible terminal powers:

$$\begin{aligned} & \text{minimize } f(p) \\ & \text{subject to } Ap = 0. \end{aligned} \tag{1.3}$$

The decision variable is  $p \in \mathbf{R}^M$ , the vector of all terminal powers. The problem is specified by the cost functions  $f_d$  of the  $D$  devices, the adjacency matrix  $A$ , and the global-local matrices  $B_d$ , for  $d = 1, \dots, D$ . We refer to this problem as the static OPF problem. We will let  $p^*$  denote an optimal power flow vector, and we refer to  $f(p^*)$  as the optimal cost for the power flow problem (1.3). The OPF problem is a convex optimization problem if all the device cost functions are convex [5]. Roughly speaking, this means that it can be solved exactly and efficiently, even for large networks.

#### 1.2.2.1 Optimality conditions

If all the device cost functions are convex and differentiable, a terminal power vector  $p^* \in \mathbf{R}^M$  is optimal for (1.3) if and only if there exists a Lagrange multiplier vector  $\lambda \in \mathbf{R}^N$  such that

$$\nabla f(p^*) = A^T \lambda, \quad Ap^* = 0, \tag{1.4}$$

where  $\nabla f(p^*)$  is the gradient of  $f$  at  $p^*$  [3]. The second equation is the conservation of power constraint of the OPF problem (1.3). For a given optimal flow vector  $p^*$ , there is a unique Lagrange multiplier vector  $\lambda$  satisfying (1.4). (This follows since the matrix  $A$  has full rank.) The Lagrange multiplier vector  $\lambda$  will come up again in §1.2.3, where it will be interpreted as a vector of prices.

Some of the aforementioned assumptions (convexity and differentiability of the cost function) can be relaxed. If the cost function is convex but not differentiable, the optimality conditions (1.4) can be extended in a straightforward manner by replacing the gradient with a subgradient. (In this case, the Lagrange multiplier vector may not be unique.) For a detailed discussion, see [29, §28]. If the cost function is differentiable but not convex, the conditions (1.4) are necessary, but not sufficient, for optimality; see [3, Ch. 4]. When the cost function is neither convex nor differentiable, optimality conditions similar to (1.4) can be formulated using generalized (Clarke) derivatives [9].

### 1.2.2.2 Solving the optimal power flow problem

When all the device cost functions are convex, the objective function  $f$  is convex, and the OPF problem is a convex optimization problem. It can be solved exactly (and efficiently) using standard algorithms; see [5]; all such methods also compute the Lagrange multiplier  $\lambda$  as well as an optimal power flow  $p^*$ .

If any of the device cost functions is not convex, the OPF problem is a nonconvex optimization problem. In practical terms, this means that finding (and certifying) a global solution to (1.3) is difficult in general. Local optimization methods, however, can efficiently find power flows and a Lagrange multiplier vector that satisfy the optimality conditions (1.4).

## 1.2.3 Prices and payments

In this section we describe a fundamental concept in power flow optimization, *locational marginal prices*. These prices lead to a natural scheme for payments among the devices.

### 1.2.3.1 Perturbed problem

Suppose a network has optimal power flow  $p^*$ , and we imagine extracting additional power from each net. We denote this perturbation by a vector  $\delta \in \mathbf{R}^N$ . When  $\delta_n > 0$ , we extract additional power from net  $n$ ;  $\delta_n < 0$  means we inject additional power into net  $n$ . Taking these additional power flows into account, the power conservation constraint  $Ap = 0$  becomes  $Ap + \delta = 0$ . The *perturbed optimal power flow problem* is then

$$\begin{aligned} & \text{minimize} && f(p) \\ & \text{subject to} && Ap + \delta = 0. \end{aligned}$$

Note that when  $\delta = 0$ , this reduces to the optimal power flow problem.

We define  $F : \mathbf{R}^N \rightarrow \mathbf{R} \cup \{\infty\}$ , the *perturbed optimal cost function*, as the optimal cost of the perturbed optimal power flow problem, which is a function of  $\delta$ . Roughly speaking,  $F(\delta)$  is the minimum total network cost, obtained by optimizing over all network power flows, taking into account the net power perturbation  $\delta$ . We can have  $F(\delta) = \infty$ , which means that with the perturbed power injections and extractions, there is no feasible power flow for the network. The optimal cost of the unperturbed network is  $F(0)$ .

### 1.2.3.2 Prices

The change in the optimal cost from the unperturbed network is  $F(\delta) - F(0)$ . Now suppose that  $F$  is differentiable at 0 (which it need not be; we discuss this below). We can approximate the cost change, for small perturbations, as

$$F(\delta) - F(0) \approx \nabla F(0)^T \delta = \sum_{n=1}^N \frac{\partial F}{\partial \delta_n}(0) \delta_n.$$

This shows that the approximate change in optimal cost is a sum of terms, each associated with one net and proportional to the perturbation power  $\delta_n$ . We define the *locational marginal price* (or just *price*) at net  $n$  to be

$$\frac{\partial F}{\partial \delta_n}(0).$$

The locational marginal price at net  $n$  has a simple interpretation. We imagine a network operating at an optimal power vector  $p^*$ . Then we imagine that a small amount of additional power is extracted from net  $n$ . We now re-optimize all the power flows, taking into account this additional power perturbation. The new optimal cost will (typically) rise a bit from the unperturbed value, by an amount very close to the size of our perturbation times the locational marginal price at net  $n$ .

It is a basic (and easily shown) result in optimization that, when  $f$  is convex and differentiable, and  $F$  is differentiable, we have [30, 28]

$$\lambda = \nabla F(0). \quad (1.5)$$

In other words, the Lagrange multiplier in the OPF optimality condition (1.4) is precisely the vector of locational marginal prices.

Under usual circumstances, the prices are positive, which means that when we extract additional power from a net, the optimal system cost increases; for example, at least one generator or other power provider must increase its power output to supply the additional power extracted, so its cost (typically) increases. In some pathological situations, locational marginal prices can be negative. This means that by extracting power from the net, we can *decrease* the total system cost. While this can happen in practice, we consider it to be a sign of poor network design or operation.

If  $F$  is not differentiable at 0, it is still possible to define the prices, but the treatment becomes complicated and mathematically intricate, so we do not include it here. When the OPF problem is convex, the system cost function  $F$  is convex, and the prices would be given by a subgradient of  $F$  at 0; see [29, §28]. In this case, the prices need not be unique. When the OPF problem is differentiable but not convex, the vector  $\lambda$  in the (local) optimality condition (1.4) can be interpreted as predicting the change in local optimal cost with net perturbations.

### 1.2.3.3 Payments

The locational marginal prices provide the basis for a natural payment scheme among the devices. With each terminal  $i$  (in the global ordering) we associate a payment (by its associated device) equal to its power times the associated net price. We sum these payments over the terminals in each device to obtain the payment  $P_d$  that is to be made by device  $d$ . Define  $\lambda_d$  as the vector of prices at the nets containing the terminals of device  $d$ , *i.e.*,

$$\lambda_d = B_d A^T \lambda.$$

(These prices are given in the local terminal ordering for device  $d$ .) The payment from device  $d$  is the power flow at its terminals multiplied by the corresponding locational marginal prices, *i.e.*,

$$P_d = \lambda_d^T p_d^*.$$

For a single-terminal device, this reduces to paying for the power consumed (*i.e.*,  $p_d^*$ ) at a rate given by the locational marginal price (*i.e.*,  $\lambda_d$ ). A generator would typically have  $p_d^* < 0$ , and as mentioned above, we typically have  $\lambda_d > 0$ , so the payment is negative, *i.e.*, it is income to the generator.

For a two-terminal device, the payment is the sum of the two payments associated with each of the two terminals. For a transmission line or other power transport or conversion device, we typically have one terminal power positive (where power enters the device) and one terminal power negative (where power is delivered). When the adjacent prices are positive, such a device receives payment for power delivered, and pays for the power where it enters. The payment by the device is typically smaller than the payment to the device, so it typically derives an income, which can be considered its compensation for transporting the power.

The total of all payments at net  $n$  is  $\lambda_n$  times the sum of the powers at the net. But the latter is zero, by power conservation, so the total of all payments by devices connected to a net is zero. Thus the device payments can be thought of as an exchange of money taking place at the nets; just as power is preserved at nets, so are the payments. We can think of nets as handling the transfer of power among devices, as well as the transfer of money (*i.e.*, payments), at the rate given by its locational marginal price. This idea is illustrated in figure 1.2, where the dark lines show power flow, and the dashed lines show payments, *i.e.*, money flow. Both are conserved at a net. In this example, device 1 is a generator supplying power to devices 2 and 3, which are loads. Each of the loads pays for their power at the locational marginal price; the sum of the two payments is income to the generator.

Since the sum of all payments at each net is zero, it follows that the sum of all payments by all devices in the network is zero. (This is also seen directly: the sum of all device payments is  $\lambda^T A p^*$ , and we have  $A p^* = 0$ .) This means

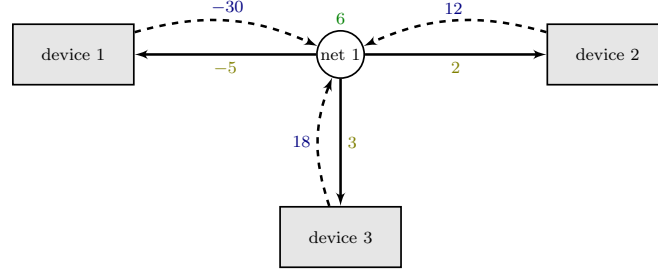


Fig. 1.2: A net with 3 terminals. The dark arrows show the power flows (with values labeled in yellow), and the dashed arrows show the three device payments (with values labeled in blue). The net price is shown in green.

that the payment scheme is an exchange of money among the devices, at the nets.

#### 1.2.3.4 Profit maximization

According to the payment scheme described above, device  $d$  pays for power at its terminals at rates given by the device price vector  $\lambda_d$ . If we interpret the device cost function  $f_d$  as a cost (in the same units as the terminal payments), the device's net revenue or profit is

$$-\lambda_d^T p_d - f_d(p_d).$$

We can think of the first term as the revenue associated with the power produced or consumed at its terminals; the second term is the cost of operating the device.

When  $f_d$  is differentiable, this profit is maximized when

$$\nabla f_d(p_d) + \lambda_d = 0. \quad (1.6)$$

This is the first equation of (1.4) (when evaluated at  $p^*$ ). We conclude that, given the locational marginal prices  $\lambda$ , the optimal power vector  $p^*$  maximizes each device's individual profit. (This assumes that device  $d$  acts as a *price taker*, *i.e.*, it maximizes its profit while disregarding the indirect impact of its terminal power flows on the marginal prices of power at neighboring nets. Violations of this assumption can result in deviations from optimality; see [23, Ch. 8] and [33, §6.3].) The same profit maximization principle can be established when  $f_d$  is convex but not differentiable. In this case any optimal device power  $p_d$  maximizes the profit  $-\lambda_d^T p_d - f_d(p_d)$ . (But in this case, this does not determine the device optimal power uniquely.)

Note that (1.6) relates the price of power at adjacent nets to the (optimal) power consumed by the device. For a single-terminal device with differentiable  $f_d$  and optimal power  $p_d^*$ , we see that the adjacent net price must be  $\lambda_d = -f'_d(p_d^*)$ . This is the *demand function* for the device. When  $f'_d$  is invertible, we obtain

$$p_d^* = (f'_d)^{-1}(-\lambda_d), \quad (1.7)$$

which can be interpreted as a prescription for how much power to consume or produce as a function of the adjacent price.

For a multi-terminal device with differentiable  $f_d$ , and optimal power  $p_d^*$ , the vector of prices  $\lambda_d$  at the adjacent nets is  $\lambda_d = -\nabla f_d(p_d^*)$ , which is the (multi-terminal) demand function for the device. When the device gradient function is invertible, its inverse maps the (negative) adjacent net prices into the power generated or supplied by the device.

$$p_d^* = (\nabla f_d)^{-1}(-\lambda_d). \quad (1.8)$$

(In the case of nondifferentiable, convex cost functions, the subgradient mapping is used here, and the demand function is set valued.)

The demand functions or their inverses (1.7) and (1.8) can be used to derive a suitable cost function for a device. For example if a single-terminal device  $d$  connected to net  $n$  uses (decreasing, invertible) demand function  $p_d = D_d(\lambda_n)$ , we have  $\lambda_n = D_d^{-1}(p_d) = -f'_d(p_d)$ , and we can take as cost function

$$f_d(p_d) = - \int_0^{p_d} D_d^{-1}(u) \, du,$$

which is convex.

The discussion above for single-terminal devices uses the language appropriate when the device represents a load, *i.e.*, has positive terminal power, and  $f_d$  is typically decreasing. While the equations still hold, the language would change when the device represents a generator, *i.e.*, has negative terminal power and is typically decreasing.

### 1.2.4 Device examples

Here we list several practical device examples. All cost functions discussed here are convex, unless otherwise noted. We also discuss device constraints; the meaning is that power flows that do not satisfy the device constraints result in infinite cost for that device.



### 1.2.4.1 Generators

A generator is a single-terminal device that produces power, *i.e.*, its terminal power  $p_d$  satisfies  $p_d \leq 0$ . We interpret  $-p_d$  as the (nonnegative) power generated. The device cost  $f_d(p_d)$  is the cost of generating power  $-p_d$ , and  $-f'_d(p_d)$  is the marginal cost of power when operating at power  $p_d$ .

A generic generator cost function has the form

$$f_d(p_d) = \begin{cases} \phi_d(-p_d) & p_{\min} \leq -p_d \leq p_{\max} \\ \infty & \text{otherwise,} \end{cases} \quad (1.9)$$

where  $p_{\min}$  and  $p_{\max}$  are the minimum and maximum possible values of generator power, and  $\phi_d(u)$  is the cost of generating power  $u$ , which is convex and typically increasing. Convexity means that the marginal cost of generating power is nondecreasing as the power generated increases. When the generation cost is increasing, it means that the generator ‘prefers’ to generate less power.

The profit maximization principle connects the net price  $\lambda_d$  to the generator power  $p_d$ . When  $-p_d^*$  lies between  $p_{\min}$  and  $p_{\max}$ , we have

$$\lambda_d = -f'_d(p_d^*) = \phi'_d(-p_d^*),$$

*i.e.*, the net price is the (nonnegative) marginal cost for the generator. When  $p_d^* = p_{\min}$ , we must have  $\lambda_d \leq \phi'_d(p_{\min})$ . When  $p_d^* = p_{\max}$ , we must have  $\lambda_d \geq \phi'_d(p_{\max})$ . Since  $\phi_d$  is convex,  $\phi'_d$  is nondecreasing, so  $\phi'_d(p_{\min})$  and  $\phi'_d(p_{\max})$  are the minimum and maximum marginal costs for the generator, respectively. Roughly speaking, the generator operates at its minimum power when the price is below the minimum marginal cost, and it operates at its maximum power when the price is above its maximum marginal cost; when the price is in between, the generator operates at a point where its marginal cost matches the net price.

*Conventional quadratic generator.*

A simple model of generator uses the generation cost function

$$\phi_d(p_d) = \alpha p_d^2 + \beta p_d + \gamma, \quad (1.10)$$

where  $\alpha$ ,  $\beta$ , and  $\gamma$  are parameters. For convexity, we require  $\alpha \geq 0$ . (We also typically have  $\beta \leq 0$ .) The value of the constant cost term  $\gamma$  has no effect on the optimal power of the generator.

*Fixed-power generator.*

A fixed-power generator produces  $p_{\text{fix}}$  units of power; this is an instance of the generic generator with  $p_{\min} = p_{\max} = p_{\text{fix}}$ . (The function  $\phi$  is only defined for  $u = p_{\text{fix}}$ , and its value has no effect on the optimal power, so we can take it to be zero.) A fixed-power generator places no constraint on the adjacent net price.

*Renewable generator.*

A renewable generator can provide any amount of power between 0 and  $p_{\text{avail}}$ , and does so at no cost, where  $p_{\text{avail}} \geq 0$  is the power available for generation. It too is an instance of the generic generator, with  $p_{\min} = 0$ ,  $p_{\max} = p_{\text{avail}}$ , and  $\phi(u) = 0$ .

The profit maximization principle tells us that if the adjacent net price is positive, we have  $p_d = p_{\text{avail}}$ ; if the adjacent net price is negative, we have  $p_d = 0$ . In other words, a renewable generator operates (under optimality) at its full available power if the net price is positive, and shuts down if it is negative. If the generator operates at a power in between 0 and  $p_{\text{avail}}$ , the adjacent price is zero.

**1.2.4.2 Loads**

A load is a single-terminal device that consumes power, *i.e.*,  $p_d \geq 0$ . We interpret  $f_d(p_d)$  as the operating cost for consuming power  $p_d$ . We can interpret  $-f_d(p_d)$  as the utility to the load of consuming power  $p_d$ . This cost is typically decreasing, *i.e.*, loads ‘prefer’ to consume more power. The marginal utility is  $-f'_d(p_d)$ . Convexity of  $f_d$ , which is the same as concavity of the utility, means that the marginal utility of a load is nonincreasing with increasing power consumed.

A generic load cost function has the form

$$f_d(p_d) = \begin{cases} \phi_d(p_d) & p_{\min} \leq p_d \leq p_{\max} \\ \infty & \text{otherwise,} \end{cases} \quad (1.11)$$

where  $p_{\min}$  and  $p_{\max}$  are the minimum and maximum possible values of load power, and  $\phi_d(u)$  is the cost of consuming power  $u$ , which is convex and typically decreasing.

The profit maximization principle connects the net price  $\lambda_d$  to the load power  $p_d$ . When  $p_d^*$  lies between  $p_{\min}$  and  $p_{\max}$ , we have

$$\lambda_d = -f'_d(p_d^*) = -\phi'_d(p_d^*),$$

*i.e.*, the net price is the (typically nonnegative) marginal utility for the load. When  $p_d^* = p_{\min}$ , we must have  $\lambda_d \geq -\phi'_d(p_{\min})$ . When  $p_d^* = p_{\max}$ , we must have  $\lambda_d \leq -\phi'_d(p_{\max})$ . Since  $\phi_d$  is convex,  $\phi'_d$  is nondecreasing, so  $-\phi'_d(p_{\min})$  and  $-\phi'_d(p_{\max})$  are the minimum and maximum marginal utilities for the load, respectively. Roughly speaking, the load operates at its minimum power when the price is above the maximum marginal utility, and it operates at its maximum power when the price is below its minimum marginal cost.

*Fixed load.*

A fixed load consumes a fixed amount  $p_{\text{fix}} > 0$  of power; *i.e.*, the device power flow  $p_d$  satisfies  $p_d = p_{\text{fix}}$ . It is an instance of the generic load with  $p_{\min} = p_{\max} = p_{\text{fix}}$ . The value of  $f_d(p_{\text{fix}})$  does not affect the power, so we can take it to be zero.

*Power dissipation device.*

A power dissipation device has no operating cost, and can consume (dissipate) any nonnegative power. This is an instance of our generic load, with  $p_{\min} = 0$ ,  $p_{\max} = \infty$ , and for  $p_d \geq 0$ ,  $f_d(p_d) = 0$ .

*Curtable load.*

A curtable load has a desired or target power consumption level  $p_{\text{des}}$ , and a minimum allowable power consumption  $p_{\min}$ . If it consumes less power than its desired value, a penalty is incurred on the shortfall, with a price  $\lambda_{\text{curt}} > 0$ . The cost is

$$f_d(p_d) = \begin{cases} \lambda_{\text{curt}}(p_{\text{des}} - p_d) & p_{\min} \leq p_d \leq p_{\text{des}} \\ \infty & \text{otherwise.} \end{cases}$$

A curtable load is also an instance of our generic load.

If the adjacent net price is less than  $\lambda_{\text{curt}}$ , we have  $p_d^* = p_{\text{des}}$ , *i.e.*, there is no shortfall. If the adjacent net price it is greater than  $\lambda_{\text{curt}}$ , the load consumes its minimum possible power  $p_{\min}$ . If the adjacent net price is  $\lambda_{\text{curt}}$ , the curtable device can consume any power between  $p_{\min}$  and  $p_{\text{des}}$ .

### 1.2.4.3 Grid ties

A grid tie is a single-terminal device representing a connection to an external power grid. When  $p_d \geq 0$ , we interpret it as power being injected into the grid. When  $p_d < 0$ , we interpret  $-p_d$  as the power extracted from the grid.

It is possible to buy power from the grid at price  $\lambda_{\text{buy}}$ , and sell power to the grid at price  $\lambda_{\text{sell}}$ . We assume arbitrage-free nonnegative prices, *i.e.*,  $\lambda_{\text{buy}} \geq \lambda_{\text{sell}} \geq 0$ . From the point of view of our system optimizer, the cost of the grid tie is the cost of power bought from (or sold to) the grid, *i.e.*,

$$f_d(p_d) = \max\{-\lambda_{\text{buy}}p_d, -\lambda_{\text{sell}}p_d\}.$$

(Recall that  $-p_d$  is power that we take from the grid connection, so we are buying power when  $-p_d > 0$ , and selling power when  $-p_d < 0$ , *i.e.*,  $p_d > 0$ .)

Any net adjacent to a grid tie with  $p_d < 0$  (*i.e.*, power flows from the grid) has price  $\lambda_{\text{buy}}$ ; when  $p_d > 0$  (*i.e.*, power flows into the grid) it has price  $\lambda_{\text{sell}}$ . When  $p_d = 0$ , the adjacent net price is not determined, but must be between the buy and sell prices.

As a variation on the basic grid tie device, we can add lower and upper limits on  $-p_d$ , representing the maximum possible power we can sell or buy,

$$-p_{\text{max,sell}} \leq -p_d \leq -p_{\text{max,buy}},$$

where  $p_{\text{max,sell}} \geq 0$  and  $p_{\text{max,buy}} \geq 0$  are the maximum power we can sell and buy, respectively.

### 1.2.4.4 Transmission lines and converters

Here we consider transmission lines, power converters, transformers, and other two-terminal devices that transfer power between their terminals. As usual, constraints on the power flows are encoded into the cost function. We denote the power flow on distinct terminals of a device with numbered subscripts, for example as  $p_1$  and  $p_2$ . (That is, the subscripts 1 and 2 are in the local device terminal ordering.) We interpret  $p_1 + p_2$  as the net power consumed or dissipated by the device, which is typically nonnegative. If  $p_1 > 0$  and  $p_2$  is negative, then power enters the device at terminal 1 and exits the device at terminal 2, and vice versa when  $p_1 < 0$  and  $p_2 > 0$ .

*Transmission lines.*

An ideal, lossless transmission line (or power converter) has a cost of zero, provided that the power conservation constraint

$$p_1 + p_2 = 0$$

is satisfied, where  $p_1$  and  $p_2$  are the power flows into the two terminals of the device. (Note that such an ideal power converter is the same as a two-terminal net.)

Additionally, we can enforce power limits

$$p_{\min} \leq p_1 \leq p_{\max}.$$

(This is the same as requiring  $-p_{\max} \leq p_2 \leq -p_{\min}$ .) The resulting cost function (with or without power limits) is convex. When  $p_{\min} = -p_{\max}$ , the transmission line or converter is *symmetric*, *i.e.*, its cost function is the same if we swap  $p_1$  and  $p_2$ . When this is not the case, the device is *directional* or *oriented*; roughly speaking, its terminals cannot be swapped.

For a lossless transmission line for which the limits are not active, *i.e.*,  $p_{\min} < p_1 < p_{\max}$ , the prices at the two adjacent nets must be the same. When the prices at the two adjacent nets are not the same, the transmission line operates at its limit, with power flowing into the device at the lower priced net, and flowing out to the higher priced net. In this case the device is paid for transporting power. For example with  $\lambda_1 < \lambda_2$ , we have  $p_1^* = p_{\max}$  and  $p_2^* = -p_{\max}$ , and the device earns revenue  $p_{\max}(\lambda_2 - \lambda_1)$ .

#### *Lossless transmission line with quadratic cost.*

We can add a cost to a lossless transmission line,  $\alpha p_1^2$ , with  $\alpha > 0$ . This (convex) cost discourages large power flows across the device, when the optimal power flow problem is solved. This objective term alone does not model quadratic losses in the transmission line, which would result in  $p_1 + p_2 > 0$ ; while it discourages power flow in the transmission line, it does not take into account the power lost in transmission. For such a transmission line, the profit maximization principle implies that power flows from the terminal with higher price to the terminal of lower price, with a flow proportional to the difference in price between the two terminals.

#### *Transmission line with quadratic loss.*

We consider a bi-directional transmission line with power loss  $\alpha((p_1 - p_2)/2)^2$  with parameter  $\alpha > 0$ , and limit  $|(p_1 - p_2)/2| \leq p_{\max}$ . (This loss model can be interpreted as an approximation for resistive loss.) This model has constraints

$$p_1 + p_2 = \alpha \left( \frac{p_1 - p_2}{2} \right)^2, \quad \left| \frac{p_1 - p_2}{2} \right| \leq p_{\max}. \quad (1.12)$$

The set of powers  $p_1$  and  $p_2$  that satisfy the above conditions is the dark line shown in figure 1.3. Note that this set (and thus the device cost function) is

not convex. The ends of the curve are at the points

$$p_1 = \alpha p_{\max}^2/2 + p_{\max}, \quad p_2 = \alpha p_{\max}^2/2 - p_{\max},$$

and

$$p_1 = \alpha p_{\max}^2/2 - p_{\max}, \quad p_2 = \alpha p_{\max}^2/2 + p_{\max}.$$

One way to retain convexity is to approximate this set with its convex hull, described by the constraints

$$\alpha p_{\max}^2 \geq p_1 + p_2 \geq \alpha \left( \frac{p_1 - p_2}{2} \right)^2.$$

With this approximation, the set of feasible powers is the shaded region in figure 1.3. Power flows that are in this region, but not on the dark line, correspond to artificially wasting power. This approximation is provably exact (*i.e.*, the power flows  $(p_1, p_2)$  lie on the dark line) if the optimal price at a neighboring net is positive. In practice, we expect this condition to hold in most cases.

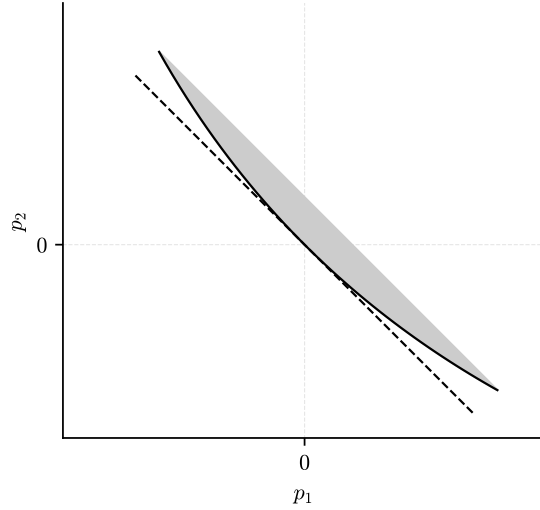


Fig. 1.3: The set of feasible power flows, and its convex relaxation, for a lossy transmission line.

*Constant-efficiency converter.*

We consider terminal 1 as the input and terminal 2 as the output of a converter (in forward mode). The forward conversion efficiency is given by  $\eta \in (0, 1)$ , and the reverse conversion efficiency is given by  $\tilde{\eta} \in (0, 1)$ . The device is characterized by

$$p_2 = \max\{-\eta p_1, -(1/\tilde{\eta})p_1\}, \quad p_{\min} \leq p_1 \leq p_{\max},$$

Here  $p_{\max} \geq 0$  is the maximum input power to the converter;  $-p_{\min} \geq 0$  is the maximum power that can be extracted from the converter. For  $p_1 \geq 0$  (forward conversion mode), the conversion loss is  $p_1 + p_2 = (1 - \eta)p_1$ , justifying the interpretation of  $\eta$  as the forward efficiency. For  $p_1 \leq 0$  (reverse conversion mode, which implies  $p_2 \geq 0$ ), the loss is  $p_1 + p_2 = (1 - \tilde{\eta})p_2$ .

This set of constraints (and therefore the cost function) is *not* convex, but we can form a convex relaxation (similar to the case of a lossy transmission line) which in this case is described by a triangular region. The approximation is exact if prices are positive at an adjacent net.

**1.2.4.5 Composite devices**

The interconnection of several devices at a single net can itself be modeled as a single composite device. We illustrate this with a composite device consisting of two single-terminal devices connected to a net with three terminals, one of which is external and forms the single terminal of the composite device. (See figure 1.4.) For this example we have composite device cost function

$$f_d(p_d) = \min_{\tilde{p}_1 + \tilde{p}_2 = p_d} f_1(\tilde{p}_1) + f_2(\tilde{p}_2). \quad (1.13)$$

(The function  $f_d$  is the *infimal convolution* of the functions  $f_1$  and  $f_2$ ; see [29, §5].) This composite device can be connected to any network, and the optimal power flows will match the optimal power flows when the device is replaced by the subnetwork consisting of the two devices and extra net. The composite cost function (1.13) is easily interpreted: Given an external power flow  $p_d$  into the composite device, it splits into the powers  $p_1$  and  $p_2$  (as the net requires) in such a way as to minimize the sum of the costs of the two internal devices. The composite device cost function (1.13) is convex if the two component device cost functions are convex.

Composite devices can be also formed from other, more complicated networks of devices, and can expose multiple external terminals. The composite device cost function in such cases is a simple generalization of the infimal convolution (1.13) for the simple case of two internal devices and one external terminal. Such composite devices preserve convexity: Any composite

device formed from devices with convex cost functions also has a convex cost function.

Composite devices can simplify modeling. For example, a wind farm, solar array, local storage, and a transmission line that connects them to a larger grid can be modeled as one device. We also note that there is no need to analytically compute the composite device function for use in a modeling system. Instead we simply introduce the sum of the internal cost functions, along with additional variables representing the internal power flows, and the constraints associated with internal nets. (This is the same technique used in the convex optimization modeling systems **CVX** [14, 15] and **CVXPY** [11] to represent compositions of convex functions.)

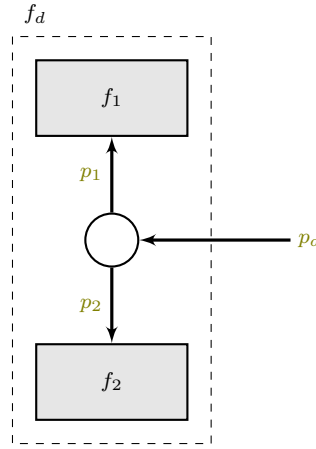


Fig. 1.4: A composite device can be formed from two or more other devices.

### 1.2.5 Network examples

#### 1.2.5.1 Two-device example

We consider the case of a generator and a load connected to a single net, as shown in figure 1.5. For this network topology, the static OPF problem (1.3) is

$$\begin{aligned} & \text{minimize} && f_{\text{gen}}(p_1) + f_{\text{load}}(p_2) \\ & \text{subject to} && p_1 + p_2 = 0. \end{aligned} \tag{1.14}$$

Assuming the cost function is differentiable at  $p^*$ , the optimality condition is






Fig. 1.5: A network with one generator and one load connected to one net.

$$f'_{\text{gen}}(p_1^*) = \lambda, \quad f'_{\text{load}}(p_2^*) = \lambda, \quad p_1^* + p_2^* = 0.$$

We interpret  $\lambda$  as the price, and  $f'_{\text{gen}}(p_1^*)$  and  $f'_{\text{load}}(p_2^*)$  as the marginal costs of the generator and load, respectively.

We can express this problem in a more natural form by eliminating  $p_1$  using  $p_2 = -p_1$ . The power  $p_2$  would typically be positive, and corresponds to the power consumed by the load, which is the same as the power produced by the generator,  $-p_1$ . The OPF problem is then to choose  $p_2$  to minimize  $f_{\text{load}}(p_2) + f_{\text{gen}}(-p_2)$ . This is illustrated in figure 1.6, which shows these two functions and their sum.

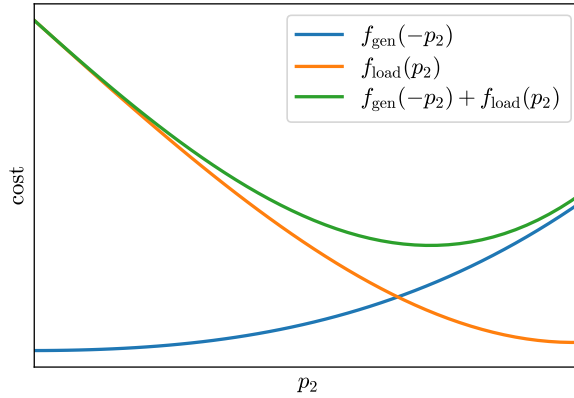


Fig. 1.6: Generator, load, and total cost functions for the example of §1.2.5.1.

The optimality condition is  $f'_{\text{load}}(p_2) = f'_{\text{gen}}(-p_2) = \lambda$ . We can interpret this as the crossing of the generator supply curve and the load demand curves. This is shown graphically in figure 1.7, with the optimal point given by the intersection of the supply and demand functions at the point  $f'_{\text{gen}}(p_2^*) = f'_{\text{load}}(-p_2^*) = \lambda$ .

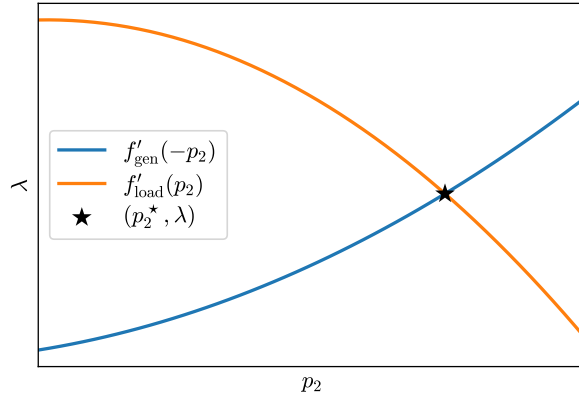


Fig. 1.7: The derivatives of the generator and load cost functions are the supply and demand curves. The intersection of these curves is the point  $(p_2^*, \lambda)$ .

### 1.2.5.2 Three-bus example

We return to the three-bus example shown in figure 1.1. The units of power are MW, with an implicit time period of one hour, and the units of payment are US dollars.

The two generators have quadratic cost functions. The first has parameters  $\alpha = 0.02$  \$/(MW)<sup>2</sup>,  $\beta = 30$  \$/(MW),  $p_{\min} = 0$ , and  $p_{\max} = 1000$  MW. The second has parameters  $\alpha = 0.2$  \$/(MW)<sup>2</sup>,  $\beta = 0$  \$/(MW),  $p_{\min} = 0$ , and  $p_{\max} = 100$  MW. Both of the loads are fixed loads; the first consumes  $p_{\text{fix}} = 50$  MW, and the second  $p_{\text{fix}} = 100$  MW. The three transmission lines are lossless, and have transmission limits  $p_{\max} = 50$  MW,  $p_{\max} = 10$  MW, and  $p_{\max} = 50$  MW, respectively.

#### *Results.*

The solution of the OPF problem is shown in figure 1.8, and the payments to each device are given in table 1.1. The yellow numbers, displayed next to the terminals, show the optimal power flows  $p^*$ . The green numbers, next to the nets, show the optimal prices  $\lambda$ . First note that the power flows into each net sum to zero, indicating that this power flow satisfies the conservation of power, *i.e.*, condition (1.1). Furthermore, all device constraints are satisfied: the transmission lines transmit power according to their capacities, each load receives its desired power, and the generators supply positive power.

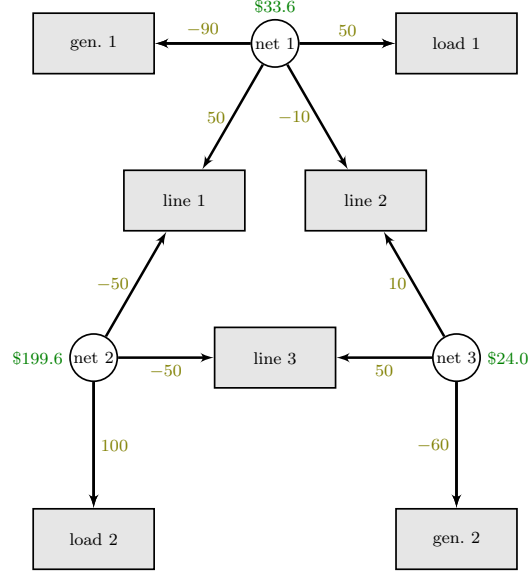


Fig. 1.8: The three-bus example, with solution; locational marginal prices in green and power flows in yellow.

We see that power is cheapest near the second generator, which is not near any load, and expensive near the second load, which is not near any generator. Also note that although generator 2 produces power more cheaply than generator 1, the capacity limits of the transmission lines limit production. This has the effect that this generator is not paid much. (See table 1.1.) Generator 1, on the other hand, is paid much more, which is justified by its advantageous proximity to load 1. In addition to the generators, the transmission lines earn payments by transporting power. For example, the third transmission line is paid a substantial amount for transporting power from net 3, where power is generated cheaply, to net 2, where there is a load, but no generation. (The payment can be calculated as the difference in price across its adjacent nets multiplied by the power flow across it.) So, we see that the two generators are paid for producing power, the two loads pay for the power they consume, and the three transmission lines are paid for transporting power. The payments balance out; they sum to zero. The `cvxpower` code for this example is given in appendix 1.7.

Device	Payment (\$)
generator 1	−3024
generator 2	−1440
load 1	1680
load 2	19960
line 1	−8300
line 2	−96
line 3	−8780

Table 1.1: The device payments for the three-bus example.

## 1.3 Dynamic optimal power flow

### 1.3.1 Dynamic network model

In this section we generalize the static power flow model of §1.2 to dynamic optimization over  $T$  time periods. Each terminal has not just one power flow (as in the static case), but instead a *power schedule*, which is a collection of  $T$  power flows, each corresponding to one of the  $T$  time periods. Each device has a single cost function, which associates a scalar cost with the power schedules of its terminals.

The nets losslessly exchange power at each time period. Power conservation holds if the powers flowing into the net from the terminal devices sum to zero for each of the  $T$  time periods. If this condition holds, and if the cost associated with the terminal powers is finite, then we say the powers are *feasible*.

#### 1.3.1.1 Notation

Much of the notation from the static case is retained. However, in the dynamic case, the power flows are now described by a matrix  $p \in \mathbf{R}^{M \times T}$ . The  $m$ th row of this matrix describes the power schedule of terminal  $m$ . The  $t$ th column describes the powers of all terminals corresponding to time period  $t$ , *i.e.*, it is a snapshot of the power flow of the system at time period  $t$ . The matrix  $p_d = B_d p \in \mathbf{R}^{M_d \times T}$  contains the power schedules of device  $d$ 's terminals. The cost function of device  $d$  is  $f_d : \mathbf{R}^{M_d \times T} \rightarrow \mathbf{R} \cup \{\infty\}$ . The system cost is again the sum of the device costs, *i.e.*,  $f(p) = \sum_{d=1}^D f_d(p_d)$ . Conservation of power is written as the matrix equation  $Ap = 0$  (*i.e.*,  $MT$  scalar equations). Note that in the case of a single time period ( $T = 1$ ) the dynamic case (and all associated notation) reduces to the static case.

### 1.3.2 Optimal power flow

The *dynamic optimal power flow problem* is

$$\begin{aligned} & \text{minimize} && f(p) \\ & \text{subject to} && Ap = 0, \end{aligned} \tag{1.15}$$

with decision variable  $p \in \mathbf{R}^{M \times T}$ , which is the vector of power flows across all terminals at all time periods. The problem is specified by the cost functions  $f_d$  of the  $D$  devices, the adjacency matrix  $A$ , and the global-local matrices  $B_d$ , for  $d = 1, \dots, D$ . Note that if  $T = 1$ , (1.15) reduces to the static OPF problem (1.3).

#### 1.3.2.1 Optimality conditions

If the cost function  $f$  is convex and differentiable, the prices are again the Lagrange multipliers of the conservation of power constraint. That is, the power flow matrix  $p^*$  and the price matrix  $\lambda \in \mathbf{R}^{N \times T}$  are optimal for (1.15) if and only if they satisfy

$$\nabla f(p^*) = A^T \lambda, \quad Ap^* = 0.$$

Note that  $\nabla f(p)$  is a  $M \times T$  matrix of partial derivatives of  $f$  with respect to the elements of  $p$ , which means that the first equation consists of  $MT$  scalar equations. As in §1.2.2.1, these optimality conditions can be modified to handle the case of a convex, nondifferentiable cost function (via subdifferentials), or a nonconvex, differentiable cost function (in which case they are necessary conditions for local optimality).

#### 1.3.2.2 Solving the dynamic optimal power flow problem

If all the device cost functions are convex, then (1.15) is a convex optimization problem, and can be solved exactly using standard algorithms, even for large networks over many time periods [5, §1.3]. Without convexity of the device cost functions, finding (and certifying) a global solution to the problem is computationally intractable in general. However, even in this case, effective heuristics (based on methods for convex optimization) can often obtain practically useful (if suboptimal) power flows, even for large problem instances.

### 1.3.3 Prices and payments

Here we explore the concept of *dynamic* locational marginal prices.

*Perturbed problem.*

As in §1.2.3, here we consider the perturbed system obtained by extracting a (small) additional amount of power into each net. Now, however, the perturbation is a matrix  $\delta \in \mathbf{R}^{N \times T}$ , *i.e.*, the perturbation varies over the terminals and time periods. The perturbed dynamic power flow problem is

$$\begin{aligned} & \text{minimize} && f(p) \\ & \text{subject to} && Ap + \delta = 0. \end{aligned}$$

The optimal value of this problem, as a function of  $\delta$ , is denoted  $F(\delta)$ .

*Prices.*

Assuming the function  $F$  is differentiable at the point  $\delta = 0$ , the price matrix  $\lambda$  is defined as

$$\lambda = \nabla F(0) \in \mathbf{R}^{N \times T}.$$

This means that if a single unit of power is extracted into net  $n$  at a time period  $t$ , then the optimal value of problem (1.15) is expected to increase by approximately  $\lambda_{nt}$ . Any element of  $\lambda$  is, then, the marginal cost of power at a given network location over a given time period. The  $n$ th row of this matrix is a vector of length  $T$ , describing a *price schedule* at that net, over the  $T$  time periods. The  $t$ th column of this matrix is a vector of length  $N$ , describing the prices in the system at all nets at time period  $t$ . The price matrix  $\lambda$  is also a Lagrange multiplier matrix: together with the optimal power matrix  $p^*$ , it satisfies the optimality conditions (1.3.2.1).

The price  $\lambda_{nt}$  is the price of power at net  $n$  in time period  $t$ . If time period  $t$  lasts for  $h$  units of time, then  $\lambda_{nt}h$  is the price of energy during that time period.

*Payments.*

Here we extend the static payment scheme of §1.2.3.3. Device  $d$  receives a total payment of

$$\sum_{t=1}^T \lambda_{d,t}^T p_{d,t}$$

over the  $T$  time periods, where  $\lambda_d$  is the matrix of price schedules at nets adjacent to device  $d$ , *i.e.*,  $\lambda_d = B_d A^T \lambda$ . Note that we sum over the payments for each time period. The sequence  $(\lambda_{d,t}^T p_{d,t})$  for  $t = 1, \dots, T$ , is a *payment schedule* or *cash flow*. In the dynamic case, the payments clear at each time period and at each net, *i.e.*, all payments made at a single net sum to zero in each time period. (This is a consequence of the fact that power is conserved at each time period, at each net.)

### 1.3.4 Profit maximization

Under the payment scheme discussed above, the profit of device  $d$  is

$$-\sum_{t=1}^T (\lambda_{d,t}^T p_{d,t}) - f_d(p_d),$$

If  $f_d$  is differentiable, this is maximized over  $p_d$  if

$$\nabla f_d(p_d) + \lambda_d = 0.$$

Over all devices, this is precisely the first optimality condition of (1.3.2.1). In other words, the optimal power flow vector also maximizes the individual device profits over the terminal power schedules of that device, provided the adjacent net prices are fixed. So, one can achieve network optimality by maximizing the profit of each device, with some caveats. (See, *e.g.*, the recent work [24].)

### 1.3.5 Dynamic device examples

Here we list several examples of dynamic devices and their cost functions. Whenever we list device constraints in the device definition, we mean that the cost function is infinite if the constraints are violated. (If we describe a device with only constraints, we mean that its cost is zero if the constraints are satisfied, and infinity otherwise.)

#### 1.3.5.1 Static devices

All static devices, such as the examples from §1.2.4, can be generalized to dynamic devices. Let  $f_{d,t}(p_{d,t})$  be the (static) cost of the device at time  $t$ . Its dynamic cost is then the sum of all single-period costs

$$f_d(p_d) = \sum_{t=1}^T f_{d,t}(p_{d,t}).$$

In this case, we say that the device cost is *separable* across time. If all device costs have this property, the dynamic OPF problem itself separates into  $T$  static OPF problems; there are no constraints or objective terms that couple the power flows in different time periods. Static but time-varying devices can be used to model, for example, time-varying availability of renewable power sources, or time-varying fixed loads.

### *Smoothing.*

Perhaps the simplest generic example of a dynamic device objective that is not separable involves a cost term or constraint on the change in a power flow from one time period to the next. We refer to these generically as *smoothness penalties*, which are typically added to other, separable, device cost functions. A smoothness penalty has the form

$$\sum_{t=0}^{T-1} \phi(p_{d,t+1} - p_{d,t}),$$

where  $\phi$  is a convex function. (The initial value  $p_{d,0}$  is a specified constant.) Possible choices for  $\phi$  are quadratic ( $\phi(x) = \|x\|_2^2 = \sum_{i=1}^{M_d} x_i^2$ ), absolute value or  $\ell_1$  ( $\phi(x) = \|x\|_1 = \sum_{i=1}^{M_d} |x_i|$ ), or an interval constraint function,

$$\phi_{\text{ramp}}(x) = \begin{cases} 0 & -r_{\text{down}} \leq x \leq r_{\text{up}} \\ \infty & \text{otherwise,} \end{cases}$$

which enforces a maximum change in terminal power from one period to the next. (These are called *ramp rate limits* for a generator.) For more details on smoothing, see [5, §6.3.2].

### 1.3.5.2 Dynamic generators

#### *Conventional generator.*

An example of extending a static model to a dynamic model is a conventional generator. (See §1.2.4.1.) The cost function is extended to

$$f_d(p_d) = \begin{cases} \sum_{t=1}^T \alpha p_{d,t}^2 + \beta p_{d,t} & p_{\min} \leq -p_{d,t} \leq p_{\max}, \quad t = 1, \dots, T \\ \infty & \text{otherwise.} \end{cases} \quad (1.16)$$



where the scalar parameters  $\alpha$ ,  $\beta$ ,  $p_{\min}$ , and  $p_{\max}$  are the same as in §1.2.4.1. (These model parameters could also vary over the  $T$  time periods.) We can also add a smoothing penalty or ramp rate limits, as discussed above.

*Fixed generator.*

Some generators cannot be controlled, *i.e.*, they produce a fixed power schedule  $p_{\text{fix}} \in \mathbf{R}^T$ . The device constraint is  $-p_d = p_{\text{fix}}$ ,  $t = 1, \dots, T$ .

*Renewable generator.*

Renewable generators can be controlled, with their maximum power output depending on the availability of sun, wind, or other power source. That is, at each time period  $t$ , a renewable generator can produce up to  $p_{\text{avail},t} \geq 0$  units of power. The device constraint is that  $-p_{d,t} \leq p_{\text{avail},t}$ .

### 1.3.5.3 Dynamic loads

*Fixed load.*

A traditional load that consumes a fixed power in each period can be described by the simple constraints

$$p_{d,t} = (p_{\text{fix}})_t, \quad t = 1, \dots, T,$$

where  $p_{\text{fix}}$  is a fixed power schedule of length  $T$ .

*Deferrable load.*

A deferrable load requires a certain amount of energy over a given time window, but is flexible about when that energy is delivered. As an example, an electric vehicle must be charged before the next scheduled use of the vehicle, but the charging schedule is flexible. If the required energy over the time interval is  $E_{\text{def}} \geq 0$ , then the deferrable load satisfies

$$\sum_{t=s}^e h p_{d,t} = E_{\text{def}},$$

where time periods  $s$  and  $e$  delimit the start and end periods of the time window in which the device can use power, and  $h$  is the time elapsed between time periods. We also require

$$0 \leq p_{d,t} \leq p_{\max}$$

for time periods  $t = s, \dots, e$ , where  $p_{\max}$  is the maximum power the device can accept. In addition, we have  $p_{d,t} = 0$  for time periods  $t = 1, \dots, s-1$  and  $t = e+1, \dots, T$ .

#### *Thermal load.*

Here we model a temperature control system, such as the HVAC (heating, ventilation, and air conditioning) system of a building, the cooling system of a server farm, or an industrial refrigerator. The system has temperature  $\theta_t$  at time period  $t$ , and heat capacity  $c$ . The system exchanges heat with its environment, which has constant temperature  $\theta_{\text{amb}}$ , and infinite heat capacity. The thermal conductivity between the system and the environment is  $\mu > 0$ .

We first consider the case of a cooling system, such as a refrigerator or air conditioner, with (cooling) coefficient of performance  $\eta$ . The power used by the system at time  $t$  is  $p_{d,t}$ . The temperature changes with time according to

$$\theta_{t+1} = \theta_t + (\mu/c)(\theta_{\text{amb}} - \theta_t) - (\eta/c)p_{d,t}.$$

The second term is the heat flow to or from the environment, and the third term is heat flow from our cooling unit.

The temperature must be kept in some fixed range

$$\theta_{\min} \leq \theta_t \leq \theta_{\max}, \quad t = 1, \dots, T.$$

The power consumption must satisfy the limits

$$0 \leq p_{d,t} \leq p_{\max}, \quad t = 1, \dots, T.$$

The above model can be used to describe a heating system when  $\eta < 0$ . In particular, for an electric heater,  $-\eta$  is the efficiency, and is between 0 and 1. For a heat pump,  $-\eta$  is the (heating) coefficient of performance, and typically exceeds 1. Other possible extensions include time-varying ambient temperature, and higher-order models of the thermal dynamics.

#### **1.3.5.4 Storage devices**

We consider single-terminal storage devices, including batteries, supercapacitors, flywheels, pneumatic storage, or pumped hydroelectric storage. We do not consider the specific details of these technologies, but instead develop a simple model that approximates their main features.

*Ideal energy storage device.*

We first model an ideal energy storage device, and then specialize to more complicated models. Let  $E_t \in \mathbf{R}_+$  be the internal energy of the device at the end of time period  $t$ . (This is an internal device variable, whose value is fully specified by the power schedule  $p_d$ ). The internal energy satisfies

$$E_{t+1} = (1 - \alpha)E_t + hp_{d,t}, \quad t = 0, \dots, T - 1,$$

where  $\alpha$  is the (per-period) *leakage* rate, with  $0 < \alpha \leq 1$ , and  $h$  is elapsed time between time periods. The energy at the beginning of the first time period is  $E_0 = E_{\text{init}}$ , where  $E_{\text{init}}$  is given. We have minimum and maximum energy constraints

$$E_{\min} \leq E_t \leq E_{\max}, \quad t = 1, \dots, T,$$

where  $E_{\min}$  and  $E_{\max}$  are the minimum and maximum energy limits. In addition, we have limits on the charge and discharge rate:

$$p_{\min} \leq p_d \leq p_{\max}.$$

We can impose constraints on the energy in a storage device, for example,  $E_T = E_{\max}$ , *i.e.*, that it be full at the last period.

The profit maximization principle allows us to relate prices in different time periods for an ideal lossless storage device (*i.e.*, with  $\alpha = 0$ ) that does not hit its upper or lower energy limit. The prices in different periods at the adjacent net must be the same. (If not, the storage device could increase its profit by charging a bit in a period when the price is low, and discharging the same energy when the price is high. This is analogous to a lossless transmission line that is not operating at its limits, which enforces equal prices at its two nets. The transmission line levels prices at two nets; the storage device levels the prices in two time periods.

*Charge/discharge cost.*

Many storage devices, such as batteries, degrade with use. A charge/discharge usage penalty can be added to avoid overusing the device (or to model amortization, or maintenance, cost). We propose, in addition to the constraints above, the cost

$$\beta \sum_{t=1}^T |p_{d,t}|, \tag{1.17}$$

where  $\beta$  is a positive constant, and we are implicitly treating the vector  $E$  as a function of the vector  $p_d$ . For a battery whose capital cost is  $C$ , and with an estimated lifetime of  $n_{\text{cyc}}$  (charge and discharge) cycles, a reasonable choice

for  $\beta$  is

$$\beta = \frac{Ch}{2n_{\text{cyc}}(E_{\text{max}} - E_{\text{min}})}.$$

#### *Conversion losses.*

In many cases, energy is lost when charging or discharging. This can be modeled by adding a lossy transmission line. (See §1.2.4.4.) between the ideal storage device and its net, as shown in figure 1.9.

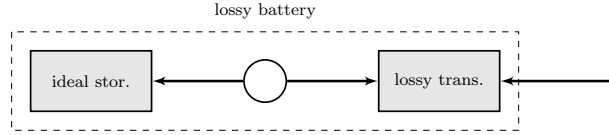


Fig. 1.9: A battery with conversion losses can be modeled as a compound device made of an ideal storage unit and a lossy transmission line.

### **1.3.6 Home energy example**

We consider a home network with four devices: a conventional generator, a fixed load, a deferrable load, and an energy storage device. They are all connected to a single net, as shown in figure 1.10. We operate them over a whole day, split into  $T = 1280$  time periods of 1 minute each.

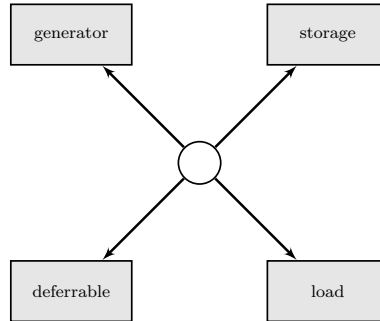


Fig. 1.10: Network topology for the home energy example.

The generator cost function is given by (1.10), with  $\alpha = 0.0003 \text{ } \$/(\text{kW})^2$ ,  $\beta = 0 \text{ } \$/\text{kW}$ ,  $p_{\min} = 0 \text{ kW}$ , and  $p_{\max} = 6 \text{ kW}$ . The (ideal) energy storage device has discharge and charge rates of  $p_{\min} = -2 \text{ kW}$ ,  $p_{\max} = 2 \text{ kW}$ , and minimum and maximum capacities  $E_{\min} = 0$  and  $E_{\max} = 5 \text{ kWh}$ , and is initially uncharged. The deferrable load has a maximum power  $p_{\max} = 5 \text{ kW}$ , and must receive  $E_{\text{def}} = 30 \text{ kWh}$  of energy between 8:00 and 20:00. The uncontrollable load has a time-varying power demand profile, which is shown, along with the problem solution, in figure 1.11.

### *Results.*

The optimal power and price schedules are shown in figure 1.11, along with the internal energy of the storage device. We see that the storage device and the deferrable load smooth out the power demand over the time horizon, and thus the total generation cost is reduced (compared with the same system without a storage device, or with another fixed load instead of the deferrable one). The storage device charges (*i.e.*, takes in energy) during the initial time periods, when power is cheap (because there is less demand), and discharges (*i.e.*, returns the energy) later, when it is more expensive.

When the deferrable load becomes active in time period 450 (*i.e.*, 8:00), there is even more flexibility in scheduling power, and the price stays constant. This is to be expected; due to the quadratic cost of the generator, the most efficient generation occurs when the generator power schedule is constant, and this can only happen if the price is constant.

The four payments by the devices are shown in table 1.2. We see that the generator is paid for producing power, the fixed load pays for the power it consumes, as does the deferrable load (which pays less than if it were a fixed load). The storage device is paid for its service, which is to transport power across time from one period to another (just as a transmission line transports power in one time period from one net to another).

Device	Payment (\$)
generator	-6.46
deferrable load	3.99
fixed load	2.83
storage	-0.36

Table 1.2: The device payments, summed over time.

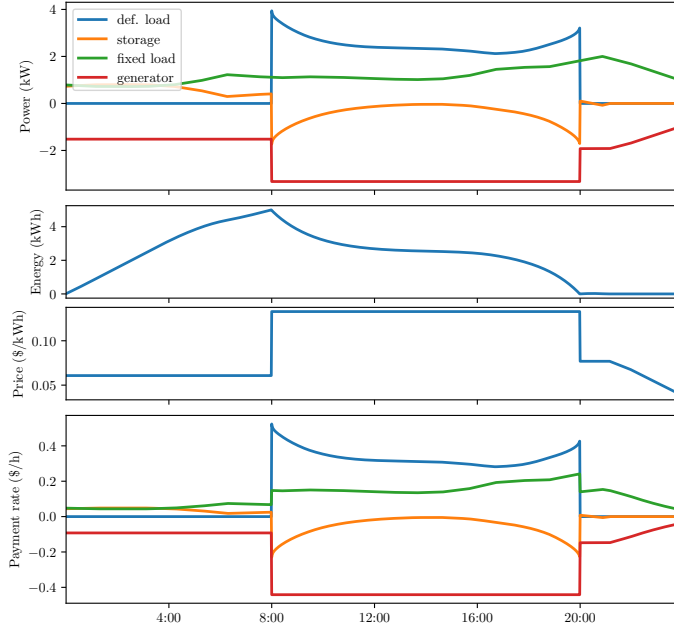


Fig. 1.11: *Top.* Power consumption of the four devices (with negative corresponding to production). *Upper middle.* Stored energy of the battery. *Lower middle.* Price at the net. *Bottom.* Device payment rate over time.

## 1.4 Model predictive control

The dynamic optimal power flow problem is useful for planning a schedule of power flows when all relevant quantities are known in advance, or can be predicted with high accuracy. In many practical cases this assumption does not hold. For example, while we can predict or forecast future loads, the forecasts will not be perfect. Renewable power availability is even harder to forecast.

### 1.4.1 Model predictive control

In this section we describe a standard method, *model predictive control* (MPC), also known as *receding horizon control* (RHC), that can be used to develop a real-time strategy or policy that chooses a good power flow in each time period, and tolerates forecast errors. MPC leverages our ability to solve a dynamic power flow problem over a horizon. MPC has been used successfully in a very wide range of applications, including for the management of energy devices [22].

MPC is a feedback control technique that naturally incorporates optimization ([2, 25]). The simplest version is *certainty-equivalent* MPC with finite horizon length  $T$ , which is described below. In each time period  $t$ , we consider a horizon that extends some fixed number of periods into the future,  $t, t+1, \dots, t+T-1$ . The number  $T$  is referred to as the *horizon* or *planning horizon* of the MPC policy. The device cost functions depend on various future quantities; while we know these quantities in the current period  $t$ , we do not know them for future periods  $t+1, t+2, \dots, t+T-1$ . We replace these unknown quantities with predictions or forecasts, and solve the associated dynamic power flow problem to produce a (tentative) *power flow plan*, that extends from the current time period  $t$  to the end of our horizon,  $t+T-1$ . In certainty-equivalent MPC, the power flow plan is based on the forecasts of future quantities. We then execute the first power flow in the plan, *i.e.*, the power flows corresponding to time period  $t$  in our plan. At the next time step, we repeat this process, incorporating any new information into our forecasts.

To use MPC, we repeat the following three steps at each time step  $t$ :

1. *Forecast.* Make forecasts of unknown quantities to form an estimate of the device cost functions for time periods  $t+1, t+2, \dots, t+T-1$ .
2. *Optimize.* Solve the dynamic optimal power flow problem (1.15) to obtain a power flow plan for time periods  $t, t+1, \dots, t+T-1$ .
3. *Execute.* Implement the first power flow in this plan, corresponding to time period  $t$ .

We then repeat this procedure, incorporating new information, at time  $t+1$ . Note that these steps can be followed indefinitely; the MPC method is always looking ahead, or planning, over a horizon that extends  $T$  steps into the future. This allows MPC to be used to control power networks that run continuously. We now describe these three steps in more detail.

#### *Forecast.*

At time period  $t$ , we predict any unknown quantities relevant to system operation, such as uncertain demand or the availability of renewable generators, allowing us to form an approximate model of the system over the next  $T$  time periods. These predictions can be crude, for example as simple as a

constant value such as the historical mean or median value of the quantity. The forecasts can also be sophisticated predictions based on previous values, historical data, and even other, related quantities such as weather, economic predictions, or futures prices (which are themselves market-based forecasts). Appendix §1.6 describes a method for creating basic forecasts, that are often adequate for MPC for dynamic energy management.

From predictions of these unknown quantities, predictions of the device cost functions are formed for time periods  $t + 1, \dots, t + T - 1$ . At time  $t$ , we denote the predicted cost function for device  $d$  as  $\hat{f}_{d|t}$ . The cost function for the entire system is the sum of these cost functions, which we denote  $\hat{f}_{|t}$ . (The hat above  $f$  is a traditional marker, signifying that the quantity is an estimate.)

### *Optimize.*

We would like to plan out the power flows for the system for time periods  $t$  to  $t + T - 1$ . We denote by  $p_{|t}$  the matrix of power flows for all of the  $D$  devices, and for all of the  $T$  time periods, from  $t$  to  $t + T - 1$ . We denote by  $p_{\tau|t}$  the planned power flows for time period  $\tau$ .

To determine the planned power flows  $p_{|t}$ , we solve the dynamic optimal power flow problem (1.15). Using the notation of this section, this problem is

$$\begin{aligned} & \text{minimize} && \hat{f}_{|t}(p_{|t}) \\ & \text{subject to} && Ap_{|t} = 0. \end{aligned} \tag{1.18}$$

The variable is the planned power flow matrix  $p_{|t} \in \mathbf{R}^{M \times T}$ . The first column contains the power flows for the current period; the second through last columns contain the planned power flows, based on information available at period  $t$ .

The optimization problem (1.18) is sometimes augmented with *terminal constraints* or *terminal costs*, especially for storage devices. A terminal constraint for a storage device specifies its energy level at the end of the horizon; typical constraints are that it should be half full, or equal to the current value. (The latter constraint means that over the horizon, the net total power of the storage device is zero.) Without a terminal constraint, the solution of (1.18) will have zero energy stored at the end of the horizon (except in pathological cases), since any stored energy could have been used to reduce some generator power, and thereby reduce the cost. A terminal cost is similar to a terminal constraint, except that it assesses a charge based on the terminal energy value.



*Execute.*

Here, the first step of the planned power flow schedule is executed, *i.e.*, we implement  $p_{t|t}$ . (This could be as part of a larger simulation, or this could be directly on the physical system.) Note that the planned power flows  $p_{t|t+1}, \dots, p_{t+T-1|t}$  are not directly implemented. They are included for planning purposes only; their purpose is only to improve the choice of power flows in the first step.

### 1.4.2 Prices and payments

Because the dynamic OPF problem (1.15) is the same as problem (1.18), the optimality conditions of §1.3.2.1 and the perturbation analysis of §1.3.3 also apply to (1.18), which allows us to extend the concept of prices to MPC. In particular, we denote the prices corresponding to a solution of (1.18) as  $\lambda_{|t} \in \mathbf{R}^{M \times T}$ . This matrix can be interpreted as the predicted prices for time periods  $t+1, \dots, t+T-1$ , with the prediction made at time  $t$ . (The first column contains the true prices at time  $t$ .)

*Payments.*

We can extend the payment scheme developed in §1.3.3 to MPC. To do this, note that the payment scheme in §1.3.3 involves each device making a sequence of payments over the  $T$  time periods. In the case of MPC, only the first payment in this payment schedule should be carried out; the others are interpreted as planned payments. Just as the planned power flows  $p_{\tau|t}$  for  $\tau = t+1, \dots, t+T-1$  are never implemented, but instead provide a prediction of future power flows, the planned payments are never made, but only provide a prediction of future payments.

*Profit maximization.*

In §1.3.4, we saw that given the predicted cost functions and prices, the optimal power flows maximize the profits of each device independently. (We recall that we obtain the prediction of prices over the planning horizon as part of the solution of the OPF problem.) Because the dynamic OPF problem is solved in each step of MPC, this interpretation extends to our case. More specifically, given all information available at time  $t$ , and a prediction of the prices  $\lambda_{|t}$ , the planned power flows  $p_{|t}$  maximize the profits of each device independently. In other words, if the managers (or owners) of each device

agree on the predictions, they should also agree that the planned power flows are fair.

We can take this interpretation a step further. Suppose that at time  $t$ , device  $d$  predicts its own cost function as  $f_{d|t}$ , and thus predicts the future prices to be  $\lambda_{|t}$  (via the solution of the global OPF problem). If the MPC of §1.4.1 is carried out, each device can be interpreted as carrying out MPC to plan out its own terminal power flows to maximize its profit, using the predicted prices  $\lambda_{|t}$  during time period  $t$ .

### 1.4.3 Wind farm example

We consider a network consisting of a wind generator, a gas generator, and a storage device, and a fixed load, all connected to one net. The goal is to deliver a steady output of around 8 MW to the fixed load, which is the average of the available wind power over the month. We consider the operation of this system for one month, with each time period representing 15 minutes.

The gas generator has the cost function given in §1.3.5.2, with parameters  $\alpha = 0.1 \text{ \$/ (MW)}^2$  and  $\beta = 20 \text{ \$/MW}$ . The storage device has maximum charge and discharge rate of 5 MW, and a maximum capacity of 50 MWh. The wind generator is modeled as a renewable device, as defined in §1.3.5.2, *i.e.*, in each time period, the power generated can be any nonnegative amount up to the available wind power  $p_{\text{wind},t}$ . We show  $p_{\text{wind},t}$  as a function of the time period  $t$  in figure 1.12, along with the desired output power. The wind power availability data is provided by NREL (National Renewable Energy Laboratory), for a site in West Texas. We solve the problem with two different methods, detailed below, and compare the results. (Later, in §1.5.6, we will introduce a third method.)

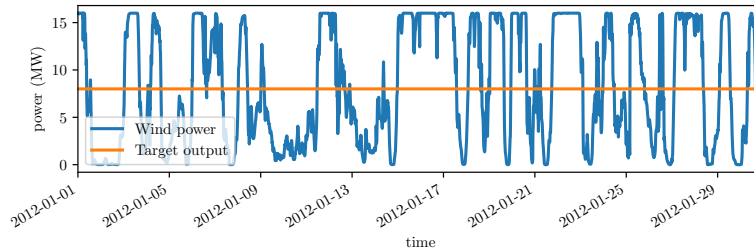


Fig. 1.12: Available wind power for January 2012.

*Whole-month dynamic OPF solution.*

We first solve the problem as a dynamic OPF problem. This requires solving a single problem that takes into account the entire month, and also requires full knowledge of the available wind power. This means our optimization scheme is *prescient*, *i.e.*, knows the future. In practice this is not possible, but the performance in this prescient case is a good benchmark to compare against, since no control scheme could ever attain a lower cost.

*MPC.*

We then consider the practical case in which the system planner does *not* know the available wind power in advance. To forecast the available wind power, we use the auto-regressive model developed in §1.6.6, trained on data from the preceding year. By comparing the performance of MPC with the dynamic OPF simulation given above, we get an idea of the value of (perfect) information, which corresponds to the amount of additional cost incurred due to our imperfect prediction of available wind power.

*Results.*

The power flows obtained by solving the problem using dynamic OPF and MPC are shown in figure 1.13. The values of the cost function obtained using dynamic OPF and MPC were \$3269 and \$3869, respectively. This difference reflects the cost of uncertainty, *i.e.*, the difference gives us an idea of the value of having perfect predictions. In this example the difference is not negligible, and suggests that investing in better wind power forecasting could yield greater efficiency.

In figure 1.13, we also show the prices (in time), as well as the payments made by each device. Note that the price is “set” by the power production of the gas generator. (This is because the price is given by the derivative of the cost functions of adjacent devices.) This means that when the gas generator produces power, the price is positive; otherwise, it is zero. Also note that when the price is zero, no payments are made.

In table 1.3, we show the total payment of each device, using dynamic OPF and MPC. We see that under the dynamic OPF method, the storage device is paid more than under MPC. This is because storage is more useful precisely when forecasting is accurate. (For example, with no knowledge of future wind power availability, the storage device would not be useful.) Similarly, the gas generator is paid more under MPC. This makes sense; a dispatchable generator is more valuable if there is more uncertainty about future renewable power availability.

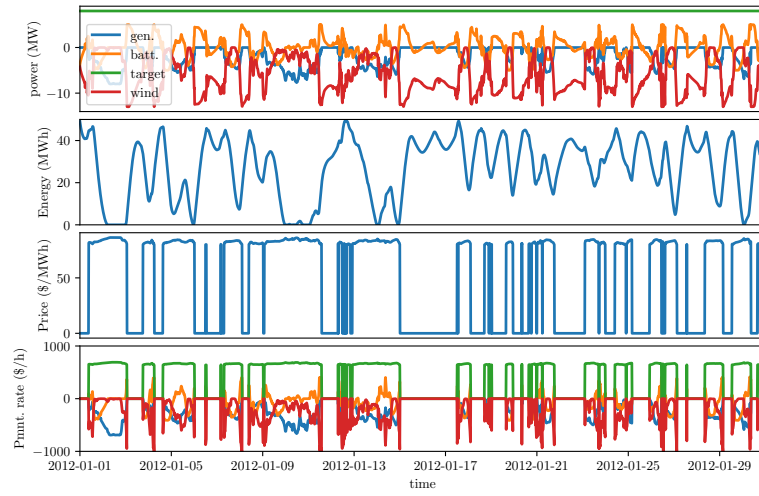
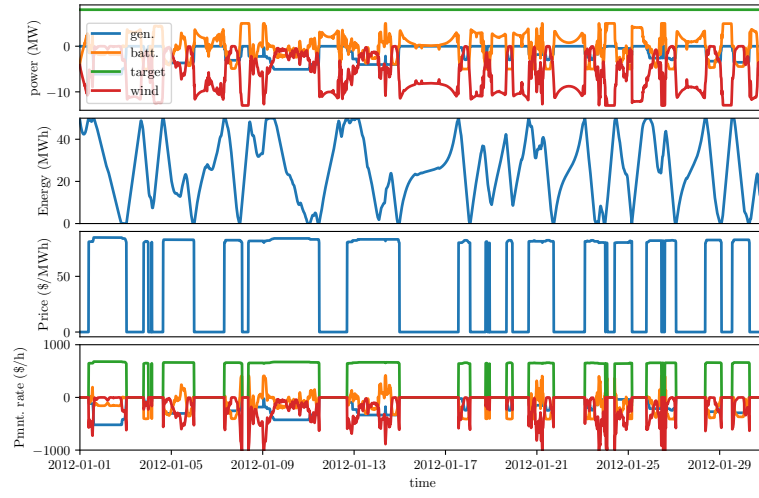


Fig. 1.13: *Top.* The full-month dynamic OPF solution. *Bottom.* The MPC simulation.

Device	Dynamic OPF	MPC
wind generator	−98.4	−115.3
storage	−54.0	−36.0
load	255.6	273.6
gas generator	−103.0	−122.3

Table 1.3: The total device payments over the entire month, in thousands of dollars.

## 1.5 Optimal power flow under uncertainty

In this section, we first extend the dynamic model of §1.3 to handle uncertainty. We do this by considering multiple plausible predictions of uncertain values, and extending our optimization problem to handle multiple predictions or forecasts. We will see that prices extend naturally to the uncertain case. We then discuss how to use the uncertain optimal power flow problem in the model predictive control framework of §1.4.

### 1.5.1 Uncertainty model

*Scenarios.*

Our uncertainty model considers  $S$  discrete *scenarios*. Each scenario models a distinct contingency, *i.e.*, a different possible outcome for the uncertain parameters in the network over the  $T$  time periods. The different scenarios can differ in the values at different time periods of fixed loads, availability of renewable generators, and even the capacities of transmission lines or storage devices. (For example, a failed transmission line has zero power flow.)

*Scenario probabilities.*

We assign a probability of realization to each scenario,  $\pi^{(s)}$  for  $s = 1, \dots, S$ . For example, we might model a *nominal* scenario with high probability, and a variety of *fault* scenarios, in which critical components break down, each with low probability. The numbers  $\pi^{(s)}$  form a probability distribution over the scenarios, *i.e.*,  $\pi^{(s)} \geq 0$  and  $\sum_{s=1}^S \pi^{(s)} = 1$ .

### *Scenario power flows.*

We model a different network power flow for each scenario. The power flows for all terminals, time periods, and scenarios form a (three-dimensional) array  $p \in \mathbf{R}^{M \times T \times S}$ . For each scenario  $s$  there is a power flow matrix  $p^{(s)} \in \mathbf{R}^{M \times T}$ , which specifies the power flows on each of the  $M$  terminals at each of the  $T$  time periods, under scenario  $s$ . From the point of view of the system planner, these constitute a *power flow policy*, *i.e.*, a complete contingency plan consisting of a power schedule for each terminal, under every possible scenario.

We refer to the vector of powers for a device as  $p_d \in \mathbf{R}^{M_d \times T \times S}$ , where  $M_d$  is the number of terminals for device  $d$ . This array can be viewed as a power flow policy specific to device  $d$ . We denote by  $p_d^{(s)} \in \mathbf{R}^{M_d \times T}$  the submatrix of terminal power flows incident on device  $d$  under scenario  $s$ .

As before, for each time period, and under each scenario, the power flows incident on each net sum to zero:

$$Ap^{(s)} = 0, \quad s = 1, \dots, S.$$

In the case of a single scenario ( $S = 1$ )  $p$  is a  $M \times T$  matrix, which corresponds to the power flow matrix of §1.3.

### *Scenario device cost functions.*

The device cost functions may be different under each scenario. More specifically, under scenario  $s$ , device  $d$  has cost  $f_d^{(s)}$ , such that  $f_d^{(s)} : \mathbf{R}^{M_d \times T} \rightarrow \mathbf{R} \cup \{\infty\}$ . Note that the network topology, including the number of terminals for each device, does not depend on the scenario. We define the cost function of device  $d$  as its expected cost over all scenarios

$$f_d(p_d) = \sum_{s=1}^S \pi^{(s)} f_d^{(s)}(p_d^{(s)}).$$

In the case of a single scenario, this definition of device cost coincides with the definition given in §1.3. The expected total system cost is the sum of the expected device costs

$$f(p) = \sum_{d=1}^D f_d(p_d).$$

### 1.5.2 Dynamic optimal power flow under uncertainty

So far the different scenarios are not coupled, except possibly by having common starting values for smoothness constraints. To minimize  $f$  subject to the power conservation constraint, we solve the  $S$  dynamic OPF problems associated with each of the scenarios.

We are now going to couple the power flows for different scenarios with an *information pattern constraint*, which states that in time period  $t = 1$ , the power flows for all  $S$  scenarios must agree, *i.e.*,  $p_1^{(1)} = \dots = p_1^{(S)}$ . The *uncertain dynamic optimal power flow problem* is

$$\begin{aligned} & \text{minimize} && f(p) \\ & \text{subject to} && Ap^{(s)} = 0, \quad s = 1, \dots, S \\ & && p_1^{(1)} = \dots = p_1^{(S)}, \end{aligned} \quad (1.19)$$

where the variables are the scenario power flows  $p^{(s)} \in \mathbf{R}^{M \times T}$ , for  $s = 1, \dots, S$ . We can describe this problem as follows. We create a full power flow plan for each scenario, with the constraint that the first period power flow must be the same in each of the scenarios.

In terms of stochastic control, or optimization with recourse, the information pattern constraint corresponds to a very simple *information pattern*, which is a description of what we know before we decide on our action. We have  $S$  scenarios, one of which will occur; we must make the first choice, *i.e.*, decide the current power flows *before* we know which of the  $S$  scenarios will actually occur. At period  $t = 2$ , the scenario that obtains is revealed to us. Of course we do not believe this model, since the scenarios are just a (very small) sampling of what might actually occur, and the future is not in fact revealed to us in entirety at period 2. This is simply a heuristic for making good choices of the current period power flows that takes into account the fact that the future is uncertain.

### 1.5.3 Prices and payments

We now discuss locational marginal prices under our uncertainty model. Suppose we inject extra power into each net, at each point in time, for each scenario. We describe these injections by scenario-specific matrices  $(\delta^{(1)}, \dots, \delta^{(S)}) \in \mathbf{R}^{N \times T \times S}$ . Power conservation, for each scenario, requires

$$Ap^{(s)} + \delta^{(s)} = 0, \quad s = 1, \dots, S, \quad (1.20)$$

*i.e.*, the extra power injected into each net, summed with all power outflows along the incident terminals, is zero. If we solve problem (1.19), with the power conservation constraints replaced by the perturbed equations (1.20),

the optimal cost will change to reflect the amount of power injected into each net; we define  $F(\delta^{(1)}, \dots, \delta^{(S)})$  as the optimal value of the perturbed problem, when the power injected under each scenario are  $(\delta^{(1)}, \dots, \delta^{(S)})$ . Note that  $F(0)$  is the optimal value of the original, unperturbed problem.

Then, the price matrices  $(\lambda^{(1)}, \dots, \lambda^{(S)}) \in \mathbf{R}^{N \times T \times S}$ , for each scenario, satisfy

$$(\pi^{(i)} \lambda^{(1)}, \dots, \pi^{(S)} \lambda^{(S)}) = \nabla F(0). \quad (1.21)$$

This means that the prices are given by the gradient  $F$ , scaled up by the reciprocals of the scenario probabilities. These matrices represent the predicted price of power at each net, each point in time, under each scenario.

It can be shown that the prices respect a constraint similar to the information pattern constraint discussed above, *i.e.*, the prices can be chosen to coincide for the first time period, across all scenarios, *i.e.*,

$$\lambda_1^{(1)} = \dots = \lambda_1^{(S)},$$

where  $\lambda_1^{(s)}$  is the vector of prices during the first time period, under scenario  $s$ . This property is important for the payment scheme.

#### *Payments.*

We can extend our payment scheme from the dynamic case to the uncertain case. Each device's expected payment is

$$\sum_{s=1}^S \pi^{(s)} \lambda_d^{(s)T} p_d^{(s)},$$

where the expectation is taken over the various scenarios, with the predicted price trajectories.

Note that if we operate in the model predictive control framework of §1.4, only the first step payment is actually carried out. In the next-step information pattern the first period prices coincide under each scenario, so the payment does not depend on the scenarios.

#### *Profit maximization.*

Given optimal power flows and prices, the scenario power flows maximize the expected profit for any device  $d$

$$\sum_{s=1}^S \pi^{(s)} \left( \lambda^{(s)T} p_d^{(s)} - f_d^{(s)}(p_d^{(s)}) \right),$$



subject to an appropriate information pattern constraint. This can be interpreted as follows. Each device maximizes its own expected profit, using the same uncertainty model (*i.e.*, the scenario costs and probabilities) as the system planner. Note that each device maximizes its expected profit, without caring about its variance, as is customary in model predictive control. In the language of economics, each device is assumed to be risk-neutral. (One could include risk aversion in the cost function of problem (1.19), using a concave utility function; see, *e.g.*, [23, §11.5].)

#### 1.5.4 Robust model predictive control

Here we introduce an extension of the MPC framework presented in §1.4 to handle prediction uncertainty. During the predict stage, we allow for multiple forecasts of uncertain values. We then plan the power flows by solving (1.19), with each scenario corresponding to a forecast. We repeat the following three steps at each time step  $t$ .

1. *Predict.* We make  $S$  plausible forecasts of unknown future quantities. Each forecast is a scenario, to which we assign a probability of occurrence. For each forecast, we form appropriate device cost functions.
2. *Optimize.* We plan the power flows for each scenario by solving problem (1.19), so the first planned power flows coincide under all scenarios.
3. *Execute.* We execute the first power flow in this plan, *i.e.*, the one corresponding to time period  $t$  (which coincide under all scenarios).

We then repeat this procedure, incorporating new information, at time  $t + 1$ . We now describe these three steps in more detail.

##### *Predict.*

At time period  $t$ , we make  $S$  forecasts of all unknown quantities relevant to system operation. Typically, these forecasts are generated using a stochastic model of future variables. (For example, we can use a statistical model to generate several realistic generation profiles for a solar generator, over the course of one day.) We discuss some ideas for modeling in appendix 1.6.

Each forecast corresponds to a scenario; for each forecast, we form a scenario device cost function. Under scenario  $s$ , we denote the cost function for device  $d$  as  $\hat{f}_{d|t}^{(s)}$ . The cost function for the entire system is denoted  $\hat{f}_t^{(s)}$ .

*Optimize.*

We plan the system power flows for time periods  $t$  to  $t + T - 1$ , under each scenario, by solving the dynamic optimal power flow problem with uncertainty (1.19). Denoting by  $p_{|t}^{(s)}$  the matrix of power flows under scenario  $s$  for each of the  $T$  future time periods  $t + 1, \dots, t + T$ , we solve

$$\begin{aligned} & \text{minimize} && \hat{f}(p_{|t}) \\ & \text{subject to} && Ap_{|t}^{(s)} = 0 \quad s = 1, \dots, S \\ & && p_{t+1|t}^{(s)} = p_t^{\text{nom}} \quad s = 1, \dots, S, \end{aligned} \tag{1.22}$$

where the variables are the planned power flow matrices  $p_{|t}^{(s)} \in \mathbf{R}^{M \times T}$ , for each scenario  $s$ , and the common first power flow,  $p_t^{\text{nom}}$ .

*Execute.*

The first step of the planned power flow schedule is executed, *i.e.*, we implement  $p_t^{\text{nom}}$ . Note that the planned power flows  $p_{t+1|t}^{(s)} \dots p_{t+T-1|t}^{(s)}$  are never directly implemented. They are included for planning purposes, under the assumption that planning out  $T$  steps, and under  $S$  scenarios, increases the quality of the first step in that plan.

*Prices, payments, and profit maximization.*

As noted in §1.5.3, the prices can be chosen such that all prices for the first period coincide. In the notation of MPC, we call these prices  $\lambda_{|t}$ . These prices can be made the basis for a payment scheme. At time period  $t$ , device  $d$  is paid

$$\lambda_{d|t}^T p_{d|t},$$

where  $\lambda_{d|t}$  is the vector of prices corresponding to all nets adjacent to device  $d$ . As in the static and dynamic case, this payment scheme has the property that the sum of all payments made is zero, *i.e.*, the payment scheme is revenue neutral.

In addition, the argument about profit maximization under (standard) MPC in §1.4.2 extends to the robust MPC setting. If we assume that the managers of the devices agree on the cost functions and probabilities of the different scenarios, then they should agree that the planned power flows are fair, and each device  $d$  maximizes its own expected profit (disregarding risk) by implementing the optimal power  $p_{d|t}^{\text{nom}}$ .

### 1.5.5 Uncertain device examples

#### *Deterministic device.*

Any (deterministic) dynamic device can be extended to an uncertain device. Such a device has an identical cost function under each scenario.

#### *Renewable generator.*

Many renewable generators, such as solar and wind generators, have uncertain energy production. In this case, the generator produces a potentially different amount of power under each scenario. If the generator produces power  $P_t^{(s)}$  at time  $t$  under scenario  $s$ , then the generator power  $p_{d,t}^{(s)}$  at time  $t$  under scenario  $s$  is

$$0 \leq p_{d,t}^{(s)} \leq P_t^{(s)}, \quad t = 1, \dots, T.$$

#### *Uncertain load.*

Loads can have an uncertain consumption pattern. We assume an uncertain load consumes  $P_t^{(s)}$  at time  $t$  under scenario  $s$ . This means that the power flows satisfy

$$p_{d,t}^{(s)} = P_t^{(s)}, \quad t = 1, \dots, T, \quad s = 1, \dots, S.$$

#### *Unreliable transmission line.*

Recall the definition of transmission line from §1.2. Under all scenarios for which the transmission line works, the device cost function is as described in §1.2.4.4. For scenarios in which the transmission line fails, the two terminal power flows must both be zero, *i.e.*, we have  $p_d^{(s)} = 0$ .

### 1.5.6 Wind farm example

We extend the example of §1.4.3 with uncertain predictions of the wind power available. The network consists of a wind generator, a gas generator, and a storage device, all connected to one net. We consider the operation of this system for one month, with each time period representing 15 minutes. The uncertain MPC example of §1.4.3 uses a single prediction of the future wind power available, obtained with the AR model described in §1.6.6. To apply

robust MPC, we require multiple forecasts of the unknown quantity. We use the framework of §1.6 to obtain  $K = 20$  such forecasts.

### *Results.*

The power flows obtained using robust MPC, with  $K = 20$  scenarios, each with a different prediction of the uncertain wind power available (and all other parameters equal), are shown in figure 1.14. The value of the cost function is \$3291. This is not much higher than \$3269, the cost obtained using DOPF. This illustrates a key point: Even though our predictions of the wind power are fairly inaccurate, the performance of the resulting control scheme is similar to one that uses perfect predictions.

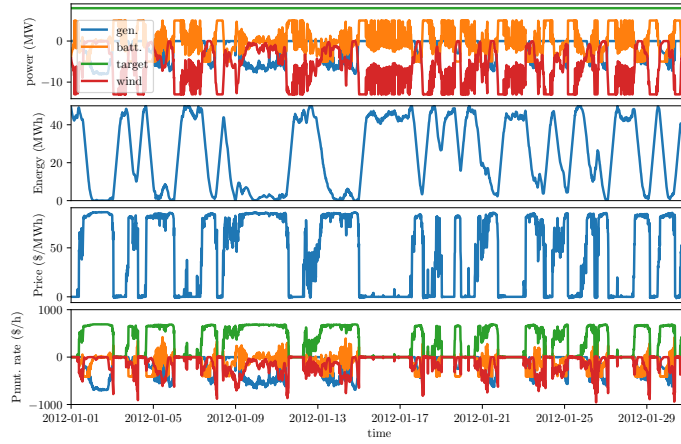


Fig. 1.14: The robust MPC simulation.

In table 1.4, we show the total payment of each device, under the robust MPC formulation, as well as the MPC formulation discussed in §1.4.3. The pattern here is similar to table 1.3; the storage becomes more useful, and is therefore paid more, when the forecasts are accurate, and the gas generator is paid less.

Device	MPC	Robust MPC
wind generator	−115.3	−98.1
storage	−36.0	−48.9
load	273.6	251.6
gas generator	−122.3	−104.5

Table 1.4: The total device payments over the entire month, in thousands of dollars.

## Acknowledgments

This research was partly supported by MISO energy; we especially thank Alan Hoyt and DeWayne Johnsonbaugh of MISO for many useful discussions.

## References

1. R. Baldick. *Applied Optimization: Formulation and Algorithms for Engineering Systems*. Cambridge University Press, 2006.
2. A. Bemporad. Model predictive control design: New trends and tools. In *45th IEEE Conference on Decision and Control*, pages 6678–6683. IEEE, 2006.
3. D. Bertsekas. *Nonlinear Programming*. Athena Scientific, 3rd edition, 2016.
4. S. Boyd, E. Busseti, S. Diamond, R. Kahn, K. Koh, P. Nystrup, and J. Speth. Multi-period trading via convex optimization. *Foundations and Trends in Optimization*, 3(1):1–76, August 2017.
5. S. Boyd and L. Vandenberghe. *Convex Optimization*. Cambridge University Press, 2004.
6. S. Boyd and L. Vandenberghe. *Introduction to Applied Linear Algebra – Vectors, Matrices, and Least Squares*. Cambridge University Press, 2018.
7. M. Cain, R. O’Neill, and A. Castillo. History of optimal power flow and formulations. *Federal Energy Regulatory Commission*, pages 1–36, 2012.
8. J. Carpentier. Contribution à l’étude du dispatching économique. *Bulletin de la Société Française des Electriciens*, 3:431–447, 1962.
9. F. Clarke. Generalized gradients and applications. *Transactions of the American Mathematical Society*, 205:247–262, 1975.
10. G. Davison. Dividing load between units. *Electrical World*, 80(26):1385–1387, 1922.
11. S. Diamond and S. Boyd. CVXPY: A Python-embedded modeling language for convex optimization. *Journal of Machine Learning Research*, 17(83):1–5, 2016.
12. J. Friedman, T. Hastie, and R. Tibshirani. *The Elements of Statistical Learning*. Springer, 2nd edition, 2008.
13. A. Fu, B. Narasimhan, and S. Boyd. CVXR: An R package for disciplined convex optimization. [https://web.stanford.edu/~boyd/papers/cvxr\\_paper.html](https://web.stanford.edu/~boyd/papers/cvxr_paper.html), 2017.
14. M. Grant and S. Boyd. Graph implementations for nonsmooth convex programs. In V. Blondel, S. Boyd, and H. Kimura, editors, *Recent Advances in Learning and Control*, Lecture Notes in Control and Information Sciences, pages 95–110. Springer-Verlag Limited, 2008. [http://stanford.edu/~boyd/graph\\_dcp.html](http://stanford.edu/~boyd/graph_dcp.html).
15. M. Grant and S. Boyd. CVX: Matlab software for disciplined convex programming, version 2.1. <http://cvxr.com/cvx>, March 2014.

16. H. Happ. Optimal power dispatch – A comprehensive survey. *IEEE Transactions on Power Apparatus and Systems*, 96(3):841–854, 1977.
17. C. Harris. *Electricity Markets: Pricing, Structures and Economics*. John Wiley & Sons, 2006.
18. M. Kraning, E. Chu, J. Lavaei, and S. Boyd. Dynamic network energy management via proximal message passing. *Foundations and Trends in Optimization*, 1(2):73–126, 2014.
19. J. Lavaei and S. Low. Zero duality gap in optimal power flow problem. *IEEE Transactions on Power Systems*, 27(1):92–107, 2012.
20. W. Liu, J. Zhan, and C. Chung. A novel transactive energy control mechanism for collaborative networked microgrids. *IEEE Transactions on Power Systems*, early access, 2018.
21. J. Löfberg. YALMIP: A toolbox for modeling and optimization in MATLAB. In *Proceedings of the IEEE International Symposium on Computer Aided Control Systems Design*, pages 284–289, 2004.
22. S. Long, O. Marjanovic, and A. Parisio. Generalised control-oriented modelling framework for multi-energy systems. *Applied Energy*, 235:320–331, 2019.
23. D. Luenberger. *Microeconomic Theory*. McGraw-Hill College, 1995.
24. T. Ma, J. Wu, L. Hao, H. Yan, and D. Li. A real-time pricing scheme for energy management in integrated energy systems: A Stackelberg game approach. *Energies*, 11(10):2858, 2018.
25. J. Mattingley, Y. Wang, and S. Boyd. Receding horizon control: Automatic generation of high-speed solvers. *IEEE Control Systems Magazine*, 31(3):52–65, June 2011.
26. E. Munsing, J. Mather, and S. Moura. Blockchains for decentralized optimization of energy resources in microgrid networks. Available at <https://escholarship.org/uc/item/80g5s6df>, 2017.
27. N. Padhy. Unit commitment – A bibliographical survey. *IEEE Transactions on power systems*, 19(2):1196–1205, 2004.
28. A. Papavasiliou. Analysis of distribution locational marginal prices. *IEEE Transactions on Smart Grid*, 2017.
29. T. Rockafellar. *Convex Analysis*. Princeton University Press, 1997.
30. F. Schweppe, M. Caramanis, R. Tabors, and R. Bohn. *Spot Pricing of Electricity*. Kluwer Academic Publishers, 1988.
31. R. Shumway and D. Stoffer. *Time Series Analysis and its Applications*. Springer, 4th edition, 2017.
32. M. Steinberg and T. Smith. *Economy Loading of Power Plants and Electric Systems*. J. Wiley & Sons, Inc., 1943.
33. J. Taylor. *Convex Optimization of Power Systems*. Cambridge University Press, 2015.
34. M. Udell, K. Mohan, D. Zeng, J. Hong, S. Diamond, and S. Boyd. Convex optimization in Julia. *SC14 Workshop on High Performance Technical Computing in Dynamic Languages*, 2014.
35. W. Wood and B. Wollenberg. *Power Generation, Operation, and Control*. John Wiley & Sons, 2012.

## 1.6 Appendix: Forecasts

Forecasts or predictions of time series, such as loads or power availability of renewable generators, are critical components of the MPC formulation of §1.4 or the robust MPC formulation of §1.5. We have already noted that the forecasts do not need to be very good to enable MPC or robust MPC to yield

good performance. Even simple forecasts of quantities, such as predicting that future values will simply be equal to the current value, can give reasonable MPC performance in some cases.

Time series modeling and forecasting is a well studied problem in a variety of fields, such as statistics [12], machine learning, and econometrics [31]. These and many other references describe sophisticated forecasting techniques that can be used.

In this section we describe a simple method to forecast a scalar time series. Our simple model takes into account seasonal variations, both long and short term, in a baseline time series, that depends only on time. It also takes into account short-term deviations from the baseline, based on recent past deviations. Similar techniques can be applied to vector time series, either by separating them into their scalar components, or by swapping the vector of model parameters with an appropriate matrix of parameters.

#### *General model fitting methods.*

The simplest method to fit a model from data uses basic least squares or regression [6]; more sophisticated methods based on convex optimization use loss functions and regularizers that give robust estimates, or sparse parameters (*i.e.*, regressor selection) [5, Chap. 6]. Much more sophisticated forecasts can be developed using advanced techniques like random forest models or neural networks [12]. We recommend starting with simple forecasts (even the constant one described above) and slowly increasing the complexity and sophistication of the forecast and evaluating the improvement (if any) on the control performance using MPC or robust MPC. In a similar way we recommend starting with least squares fitting techniques before moving to more sophisticated methods.

##### ***1.6.1 The baseline-residual forecast***

We consider a time series  $x_t \in \mathbf{R}$ , where the index  $t = 1, 2, \dots$  represents time or period. We think of  $t$  as the current time;  $t - 1$  then refers to the previous period, and  $t + 2$  refers to the period after the next period. The series might represent the power availability of a renewable generator, or the power of a fixed load, with  $t$  representing, *e.g.*, the hours or 5 minute periods. At any time  $t$  we assume we have access to the current and past observations

$$x_t, x_{t-1}, x_{t-2}, \dots$$

and we are to make future predictions

$$\hat{x}_{t+1|t}, \hat{x}_{t+2|t}, \dots, \hat{x}_{t+T-1|t},$$

where by  $\hat{x}_{t+\tau|t}$  we mean the prediction of the value at time  $t + \tau$ , made at time  $t$ . (We use superscript  $\hat{\cdot}$  to denote a predicted, and not actual, value.) In the notation  $t + \tau|t$ , the lefthand part  $t + \tau$  refers to the time of the quantity being forecast; the righthand part  $t$  refers to the time at which the forecast is made. We can interpret  $\tau$  as the number of time periods into the future we forecast; for example,  $\hat{x}_{t+1|t}$  is called the *one-step-ahead predictor* or forecast. It is our prediction of the next value of the series, given what we know now.

Using our forecast notation, we can express the simple constant forecast as  $\hat{x}_{t+\tau|t} = x_t$ . This predicts that all future values will be the same as the current value. While this is rarely a good forecast for a time series (unless the time series is very slowly changing) it can be adequate for MPC. In the next few subsections below we describe forecasts that are a bit more sophisticated than the constant forecast, and often work very well.

#### *Baseline-residual decomposition and forecast.*

We model the time series as the sum of two components: a seasonal *baseline*  $b_t \in \mathbf{R}$ , which takes into account variations due to, *e.g.*, hourly, daily, annual, and weekly seasonalities and periodicities, and a *residual*  $r_t$ , which is the deviation from the baseline,

$$x_t = b_t + r_t, \quad t = 1, \dots$$

The residual time series is also sometimes called the *seasonally adjusted* or *baseline adjusted* time series. It tells us how much larger or smaller the values are, compared to the baseline. We fit the baseline  $b_t$  using some past or historical data, as explained below.

Our predictions have the form

$$\hat{x}_{t+\tau|t} = b_{t+\tau} + \hat{r}_{t+\tau|t},$$

where  $\hat{r}_{t+\tau|t}$  is our prediction of the residual at time  $t + \tau$  made at time  $t$ . We form these predictions of future residual values using simple regression, again on past and historical data. Note that the baseline component of the prediction only depends on  $t + \tau$ , and not  $t$ , *i.e.*, the baseline value depends only on the time  $t + \tau$  of the predicted quantity, and not on the time  $t$  at which the forecast is made. The second term, our forecast of what the residual will be at time  $t + \tau$ , does depend on  $t$ , the time of the forecast.



### 1.6.2 Seasonal baseline

The baseline is meant to capture the variation of the time series due to time, typically, periodically repeating patterns. A simple model for the baseline is a sum of  $K$  sinusoids (*i.e.*, Fourier terms),

$$b_t = \beta_0 + \sum_{k=1}^K \alpha_k \sin(2\pi t/P_k) + \beta_k \cos(2\pi t/P_k),$$

where  $P_k$  are the periods. Typically we would use as periods the fundamental period  $P$  (*e.g.*, one day, one year) and those associated with the first few harmonics, *i.e.*,  $P/2$ ,  $P/3$ ,  $\dots$ . We fit the coefficients  $\alpha_k, \beta_k$ ,  $k = 1, \dots, K$  using simple least squares on historical data.

An example will illustrate the method. Suppose the time period is fifteen minutes and we wish to model diurnal (24 hour) and seasonal (annual) periodicities, with 4 harmonics each. We choose

$$P_1 = 96, \quad P_2 = 48, \quad P_3 = 24, \quad P_4 = 12,$$

as the periods for diurnal variation, and

$$P_5 = 8766, \quad P_6 = 4383, \quad P_7 = 2101.5, \quad P_8 = 1095.75,$$

for seasonal variation. (One solar year is roughly 365 days and 6 hours, or 8766 periods of 15 minutes.) This baseline model would have 17 parameters (including  $\beta_0$ , the constant). If the time series is impacted by human or economic activity, we can also include weekly seasonality, or a weekend/holiday term.

Note that the value of the baseline model can be found for any time, past or future, once the baseline model coefficients are fixed, since it is then a fixed function of time. We can, for example, evaluate the baseline load value, or renewable generation availability, at some specific time in the future. In some applications of MPC, the baseline model is good enough to provide good performance.

### 1.6.3 Auto-regressive residual forecasts

Once we have the baseline forecast, we subtract it from our historical data to obtain the sequence of historical residuals,  $r_t = x_t - b_t$ . This sequence is sometimes referred to as the *baseline adjusted* sequence. (For example, with an annual baseline,  $r_t$  is called the seasonally adjusted time series.) Roughly speaking,  $r_t$  contains the part of the sequence that is not explained by the periodicities.

To make forecasts of  $r_{t+1}, \dots, r_{t+T-1}$  at time  $t$ , we use simple least squares regression based on the previous  $M$  values,  $x_t, x_{t-1}, \dots, x_{t-M+1}$ . Our model is

$$\hat{r}_{t+\tau|t} = \sum_{\tau'=0}^{M-1} \gamma_{\tau,\tau'} r_{t-\tau'}, \quad \tau = 1, \dots, T-1,$$

and we choose the  $(T-1) \times M$  matrix of model parameters  $\gamma_{\tau,\tau'}$  to minimize the mean square error on the historical data. These auto-regressive coefficients are readily interpretable:  $\gamma_{\tau,\tau'}$  is the amount by which  $\hat{r}_{t+\tau|t}$  (our  $\tau$ -step-ahead prediction) depends on  $r_{t-\tau'}$  (the value  $\tau'$  steps in the past).

We can fit the coefficients associated with the forecast  $\hat{r}_{t+\tau|t}$ , *i.e.*,  $\gamma_{\tau,\tau'}$  for  $\tau' = 0, \dots, M-1$ , separately for different values of  $\tau$ . Each of these is a separate least squares fit or regression, based on historical data. We note here a common error made in forecasting. The bad method first builds a ‘one-step-ahead’ forecast, which gives  $\hat{r}_{t+1|t}$ . Then, to forecast two steps ahead, the bad method iterates the one-step-ahead forecast twice. This method of iterating a one-step-ahead forecast is more complicated, and produces far worse forecasts, compared to the method described above.

### 1.6.4 Forecasting

In summary, at time  $t$  we predict the future values of the time series as

$$\hat{x}_{t+\tau|t} = b_{t+\tau} + \sum_{\tau'=0}^{M-1} \gamma_{\tau,\tau'} (x_{t-\tau'} - b_{t-\tau'}), \quad \tau = 1, \dots, T-1.$$

This forecast depends on the baseline model coefficients, as well as the residual auto-regressive coefficients.

There are many useful extensions of the basic forecasting method described above. First, the baseline could form predictions based not just on the time, but also on other observable quantities, for example, weather. In this case the baseline is not known ahead of time; it depends on the values of the other observable quantities at that time. Another simple and useful extension is to project the forecast values onto some set of values that the quantity is known to have. For example if we are forecasting a renewable generator power availability, which must lie between 0 and some upper limit (the capacity)  $P^{\max}$ , we clip our forecast value to lie within this range. (That is, we replace the forecast value with 0 if it is negative, and  $P^{\max}$  if it is larger than  $P^{\max}$ .)

While we have described the construction of the forecast as a two step process, *i.e.*, fitting a baseline, and then fitting an auto-regressive model for the residuals, the two steps can in fact be done at the same time. We simply fit a predictor of  $x_{t+\tau}$  for each  $\tau$ , using a set of regressors that include current and previous values, the baseline basis functions, and indeed any

other regressors that might help, *e.g.*, weather or futures contract prices. (That approach would give a predictor very close, but not equal, to the one described here.) We have described the construction of the forecast as a two-step process because it is easy to interpret.

### 1.6.5 Generating sample trajectories

In the forecasting method described above, the goal is to come up with one estimate of the future of the time series. In this section we describe a simple method for generating a set of sample forecast trajectories

$$x_{t+\tau|t}^{(k)}, \quad k = 1, \dots, K.$$

These sample trajectories can be used for robust MPC, as described in §1.5.4. They are also useful as a sanity check on our forecasting method. If the generated sample forecasts don't look right, it casts some doubt on our forecasting method. If our forecasts look plausible, we gain confidence in our forecast method. The method we describe here works with *any* forecasting method, including even the simplest ones, such as forecasting the value as the current value, *i.e.*,  $\hat{x}_{t+\tau|t} = x_t$ .

We let  $e_t \in \mathbf{R}^T$  denote the vector of forecast errors for  $x_{t+\tau|t}$ , *i.e.*,

$$(e_t)_\tau = x_{t+\tau} - \hat{x}_{t+\tau|t}, \quad \tau = 0, \dots, T-1.$$

(For simplicity we index the vectors  $e_t$  from 0 to  $T-1$ .) We collect these forecast error vectors over a historical data set, and then fit these vectors with a Gaussian distribution  $\mathcal{N}(\mu, \Sigma)$ . The simplest method uses the empirical mean and covariance of  $e_t$  over the historical data as  $\mu$  and  $\Sigma$ , and in many cases, we can take  $\mu = 0$ . More sophisticated methods for choosing  $\mu$  and  $\Sigma$  involve adding a regularization term, or fitting a low-rank model.

To generate  $K$  forecasts at time  $t$ , we sample  $K$  vectors  $e_t^{(k)}$ ,  $k = 1, \dots, K$  from  $\mathcal{N}(\mu, \Sigma)$ , and then form the sample forecasts as

$$\hat{x}_{t+\tau|t}^{(k)} = \hat{x}_{t+\tau|t} + e_\tau^{(k)}, \quad \tau = 0, \dots, T-1, \quad k = 1, \dots, K.$$

These samples are meant to be plausible guesses as what the next  $T-1$  values of the time series might be. Their average value is our forecast. We add to our forecast the simulated forecast errors that have the same mean and covariance of historically observed values.

### 1.6.6 Wind farm example

We consider a time series of the power output of a wind farm, in MW, (which depends on the available wind force) on data by the National Renewable Energy Laboratory (NREL) for a site in West Texas. The code can be seen in the Python notebook at <https://github.com/cvxgrp/cvxpower/blob/master/examples/WindForecast.ipynb>. Observations are taken every 5 minutes, from January 2010 to December 2012. We use data from 2010 and 2011 to train the models, and data from 2012 for testing. Our model has a baseline component that uses 4 periodicities to model diurnal variation, and the other 4 to model annual variation. Our predictor uses an autoregressive predictor of the residuals to the baseline (*i.e.*, the seasonality-adjusted series) of size  $T = M = 288$ , *i.e.*, it forecasts every 5 minutes power availability for the next 24 hours, using data from the past 24 hours. Finally, since the power output lies between 0 and 16 MW (the minimum and maximum power of the turbine), we project our forecast onto this interval.

Figure 1.15 shows the result of the forecast on a day in June 2012, which is in the test set. Figure 1.16 shows  $K = 3$  generated sample trajectories, or scenarios, for the same day. At least to the eye, they look quite plausible.

## 1.7 Appendix: Code example for cvxpower

We show here the Python source code to construct and optimize the network of §1.2.5.2. We define objects for each load, generator, transmission line, net, and then combine them to formulate, and solve, the static optimal power flow problem. More examples (in the form of Python notebooks) can be seen in the “examples” folder of the software repository (at <https://github.com/cvxgrp/cvxpower>).

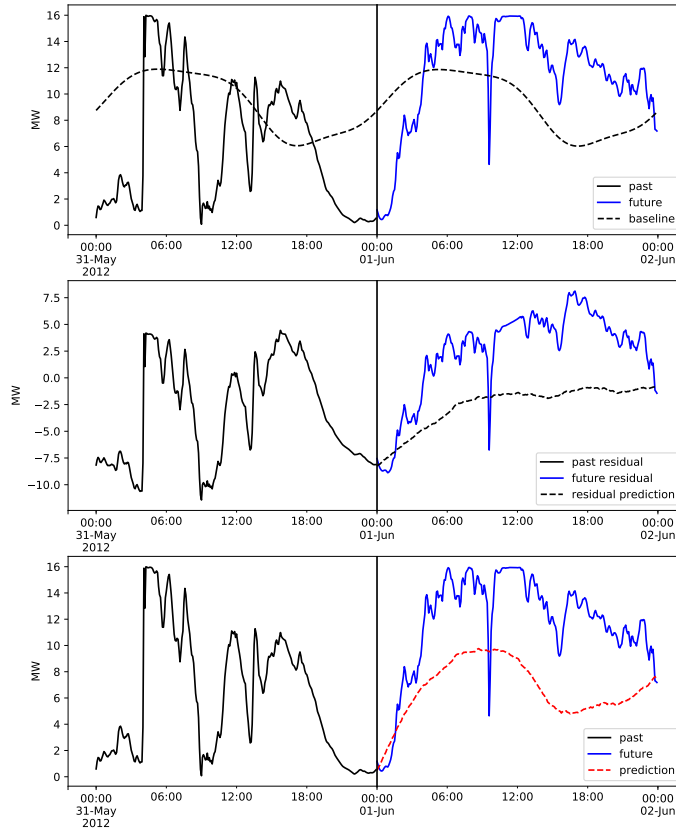


Fig. 1.15: Wind farm power availability example. Powers shown over two days, with the vertical bar representing the time the forecast is made. *Top.* True and baseline power. *Middle.* Residual and residual prediction. *Bottom.* True power and forecast.

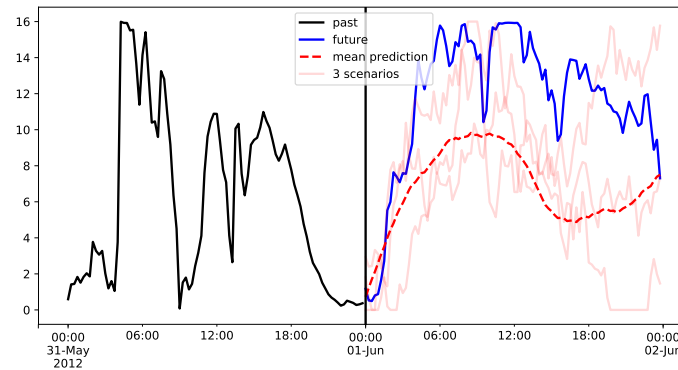


Fig. 1.16: Wind farm power availability example, forecast and 3 generated scenarios.

```
from cvxpower import *

load1 = FixedLoad(power=50, name="load1")
load2 = FixedLoad(power=100, name="load2")

gen1 = Generator(power_max=1000, alpha=0.02, beta=30, name="gen1")
gen2 = Generator(power_max=100, alpha=0.2, beta=0, name="gen2")

line1 = TransmissionLine(power_max=50, name='line1')
line2 = TransmissionLine(power_max=10, name='line2')
line3 = TransmissionLine(power_max=50, name='line3')

net1 = Net([load1.terminals[0], gen1.terminals[0],
            line1.terminals[0], line2.terminals[0]], name = 'net1')
net2 = Net([load2.terminals[0], line1.terminals[1],
            line3.terminals[0]], name = 'net2')
net3 = Net([gen2.terminals[0], line2.terminals[1],
            line3.terminals[1]], name = 'net3')
network = Group([load1, load2, gen1, gen2,
                 line1, line2, line3],
                [net1, net2, net3])

network.init_problem()
network.optimize()
network.results.summary()
```

The output is:

Terminal	Power
-----	-----
load1[0]	50.00
load2[0]	100.00
gen1[0]	-90.00
gen2[0]	-60.00
line1[0]	50.00
line1[1]	-50.00
line2[0]	-10.00
line2[1]	10.00
line3[0]	-50.00
line3[1]	50.00

Net	Price
---	-----
net1	33.6000
net2	199.6002
net3	24.0012

Device	Payment
-----	-----
load1	1680.00
load2	19960.02
gen1	-3024.00
gen2	-1440.07
line1	-8300.01
line2	-95.99
line3	-8779.95