

On the measurement of frequency and of its sample variance with high-resolution counters

Enrico Rubiola*

Rev. 2.0, 19th November 2018. arXiv physics/0411227

Abstract

A frequency counter measures the input frequency $\bar{\nu}$ averaged over a suitable time τ , versus the reference clock. High resolution is achieved by interpolating the clock signal. Further increased resolution is obtained by averaging multiple frequency measurements highly overlapped. In the presence of additive white noise or white phase noise, the square uncertainty improves from $\sigma_\nu^2 \propto 1/\tau^2$ to $\sigma_\nu^2 \propto 1/\tau^3$. Surprisingly, when a file of contiguous data is fed into the formula of the two-sample (Allan) variance $\sigma_y^2(\tau) = \mathbb{E}\{\frac{1}{2}(\bar{y}_{k+1} - \bar{y}_k)^2\}$ of the fractional frequency fluctuation y , the result is the *modified* Allan variance $\text{mod } \sigma_y^2(\tau)$. But if a sufficient number of contiguous measures are averaged in order to get a longer τ and the data are fed into the same formula, the results is the (non-modified) Allan variance. Of course interpretation mistakes are around the corner if the counter internal process is not well understood.

Contents

1	Background	2
1.1	Allan variance (AVAR)	2
1.2	Modified Allan variance (MVAR)	3
2	High-resolution frequency counters	5
2.1	Classical reciprocal counters	5
2.2	Enhanced-resolution counters	6
2.3	Understanding technical information	8
2.4	Examples	8
3	Frequency stability measurement	10
3.1	Π -type counters	10
3.2	Λ -type counters.	11
3.3	Other methods	12

*Université Henri Poincaré, Nancy, France. e-mail enrico@rubiola.org

Revision history

Rev. 1.0, Nov 25, 2004. First draft.

Rev. 2.0, Dec 31, 2004. Table 1 updated. Added Section 2.4 and Fig. 4.

1 Background

Let $v(t) = \sin 2\pi\nu t = \sin[2\pi\nu_{00}t + \varphi(t)]$ the input signal, where $\varphi(t)$ is the phase fluctuation, $\nu_{00} = 1/T_{00}$ is the nominal frequency (the double subscript ‘00’, as in ν_{00} , is used to avoid confusion with the 0-th term of a time series; thus, ν_{00} is the same as ν_0 commonly used in the literature, etc.), and $\nu(t) = \nu_{00} + \frac{\dot{\varphi}}{2\pi}$ is the instantaneous frequency. Finally, let $x(t) = \frac{\varphi}{2\pi\nu_{00}}$ the phase time fluctuation, i.e., the time jitter, and $y(t) = \frac{\dot{\varphi}}{2\pi\nu_{00}} = \frac{\nu - \nu_{00}}{\nu_{00}}$ the fractional frequency fluctuation. The notation used in this article is the same of the general references about frequency stability and noise [BCC⁺72, Rut78, CCI90, Vig99].

Denoting with $\mathbb{E}\{\cdot\}$ the expectation, the (classical) variance of y is $\sigma_y^2 = \mathbb{E}\{[y - \mathbb{E}\{y\}]^2\}$. In the presence of slow random phenomena, the variance depends on the measurement time and on the number of samples. This is related to the fact that the algorithm used is a filter in the frequency domain, whose lower cutoff frequency is set by the number of samples. Other variances are to be used, based on the idea that the estimator, clearly specified, has a lower cutoff frequency that blocks the dc and long-term components of noise. There results a variance which is a function of the measurement time τ . Table 1 shows the spectral properties of the Allan variance and of the modified Allan variance, defined underneath.

1.1 Allan variance (AVAR)

Originally, the Allan variance was introduced as a measurement tool for the frequency fluctuation of atomic clocks [All66]. Given a stream of contiguous data \bar{y}_k averaged on a time τ , the simplest variance is the (classical) variance evaluated on two samples, $\sigma_y^2(\tau) = \frac{1}{2}[y_{k+1} - y_k]^2$. The estimated variance is

$$\sigma_y^2(\tau) = \mathbb{E} \left\{ \frac{1}{2} [\bar{y}_{k+1} - \bar{y}_k]^2 \right\}, \quad \text{AVAR} \quad (1)$$

and, expanding the time average,

$$\sigma_y^2(\tau) = \mathbb{E} \left\{ \frac{1}{2} \left[\frac{1}{\tau} \int_{(k+1)\tau}^{(k+2)\tau} y(t) dt - \frac{1}{\tau} \int_{k\tau}^{(k+1)\tau} y(t) dt \right]^2 \right\}. \quad (2)$$

The above can be rewritten as

$$\sigma_y^2(\tau) = \mathbb{E} \left\{ \left[\int_{-\infty}^{+\infty} y(t) w_A(t) dt \right]^2 \right\} \quad (3)$$

Table 1: Noise types, power spectral densities, and Allan variances.

noise type	$S_\varphi(f)$	$S_y(f)$	$S_\varphi \leftrightarrow S_y$	$\sigma_y^2(\tau)$	$\text{mod } \sigma_y^2(\tau)$
white PM	b_0	$h_2 f^2$	$h_2 = \frac{b_0}{\nu_0^2}$	$\frac{3f_H h_2}{(2\pi)^2} \tau^{-2}$ $2\pi\tau f_H \gg 1$	$\frac{3f_H \tau_0 h_2}{(2\pi)^2} \tau^{-3}$
flicker PM	$b_{-1} f^{-1}$	$h_1 f$	$h_1 = \frac{b_{-1}}{\nu_0^2}$	$[1.038 + 3 \ln(2\pi f_H \tau)]$ $\times \frac{h_1}{(2\pi)^2} \tau^{-2}$	$0.084 h_1 \tau^{-2}$ $n \gg 1$
white FM	$b_{-2} f^{-2}$	h_0	$h_0 = \frac{b_{-2}}{\nu_0^2}$	$\frac{1}{2} h_0 \tau^{-1}$	$\frac{1}{4} h_0 \tau^{-1}$
flicker FM	$b_{-3} f^{-3}$	$h_{-1} f^{-1}$	$h_{-1} = \frac{b_{-3}}{\nu_0^2}$	$2 \ln(2) h_{-1}$	$\frac{27}{20} \ln(2) h_{-1}$
random walk FM	$b_{-4} f^{-4}$	$h_{-2} f^{-2}$	$h_{-2} = \frac{b_{-4}}{\nu_0^2}$	$\frac{(2\pi)^2}{6} h_{-2} \tau$	$0.824 \frac{(2\pi)^2}{6} h_{-2} \tau$
frequency drift	$\dot{y} = D_y$			$\frac{1}{2} D_y^2 \tau^2$	$\frac{1}{2} D_y^2 \tau^2$

Here ν_{00} is replaced with ν_0 for consistency with the general literature. f_H is the high cutoff frequency, needed for the noise power to be finite. The columns $\sigma_y^2(\tau)$ and $\text{mod } \sigma_y^2(\tau)$ are from [Kro83, p. 79] (adapted).

$$w_A = \begin{cases} -\frac{1}{\sqrt{2}\tau} & 0 < t < \tau \\ \frac{1}{\sqrt{2}\tau} & \tau < t < 2\tau \\ 0 & \text{elsewhere} \end{cases} \quad (\text{Fig. 1}) \quad (4)$$

which is similar to a wavelet variance. The weight function differs from the Haar wavelet in that it is normalized for power instead of energy. In fact, the energy of w_A is

$$\mathcal{E}\{w_A\} = \int_{-\infty}^{+\infty} w_A^2(t) dt = \frac{1}{\tau}. \quad (5)$$

while the energy of a wavelet is $\mathcal{E}\{\cdot\} = 1$.

In the frequency domain, the AVAR is similar to a half-octave bandpass filter with the peak at the frequency of $\frac{1}{2\tau}$.

1.2 Modified Allan variance (MVAR)

Another type of variance commonly used in time and frequency metrology is the modified Allan variance $\text{mod } \sigma_y^2(\tau)$ [AB81, LA84]. This variance was first introduced in the domain of optics [Sny80] because it divides white phase noise

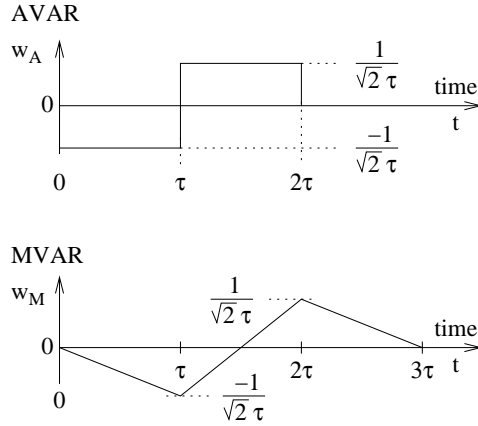


Figure 1: Weight functions for the two-sample variance and for the modified Allan variance.

from flicker phase noise, which the AVAR does not. This is often useful in fast measurements. MVAR is also related to the sampling theorem and to the aliasing phenomenon [VZL98b, VZL98a] because the trigger samples the input process at a rate $1/\tau_0$ (see below). The MVAR is defined as

$$\text{mod } \sigma_y^2(\tau) = \mathbb{E} \left\{ \frac{1}{2} \left[\frac{1}{n} \sum_{i=0}^{n-1} \left(\frac{1}{\tau} \int_{(i+n)\tau_0}^{(i+2n)\tau_0} y(t) dt - \frac{1}{\tau} \int_{i\tau_0}^{(i+n)\tau_0} y(t) dt \right) \right]^2 \right\} \quad (6)$$

MVAR

with $\tau = n\tau_0$.

The above is similar to a wavelet variance

$$\text{mod } \sigma_y^2(\tau) = \mathbb{E} \left\{ \left[\int_{-\infty}^{+\infty} y(t) w_M(t) dt \right]^2 \right\}, \quad (7)$$

in which the weight function for $\tau_0 \ll \tau$, or equivalently for $n \gg 1$, can be written as

$$w_M = \begin{cases} -\frac{1}{\sqrt{2}\tau^2} t & 0 < t < \tau \\ \frac{1}{\sqrt{2}\tau^2} (2t - 3) & \tau < t < 2\tau \\ -\frac{1}{\sqrt{2}\tau^2} (t - 3) & 2\tau < t < 3\tau \\ 0 & \text{elsewhere} \end{cases} \quad (\text{Fig. 1}). \quad (8)$$

Once again, the weight function differs from a wavelet in that it is normalized for power instead of energy

$$\mathcal{E}\{w_M\} = \int_{-\infty}^{+\infty} w_M^2(t) dt = \frac{1}{2\tau}. \quad (9)$$

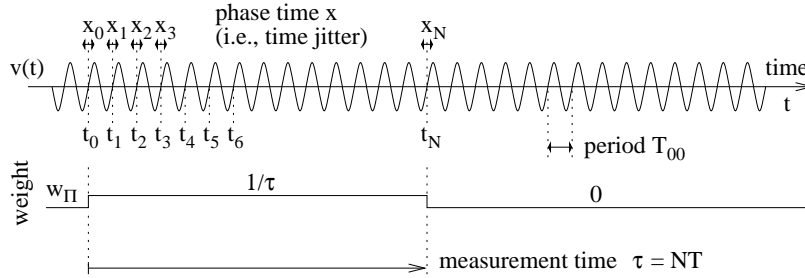


Figure 2: Rectangular averaging mechanism in simple frequency counters.

Interestingly, it holds that $\mathcal{E}\{w_M\} = \frac{1}{2}\mathcal{E}\{w_A\}$. This is related to the fact that the AVAR response to white frequency noise $S_y(f) = h_0$ is $\sigma_y^2(\tau) = \frac{h_0}{2\tau}$, while the response of MVAR to the same noise is mod $\sigma_y^2(\tau) = \frac{h_0}{4\tau}$.

2 High-resolution frequency counters

In this section the phase noise $\varphi(t)$, and therefore the frequency noise $y(t)$, is provisionally assumed to be a zero-mean stationary process. This hypothesis will no longer necessary for the direct measurement of the Allan variance.

2.1 Classical reciprocal counters

Traditionally, the uniform average over a suitable time interval τ is used as an estimator of the frequency ν . The expectation of ν is therefore

$$\mathbb{E}\{\nu\} = \int_{-\infty}^{+\infty} \nu(t)w_{\Pi}(t) dt \quad \text{\(\Pi\) estimator} \quad (10)$$

$$w_{\Pi}(t) = \begin{cases} 1/\tau & 0 < t < \tau \\ 0 & \text{elsewhere} \end{cases} \quad (11)$$

$$\int_{-\infty}^{+\infty} w_{\Pi}(t) dt = 1 \quad \text{normalization .} \quad (12)$$

Inside, the counter measures the time interval $\tau = t_N - t_0$ between two zero crossings of $v(t)$ spaced by N periods (Fig. 2). Thus $\mathbb{E}\{\nu\} = \bar{\nu} = N/\tau$. The averaging time τ_U selected by the user is rounded to $\tau = NT \geq \tau_U$ by stopping the measurement at the first zero crossing after that τ_U has elapsed. A variety of interpolation techniques [Kal04] can be exploited to avoid of the uncertainty $\frac{1}{\tau\nu_c}$ that results from the bare count of clock pulses at the frequency ν_c . The measurement of τ is affected by the error $x_0 - x_N$ that results from the trigger noise and from the clock interpolator. Here, the reference clock is assumed ideal. Thus it holds that $y = \frac{x_N - x_0}{\tau}$. With a state-of-the-art counter, the resolution of the interpolator in a single-event time interval measurement can be of 10^{-11} s.

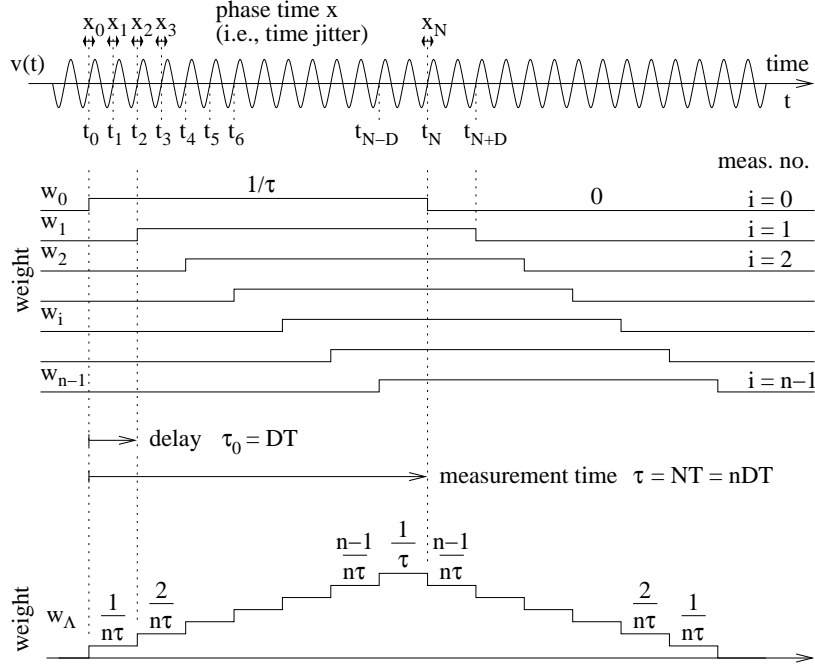


Figure 3: Triangular averaging mechanism, implemented in some high-resolution frequency counters.

Let us assume that x_0 and x_N are independent and have identical statistical properties, and denote with σ_x^2 the variance of each. Under this assumption, which will be justified afterwards under more stringent conditions, the variance of τ is $2\sigma_x^2$. Accordingly, the variance of the fractional frequency fluctuation is

$$\sigma_y^2 = \frac{2\sigma_x^2}{\tau^2} \quad \begin{array}{l} \text{classical} \\ \text{variance} \end{array} \quad (13)$$

The law $\sigma_y^2 \propto 1/\tau^2$ is a property of the Π estimator, i.e., of the uniform average, in the presence of white phase noise.

2.2 Enhanced-resolution counters

More sophisticated counters make use of the Λ estimator (Fig. 3), which consists of a triangular-weight average. The counter takes a series of n measures $\bar{\nu}_i = N/\tau_i$ delayed by $i\tau_0 = iDT$, where $\tau_i = t_{N+iD} - t_{iD}$, $i \in \{0, \dots, n-1\}$ is the time interval measured from the (iD) -th to the $(N+iD)$ -th zero crossings. The expectation of ν is evaluated as the average

$$\mathbb{E}\{\nu\} = \frac{1}{n} \sum_{i=0}^{n-1} \bar{\nu}_i \quad \text{where } \bar{\nu}_i = N/\tau_i \quad (14)$$

Eq. (14) can be written as an integral similar to (10), but for the weight function w_{Π} replaced with w_{Λ}

$$\mathbb{E}\{\nu\} = \int_{-\infty}^{+\infty} \nu(t) w_{\Lambda}(t) dt \quad \Lambda \text{ estimator} . \quad (15)$$

For $\tau_0 \ll \tau$, w_{Λ} approaches the triangular-shape function

$$w_{\Lambda}(t) = \begin{cases} t/\tau & 0 < t < \tau \\ 2 - t/\tau & \tau < t < 2\tau \\ 0 & \text{elsewhere} \end{cases} \quad (16)$$

$$\int_{-\infty}^{+\infty} w_{\Lambda}(t) dt = 1 \quad \text{normalization} . \quad (17)$$

Nonetheless the integral (15) is evaluated as the sum (14) because the time measurements take place at the zero crossings. The measures $\bar{\nu}_i$ are independent because the timing errors x_k , $k \in \{0, \dots, n-1\}$ are independent, as explained underneath. The counter noise is due to the interpolator noise, and to the noise of the input trigger. The samples of the interpolator jitter are independent because the interpolator is restarted every time it is used. The trigger noise spans from dc to the trigger bandwidth B , which is at least the maximum switching frequency of the counter. With modern instruments, B is hardly lower than 100 MHz, hence white noise is dominant. The autocorrelation function of the trigger noise is a sharp pulse of duration $T_R \approx 1/B$. On the other hand, the delay τ_0 is lower-bounded by the period T_{00} of the input signal and by the conversion time of the interpolator. The latter may take a few microseconds. Hence in practice it holds that $\tau_0 \gg T_R$, and therefore the timing errors are independent. Accordingly, the variance of the fractional frequency fluctuation is

$$\sigma_y^2 = \frac{1}{n} \frac{2\sigma_x^2}{\tau^2} \quad \begin{array}{l} \text{classical} \\ \text{variance} \end{array} . \quad (18)$$

At low input frequency, there is no reason for the delay τ_0 between overlapped measures $\bar{\nu}_i$ and $\bar{\nu}_{i+1}$ to be longer than T_{00} , i.e., one period. Thus $D = 1$, $\tau_0 = T_{00}$, and $n = N = \nu_{00}\tau$. Hence Eq. (18) is rewritten as

$$\sigma_y^2 = \frac{1}{\nu_{00}} \frac{2\sigma_x^2}{\tau^3} \quad \begin{array}{l} \text{classical} \\ \text{variance} \end{array} . \quad (19)$$

At high input frequency, the minimum delay τ_0 is set by the conversion time of the interpolator. Hence the measurement rate is limited to ν_I measures per second, the number n of overlapped measures is $n = \nu_I\tau \leq \nu_{00}\tau$, and Eq. (18) turns into

$$\sigma_y^2 = \frac{1}{\nu_I} \frac{2\sigma_x^2}{\tau^3} \quad \begin{array}{l} \text{classical} \\ \text{variance} \end{array} . \quad (20)$$

The law $\sigma^2 \propto 1/\tau^3$, either (19) or (20), is a property of the Λ estimator in the presence of white noise. This property is the main reason for having introduced

the Λ estimator in frequency counters. Yet it is to be made clear that the enhanced resolution is achieved by averaging on multiple measurements, even though overlapped, and that the measurement of a single event, like a start-stop time interval, can not be improved in this way.

2.3 Understanding technical information

Searching through the instruction manual of frequency counters and through the manufacturer web sites, one observes that the problem of the estimation is generally not addressed. When the counter is of the Π type, the measurement mechanism is often explained with a figure similar to Fig. 2. On the other hand, the explanation for the overlapped measurements in Λ -type counters is not found in the technical documentation. As a further element of confusion, both counters provide one value every τ seconds when programmed to measure over the time τ . This can lead the experimentalist to erroneously assume that the estimation is always of the Π type.

The internal estimation mechanism can be understood from the formula for the “frequency error”, often given in the technical documentation. These formulae are of the form

$$(\Pi) \quad \sigma_y = \frac{1}{\tau} \sqrt{2(\delta t)_{\text{trigger}}^2 + 2(\delta t)_{\text{interpolator}}^2} \quad (21)$$

or

$$(\Lambda) \quad \sigma_y = \frac{1}{\tau\sqrt{n}} \sqrt{2(\delta t)_{\text{trigger}}^2 + 2(\delta t)_{\text{interpolator}}^2} \quad (22)$$

$$n = \begin{cases} \nu_0\tau & \nu_{00} \leq \nu_I \\ \nu_I\tau & \nu_{00} > \nu_I \end{cases}$$

where ν_I is of the order of 200 kHz. The actual formulae may differ in that uncertainty and noise of the reference frequency may be included or not; in that the factor 2 in the interpolator noise does not appear explicitly; and in other details.

The terms inside the square root of (21) and (22) come from independent white noise processes, as explained in Sections 2.1. Thus, one can match Eq. (21) to (13), and Eq. (22) to (18). Consequently, the presence of a term τ in the denominator reveals that the counter is of the Π type, while the presence of the term $\tau\sqrt{n}$ or $\tau\sqrt{\tau}$ reveals that the counter is of the Λ type.

2.4 Examples

Two instruments have been selected with the sole criteria that the author is familiar with them, and that they are well suitable to show how to the Π and the Λ estimators can be identified in the instruction manual.

Stanford Research Systems SR-620 (Π estimator). In the instruction manual [Sta04, p. 27], the RMS uncertainty is called resolution and given by the formula

$$\left[\begin{array}{l} \text{RMS} \\ \text{resolution} \\ \text{(in Hz)} \end{array} \right] = \frac{\text{frequency}}{\text{gate time}} \sqrt{\frac{(25 \text{ ps})^2 + \left[\left(\frac{\text{short term}}{\text{stability}} \right) \times \left(\frac{\text{gate}}{\text{time}} \right) \right]^2 + 2 \times \left[\frac{\text{trigger}}{\text{jitter}} \right]^2}{N}}. \quad (23)$$

The above (23) matches our notation with

RMS resolution	$\sigma_\nu = \nu_{00} \sigma_y$	(classical variance)
frequency	ν_{00}	
gate time	τ	

The numerator inside the square root is the square single-shot time deviation $2\sigma_x^2$. It includes the inherent resolution of the counter, 25 ps, ascribed to the interpolator; the phase noise of the frequency standard; and the equivalent input noise (signal plus trigger) divided by the input slew rate. The denominator “N” is the number of measurement averaged, not to be mistaken for N of our notation. If the measurement time is equal to the gate time, it holds that $N = 1$. Eq. (23) divided by ν_{00} and squared is of the same form of Eq. (13), thus of Eq. (21), with $\sigma_y^2 \propto \frac{1}{\tau^2}$. This indicates that the counter is of the Π type.

Agilent Technologies 53132A (Λ estimator). The instruction manual [Agi98, pp. 3-5 to 3-8] reports the RMS resolution given by the formula

$$\left[\begin{array}{l} \text{RMS} \\ \text{resolution} \end{array} \right] = \left(\frac{\text{frequency}}{\text{or period}} \right) \times \left[\frac{4 \times \sqrt{(t_{\text{res}})^2 + 2 \times (\text{trigger error})^2}}{(\text{gate time}) \times \sqrt{\text{no. of samples}}} + \frac{t_{\text{jitter}}}{\text{gate time}} \right] \quad (24)$$

$$t_{\text{res}} = 225 \text{ ps}$$

$$t_{\text{jitter}} = 3 \text{ ps}$$

$$\text{number of samples} = \begin{cases} (\text{gate time}) \times (\text{frequency}) & \text{for } f < 200 \text{ kHz} \\ (\text{gate time}) \times 2 \times 10^5 & \text{for } f \geq 200 \text{ kHz} \end{cases}$$

The above (24) matches our notation with

RMS resolution	$\sigma_\nu = \nu_{00} \sigma_y$ or $\sigma_T = T_{00} \sigma_y$	(classical variance)
frequency	ν_{00}	
period	T_{00}	
gate time	τ	
no. of samples	n	

The term $\frac{t_{\text{jitter}}}{\text{gate time}}$ of (24) is due to some internal phenomena not analyzed here, for we provisionally neglect it. The numerator inside the square brackets is the

single-shot time deviation $2\sigma_x^2$. After squaring and normalizing, Eq. (24) is of the same form of (18), thus of (22). The counter switches averaging mode at the input frequency of $\nu_I = 200$ kHz. In fact, it holds that

$$n = \begin{cases} \nu_{00}\tau & \nu_{00} < 200 \text{ kHz} \\ \tau \times 2 \times 10^5 & \nu_{00} \geq 200 \text{ kHz} \end{cases}$$

Accordingly, Eq. (24) turns into (19) for $\nu < 2 \times 10^5$ Hz, and into (20) beyond 2×10^5 Hz. The variance is $\sigma_y^2 \propto \frac{1}{\tau^3}$ in both cases, for the counter is of the Λ type.

Remarks. The resolution enhancement of the Λ average can only be used with stationary phenomena, not with single events. This is easily seen in the table underneath. This table compares the two counters, SR-620 and 53132A, under the simplified assumptions that the reference clock is ideal, and that the high slew rate makes the trigger noise negligible.

counter type	single-event start-stop time interval TI = 1 s	frequency $\nu_{00} = 100$ kHz averaged on $\tau = 1$ s
SR-620	$\sigma = 2.5 \times 10^{-11}$	$\sigma_y = 2.5 \times 10^{-11}$
53132A	$\sigma = 9 \times 10^{-10}$	$\sigma_y = 5.8 \times 10^{-12}$

The superior resolution of the SR620 interpolator provides higher resolution for the measurement of a single event in start-stop mode. On the other hand, the highest resolution is obtained with the 53132A in the measurement of stationary signals, due to the Λ estimator.

3 Frequency stability measurement

Let us first observe that it holds

$$w_A(t) = \frac{1}{\sqrt{2}} [w_\Pi(t - \tau) - w_\Pi(t)] \quad (\text{Fig. 4}) \quad (25)$$

$$w_M(t) = \frac{1}{\sqrt{2}} [w_\Lambda(t - \tau) - w_\Lambda(t)] \quad (\text{Fig. 4}) . \quad (26)$$

3.1 Π -type counters

AVAR. Let us get a stream of data $\bar{y}_k^{(1)}$ from the output of a Π -estimator counter, measured over a base time slot τ_B with zero dead time. The superscript “(1)” refers to the averaging time $1 \times \tau_B$. Feeding this stream into Eq. (1), one gets Eq. (2) with $\tau = \tau_B$. Then, after averaging contiguous data in groups of m , one gets a smaller file of $\bar{y}_k^{(m)}$, averaged over the time $m\tau_B$. Feeding this new file into Eq. (1), one gets Eq. (2) with $\tau = m\tau_B$. This is exactly what one expects. It is a common practice to plot of $\sigma_y^2(\tau)$ in this way, using a single data stream and m in powers of 2.

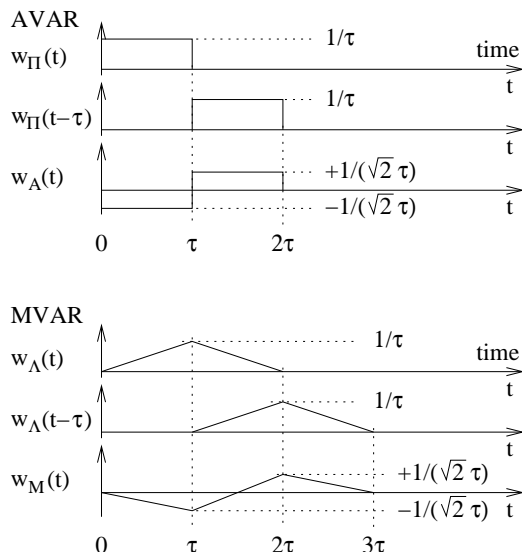


Figure 4: Relationships between the weight functions.

MVAR. The data file $\bar{y}_k^{(1)}$ can also be fed in Eq. (6). In this case the measurement time τ_B of the counter is the delay τ_0 of (6). The variance is evaluated at $\tau = n\tau_B$ set by the choice of n . Yet, it is desirable that $n \gg 1$.

3.2 Λ -type counters.

The attention of the reader is now to be drawn to a subtlety in the use of a Λ -estimator to measure the Allan variance. While the counter provides one value of $\bar{\nu}$ every τ_B seconds, two contiguous windows $w_\Lambda(t)$ and $w_\Lambda(t - \tau_B)$ are overlapped by τ_B . That is, the falling side of $w_\Lambda(t)$ overlaps the rising side of $w_\Lambda(t - \tau_B)$. Thus $\bar{\nu}_{k+1} - \bar{\nu}_k$, hence $\bar{y}_{k+1} - \bar{y}_k$, is the frequency averaged with the w_M window. The practical consequence is that, feeding the file of such $\bar{y}_k^{(1)}$ into Eq. (1) (AVAR), one gets *exactly* Eq. (6) with $\tau = \tau_B$. That is, MVAR instead of AVAR.

A longer measurement time τ is obtained by averaging contiguous data in groups of m . This process yields a smaller file of $\bar{y}_k^{(m)}$, averaged over $m\tau_B$. Yet the measurements are overlapped, for the weight function, which is the triangle w_Λ for $m = 1$, turns into an isosceles trapezium for $m > 1$, and asymptotically into the rectangle w_Π for large m . A graphical proof is given in Fig. 5. The practical consequence is that, feeding the file of $\bar{y}_k^{(m)}$ into Eq. (1), one gets an “odd” variance for with small $m > 1$, i.e., a variance that is neither AVAR or MVAR; and again the AVAR for large m .

Unfortunately, the conversion between Π and Λ estimates is impossible without combining a large number of data. It is therefore impossible to measure the AVAR with a Λ -type counter without increasing τ , that is, $\tau = m\tau_B$ with a

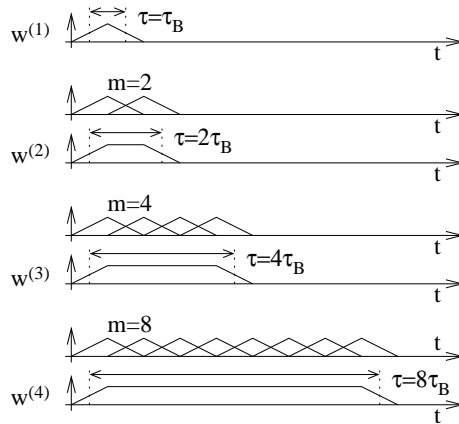


Figure 5: The average of m contiguous Λ measures converges to a Π estimate.

sufficiently large value of m .

Finally, we focus the attention to two asymptotic classes of measurement, namely short-term stability and long-term stability, analyzed underneath.

Long-term stability. These measurements are characterized by a large value of m . Hence the averaging function converges to w_{Π} , thus the data file $\bar{y}_k^{(m)}$ can be fed into the AVAR formula (1) without mistakes. This is a fortunate outcome for two reasons, namely

1. AVAR is preferable to MVAR because, for a given duration of the time record, it provides a more accurate estimate at large τ ,
2. the rejection of white phase noise of the MVAR is not necessary in long term measurements.

Short-term stability. The experimentalist interested in short-term stability appreciates the rejection of white noise of the MVAR, while the longer duration of the experiment, as compared to the measurement of the AVAR at the same τ is not disturbing. In this case, the bare mean can not be used to combine contiguous values in order to get $\tau = m\tau_B$. The values must be weighted proportionally to the triangular staircase sequence $\{1, 2, \dots, \lceil m/2 \rceil, \dots, 2, 1\}$, so that the equivalent weight function is an isosceles triangle of width 2τ . A file of such measures fed into (1) gives the MVAR evaluated at $\tau = m\tau_B$. The nuisance is that this triangular-shape average is only possible for odd m .

3.3 Other methods

For long-term measurements, the *total variance* TotVar [GHP99] is progressively being used as an estimator of the AVAR. The importance of the TotVar resides

in that, given a record of measured data, it exhibits higher accuracy at larger τ . Yet TotVar is based on rectangular averages. Consequently, the raw readout of a Λ estimator can not be fed in the formula for TotVar without interpretation mistakes.

Another useful method, often called *picket-fence*, consists of the absolute timing of the zero crossings versus a free-running time scale. In this case, there is no preprocessing inside the counter, for there can be no ambiguity in the result interpretation. Absolute-time data can be used to calculate AVAR, MVAR, TotVar and other variances. The concept of picket-fence was first proposed in [BCC⁺72, Eq. (79)]. Then, it was studied extensively as an independent method for the measurement of AVAR and MVAR [Gre89, Gre97].

Acknowledgments

I wish to thank Vincent Giordano (FEMTO-ST, Besançon, France) for pointing out the need for this work; John Dick, Charles Greenhall (JPL, Pasadena, CA) and David Howe (NIST, Boulder, CO) for stimulating discussions. I wish to thank François Vernotte (Observatoire de Besançon, France) and Mark Oxborrow (NPL, Teddington, UK) for discussions and thorough revision of the early manuscript versions.

References

- [AB81] David W. Allan and James A. Barnes, *A modified “Allan variance” with increased oscillator characterization ability*, Proc. 35 FCS (Ft. Monmouth, NJ), May 1981, pp. 470–474. 1.2
- [Agi98] Agilent Technologies, Inc., Paloalto, CA, *53131A and 53132A instruction manual (part number 53131-90055)*, 1998. 2.4
- [All66] David W. Allan, *Statistics of atomic frequency standards*, Proc. IEEE **54** (1966), no. 2, 221–230. 1.1
- [BCC⁺72] James A. Barnes, Andrew R. Chi, Leonard S. Cutler, Daniel J. Healey, David B. Leeson, Thomas E. McGunigal, James A. Mullen, Jr, Warren L. Smith, Richard L. Sydnor, Robert F. C. Vessot, and Gernot M. R. Winkler, *Characterization of frequency stability*, IEEE Trans. Instrum. Meas. **20** (1972), 105–120. 1, 3.3
- [CCI90] CCIR Study Group VII, *Characterization of frequency and phase noise, Report no. 580-3*, Standard Frequencies and Time Signals, Recommendations and Reports of the CCIR, vol. VII (annex), International Telecommunication Union (ITU), Geneva, Switzerland, 1990, pp. 160–171. 1
- [GHP99] Charles A. Greenhall, Dave A. Howe, and Donald B. Percival, *Total variance, an estimator of long-term frequency stability*, IEEE Trans. Ultras. Ferroel. and Freq. Contr. **46** (1999), no. 5, 1183–1191. 3.3

- [Gre89] Charles A. Greenhall, *A method for using time interval counters to measure frequency stability*, IEEE Trans. Ultras. Ferroel. and Freq. Contr. **36** (1989), no. 5, 478–480. 3.3
- [Gre97] ———, *The third-difference approach to modified allan variance*, IEEE Trans. Instrum. Meas. **46** (1997), no. 3, 696–703. 3.3
- [Kal04] Józef Kalisz, *Review of methods for time interval measurements with picosecond resolution*, Metrologia **41** (2004), 17–32. 2.1
- [Kro83] Venčeslav F. Kroupa (ed.), *Frequency stability: Fundamentals and measurement*, IEEE Press, New York, 1983. 1
- [LA84] Paul Lesage and Théophane Ayi, *Characterization of frequency stability: Analysis of the modified Allan variance and properties of its estimate*, IEEE Trans. Instrum. Meas. **33** (1984), no. 4, 332–336. 1.2
- [Rut78] Jacques Rutman, *Characterization of phase and frequency instabilities in precision frequency sources: Fifteen years of progress*, Proc. IEEE **66** (1978), no. 9, 1048–1075. 1
- [Sny80] J. J. Snyder, *Algorithm for fast digital analysis of interference fringes*, Appl. Opt. **19** (1980), no. 4, 1223–1225. 1.2
- [Sta04] Stanford Research Systems, Inc., *SR620 universal time interval counter instruction manual rev. 2.6*, 2004. 2.4
- [Vig99] John R. Vig (chair.), *IEEE standard definitions of physical quantities for fundamental frequency and time metrology—random instabilities (IEEE standard 1139-1999)*, IEEE, New York, 1999. 1
- [VZL98a] F. Vernotte, G. Zalamansky, and E. Lantz, *Time stability characterization and spectral aliasing. Part II: a frequency-domain approach*, Metrologia **35** (1998), 731–738. 1.2
- [VZL98b] ———, *Time stability characterization and spectral aliasing. Part II: a time-domain approach*, Metrologia **35** (1998), 723–730. 1.2