

An Analysis of the Slayer Exciter Circuit

Alen Kuriakose¹, Kharanshu Solanki², Meblu Sanand Tom³

School of Arts and Sciences, Ahmedabad University, Navrangpura, Ahmedabad - 380009, India

Dated: November 27th, 2020

Abstract

In this paper, we try to create an effective mathematical model for the well-known slayer exciter transformer circuit. We aim to analyze various aspects of the slayer-exciter circuit, by using physical and computational methods. We use a computer simulation for data collection of various parameters pertaining to the circuit. Using this data, we generate plots for various components and parameters. We also derive an approximate equation to maximize the secondary output voltage generated by the circuit. We also discuss a possible method to construct such a circuit using low-cost materials.

Contents

1	Introduction	3
2	Theory	3
2.1	Faraday's Law of Electromagnetic Induction	4
2.1.1	First Law	4
2.1.2	Second Law	4
2.2	Lenz's Law	4
2.3	Transformers and Inductance	5
2.4	Output Voltage of a Transformer	6
2.5	Resonant Transformers	6
3	Making a Physical Model of the SEC⁴	8
4	Simulating the SEC	8
5	Analyzing the SEC Simulation Data	10
5.1	Why Perform Analysis?	10
5.2	What Kind of Analysis?	10
5.3	Evolution of Output Voltage with Time	10
5.4	Voltage Ratio versus Turn Ratio	11
6	Finding an Equation to Maximise SEC Output Voltage	12
6.1	Variation of V_S with \mathcal{L}_P	12
6.2	Variation of V_S with C	14
6.3	Variation of V_S with R	15
6.4	Variation of V_S with $\frac{n_S}{n_P}$	16
6.5	Equation of the SEC	17

¹alen.k@ahduni.edu.in

²kharanshu.s@ahduni.edu.in

³meblu.t@ahduni.edu.in

⁴SEC will be used as a substitute for the Slayer-Exciter Circuit.

7	The Apparent Error in the SEC Equation	18
8	Potential Sources of Error	18
8.1	Physical Model	18
8.2	Simulated Model	18
9	Results and Concluding Remarks	19

List of Figures

1	An oscillating electric field produces an oscillating magnetic field, and vice-versa, thereby resulting in an electromagnetic wave.	3
2	Two coils, wrapped around bundles of iron sheets, allow a generator to light a bulb with no direct connection.	5
3	A current in coil 1 produces a magnetic field through coil 2.	5
4	A basic step-down transformer.	6
5	A capacitance is added to increase the load of the transformer in order to match the frequency of the transformer coils to that of the AC supply.	7
6	A simple pendulum. The bob (green) will reach maximum height only if we keep applying forces at points 1 or 3.	7
7	Basic schematic of the slayer exciter.	8
8	A simulated version of the slayer exciter circuit.	9
9	Circuit schematic for the slayer exciter.	9
10	Plot of secondary output voltage versus time elapsed. The nature of the graph is same as that of a sine curve.	11
11	Plot of voltage ratio vs turn ratio.	12
12	Plot for secondary voltage versus primary inductance. The orange curve represents the most accurate trendline. The blue curve is the original plot.	13
13	Plot of secondary voltage versus circuit resistance	15
14	Plot of secondary voltage versus circuit resistance. The blue line is the original plot and the orange one is the most accurate trendline.	16
15	Plot of secondary voltage versus transformer turn ratio.	17

List of Tables

1	Data for V_S vs t	10
2	Values of constant parameters.	10
3	Data for voltage ratio and turn ratio.	11
4	Values of constant parameters.	12
5	Data for secondary voltage and primary inductance.	13
6	Values of constant parameters.	13
7	Data for capacitance and secondary voltage.	14
8	Values for other constant parameters.. . . .	14
9	Data for secondary voltage and circuit resistance.	15
10	Values of constant parameter	15
11	Data for secondary voltage and transformer turn ratio.	16
12	Values of constant parameters.	17

1 Introduction

Our aim throughout this paper, will be to analyze the slayer-exciter circuit, as comprehensively as we possibly can. It can, at times, be quite difficult to keep up with the structure of an academic paper. Therefore, it is our deliberate intention to begin the paper with an overview of the process we shall follow.

What does one require, in order to perform an experimental analysis? Some may say we require computers, while others might say we require apparatus. While it is true that we require an apparatus to perform an experimental analysis, and that computational methods can prove very useful in the contemporary scientific scenario, it is also true (in certain scenarios) that we require a theory to test in the first place. Of course, this isn't always the case, but for this paper, it is. Therefore, we shall initiate the paper by a rather brief discussion of the physical theories involved. These include the likes of Lenz's law and the theory of transformers, among some other very interesting theories.

The actual analysis lies in the computational model of the circuit, for which, we will use the Falstad circuit simulation applet [1]. This will allow us to collect data regarding various parameters of the circuit, like the current, voltage and resistance. A large enough data set will serve multiple purpose, i.e., of verifying already existing theories, deriving a general equation to maximize the output of the circuit, and most important of all, gaining understanding of how various components of the circuit work together.

2 Theory

When an electron is in motion, i.e., if there is some current running through some electrical component (like a wire), then an oscillating electric field is produced [2-7]. This oscillating electric field, in turn, generates an oscillating magnetic field. The planes of oscillation of the electric and magnetic fields are orthogonal to each other (see figure 1). This results in an electromagnetic wave which travels at the speed of light c .

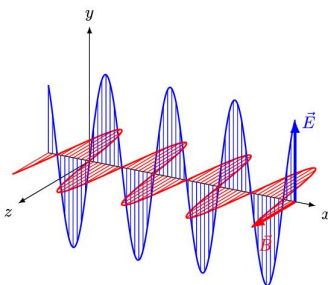


Figure 1: An oscillating electric field produces an oscillating magnetic field, and vice-versa, thereby resulting in an electromagnetic wave.

Any wave traveling at speed v can be mathematically described as

$$\nabla^2 \psi - \frac{1}{v^2} \frac{\partial^2 \psi}{\partial t^2} = 0$$

Therefore, for an electromagnetic wave, where the speed is the speed of light c , we get,

$$\begin{aligned} \nabla^2 \psi - \frac{1}{c^2} \frac{\partial^2 \psi}{\partial t^2} &= 0 \\ \Rightarrow \left(\nabla^2 - \frac{1}{c^2} \frac{\partial^2}{\partial t^2} \right) \psi &= 0 \\ \Rightarrow \square^2 \psi &= 0 \end{aligned}$$

Here, $\square^2 = \nabla^2 - \frac{1}{c^2} \frac{\partial^2}{\partial t^2}$ is known as the d'Alembertian operator, which can be thought of as a four-dimensional Laplacian operator [8-12], with an additional time-derivative component.

2.1 Faraday's Law of Electromagnetic Induction

There are really two aspects to Faraday's law of electromagnetic induction. These are formulated in terms of two laws, as follows:

2.1.1 First Law

Whenever a conductor is placed in a time-varying magnetic field, an electromotive force (emf) is induced in it [2-7]. Then, if we connect the conductor to a circuit and close it, a current is induced in the circuit, called the induced current. The induced emf around a closed loop L is given as the line integral of the electric field along the loop.

$$\varepsilon = \oint \vec{E} \cdot d\vec{s} \quad (1)$$

Here, ε is the emf measured in volts (V), and \vec{E} is the electric field generated.

2.1.2 Second Law

The electromotive force around a closed path is equal to the negative of the time rate of change of magnetic flux through the surface which the path encloses. For a loop of wire in a time-varying magnetic field, the magnetic flux Φ_B is defined by a surface S , whose boundary is given by a loop L . Since, the loop may be moving, we can write $S(t)$ for the surface. Then the magnetic flux is the surface integral given [2-7] as

$$\Phi_B = \iint \vec{B}(t) \cdot d\vec{A} \quad (2)$$

Here, $\vec{B}(t)$ is the time-varying magnetic field and $\vec{B}(t) \cdot d\vec{A}$ is the dot product showing the element of magnetic flux through a small element dA . The magnetic flux through the loop will be proportional to the number of magnetic field components passing perpendicular to the area enclosed by the loop. Subsequently, the magnitude of the emf ε induced in the circuit will be given according to Faraday's law [2-7] of electromagnetic induction as

$$\varepsilon = \frac{d\Phi_B}{dt} \quad (3)$$

If there are n number of turns, or loops in the wire, then we can just multiply the RHS of equation (3) by n , and the equation will hold true.

2.2 Lenz's Law

The magnitude of the induced emf is given by the Faraday's laws of electromagnetic induction. However, emf is not a scalar quantity. It is a vector quantity, and therefore, there is a direction associated with it, which is given by Lenz's law. Lenz's law states that the current induced in a circuit due to induced emf (due to changing magnetic field) is directed so as to oppose the change in magnetic flux, and to exert a force which opposes the motion. Mathematically, this adds "direction" to equations (3) and (4).

$$\varepsilon = -\frac{d\Phi_B}{dt} \quad (4)$$

or in the case of n loops,

$$\varepsilon = -n \frac{d\Phi_B}{dt} \quad (5)$$

These equations basically imply that the back emf opposes the changing current, which is the cause of the emf in the first place.

2.3 Transformers and Inductance

One of the most interesting features of Faraday’s laws is that a time-varying current in one coil can induce an emf in a second coil placed close to it. Suppose that we take two coils, each wound around separate bundles of iron sheets (these help to make stronger magnetic fields), as shown in figure 2 below.

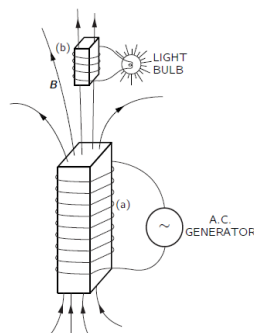


Figure 2: Two coils, wrapped around bundles of iron sheets, allow a generator to light a bulb with no direct connection.

Now, when we connect one of the coils—coil (a)—to an alternating-current generator. The continually changing current produces a continuously varying magnetic field. This varying field generates an alternating emf in the second coil—coil (b). This emf can, for example, produce enough power to light an electric bulb. The current in coil (b) can be larger or smaller than the current in coil (a). The current in coil (b) depends on the emf induced in it and on the resistance and inductance of the rest of its circuit. The emf can be less than that of the generator if, say, there is little flux change. Or the emf in coil (b) can be made much larger than that in the generator by winding coil (b) with many turns, since in a given magnetic field the flux through the coil is then greater. Such a combination of two coils—usually with an arrangement of iron sheets to guide the magnetic fields—is called a transformer. It can “transform” one emf (or voltage) to another. This effect is due to the mutual inductance between the two coils. There are also induction effects in a single coil. In figure 2, the varying current in coil (a) produces a varying magnetic field inside itself and the flux of this field is continually changing, so there is a self-induced emf in coil (a). This effect is called *self-inductance*.

The self-inductance \mathcal{L} of a loop of wire carrying a time-varying current $I(t)$, is given [2-7] as

$$\varepsilon = -\mathcal{L} \frac{dI(t)}{dt} \quad (6)$$

Here, ε is the electromotive force induced in the loop. Now, for our purpose, we are more interested in the aspect of mutual inductance, because that is one of the main principles of a transformer. Figure 6 shows an arrangement of two coils, which demonstrates the basic effects responsible for the operation of a transformer.

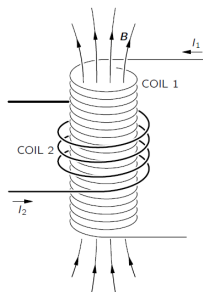


Figure 3: A current in coil 1 produces a magnetic field through coil 2.

Coil 1 consists of a conducting wire wound in the form of a long solenoid. Around this coil—and insulated from it—is wound coil 2, consisting of a few turns of wire. If now a current is passed through coil 1, we know

that a magnetic field will appear inside it. This magnetic field also passes through coil 2. As the current in coil 1 is varied, the magnetic flux will also vary, and there will be an induced emf in coil 2. Suppose the current through coil 1 is I_1 , then the emf through coil 1 is given [2-7] as

$$\varepsilon_1 = -\mathcal{M} \frac{dI_2}{dt} \quad (7)$$

Here, ε_1 is the emf induced in coil 1, I_2 is the current through coil 2, and \mathcal{M} is the mutual inductance of the two coils.

2.4 Output Voltage of a Transformer

Suppose we apply a certain amount of output voltage to the primary coil of the transformer (figure 7 shows a basic step-down transformer setup). This means an emf will be generated in the secondary coil with due to mutual induction.

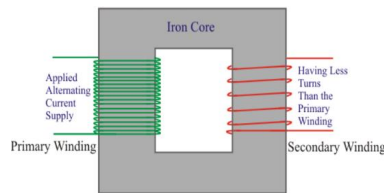


Figure 4: A basic step-down transformer.

Now, for a step-down transformer, the number of turns of secondary coil is less than the number of turns in the primary coil ($n_1 < n_2$). The voltages across the primary and secondary coils (V_1 and V_2 respectively) are related to the number of turns (n_1 and n_2 respectively) and the currents through them (I_1 and I_2 respectively) as,

$$\frac{V_1}{V_2} = \frac{n_1}{n_2} = \frac{I_2}{I_1} \quad (8)$$

We will later verify equation (8), by analyzing the data obtained from the computational simulation of the circuit.

2.5 Resonant Transformers

There are various kinds of transformers that one can find. One of the most efficient transformers is the resonant transformer. A resonant transformer works on the principle of a resonance in the circuit.

In simple terms resonance is basically the rapid pulsating (switching on and off) of the current (or voltage) in the circuit. But how does resonance of the circuit make the transformer more efficient? Well, the resonance helps to maximise the voltage output of the transformer. How? We will see that in a while. First, let's see how resonance functions in AC and DC circuits.

Resonance is generally associated with an AC circuit (i.e., a circuit having an alternating voltage source). But the major problem with using an AC source is that the resonance frequency of the source (the frequency at which the AC source switches the circuit on and off) is not the same as the resulting resonance frequency of the transformer (the frequency at which the transformer coils pulsate). In order to gain the maximum output voltage, these two resonant frequencies need to be made equal in a process known as tuning of a transformer. This tuning of a circuit needs to be done manually by adding some form of external resonance generator to the circuit or by adding some extra load to the transformer via a capacitor (see figure 8 below).

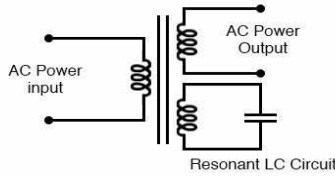


Figure 5: A capacitance is added to increase the load of the transformer in order to match the frequency of the transformer coils to that of the AC supply.

We will discuss why the tuning of the transformer is important later in this section. However, in the case of a DC circuit (like the slayer exciter circuit), the resonance can be generated using a transistor (which acts as a switch to rapidly turn on and off the circuit). In this case, the transformer ends are connected to the transistor and the resonant frequency of the transformer coils is equal to the resonant frequency of the transformer coils. In other words, the transformer is already auto-tuned! Hence, there is no need for the extra hassle to manually tune the circuit. This is indeed what makes a slayer exciter circuit unique in its working and distinguishes it from other types of Tesla coils. But why do we need to tune the transformer in the first place? Let's look at a famous analogy to understand this. Suppose we have a simple pendulum (a bob suspended by a string; see figure 9 below).

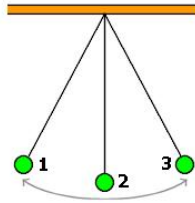


Figure 6: A simple pendulum. The bob (green) will reach maximum height only if we keep applying forces at points 1 or 3.

Our problem here is that we want to create the maximum possible output, i.e., we want the pendulum bob to reach the maximum height possible. Now imagine the pendulum was already oscillating at a certain frequency (but the bob was not reaching the maximum possible height). In order to maximise the height of the bob, we need to apply a force to it. If we think about it deep enough, we will realize that we can't apply the force at any random time. To generate the maximum height, the force needs to be applied when the bob reaches the extreme points in its trajectory (points 1 or 3 in figure 9). That's the only way the bob can efficiently reach the maximum height. If we apply a force when it is at the equilibrium point (coming towards us or going away from us; point 2 in figure 9), the force applied and the oscillating frequency of the spring won't be in sync, and the result will not be maximised. In this analogy, the oscillating frequency of the pendulum is analogous to the resonant frequency of the AC source (in case of an AC circuit) or the resonant frequency of the transistor (in case of a DC circuit); and the force we apply to the pendulum is analogous to the resonant frequency of the transformer coils.

One can at least gain an intuition as to why the resonant frequencies need to be equal (i.e., the transformer needs to be tuned) in order to generate the maximum possible output voltage, from the analogy discussed above. This discussion entails all the necessary theory required to move on and perform an experimental analysis of it.

3 Making a Physical Model of the SEC⁵

While the functioning of a slayer exciter is quite simple to understand, to actually make a physical model requires a significant amount of cautiousness and patience. The following is the process we followed to create the entire slayer exciter physical model⁶:

- Gather basic circuit components like n-channel MOSFETs, LEDs, zener diodes, resistors, copper wires, and 9V batteries.
- Use a plywood board to establish the base of the set-up.
- Take a PVC pipe and wind a single strand copper wire around it (approx. 400 windings). This makes the secondary coil of our transformer. This requires a lot of patience, because the winding needs to be perfect in order to make the circuit function as expected.
- Take a thicker copper wire and wind it around the secondary coil (approx. 3-5 windings). Do this as shown in figure 3.
- Connect all the components together to form the circuit shown in figure 7 below (we will explain how these connections are made and how the circuit works later in the report). Use a breadboard if necessary.

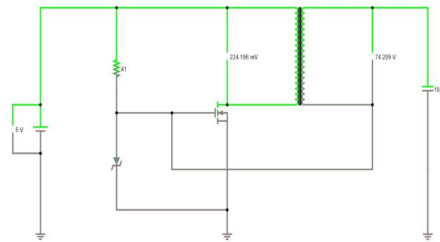


Figure 7: Basic schematic of the slayer exciter.

- Switch on the battery source.
- Bring a small piece of conducting material close to the transformer. Corona discharges may be observed. Corona discharges are the violet sparks one can see due to the polarization of air surrounding the high voltage transformer. The violet colour is due to the ionization of nitrogen molecules in the air. So, if we bring a conducting material close to the coil, we see a violet spark (corona discharge) between the coil and the conducting material. This step demonstrates the working of our physical slayer exciter circuit.

4 Simulating the SEC

Making the physical model had its own limitations. There was no way we could verify the equation of a transformer (equation 8) using the low-cost physical model, because the measurements would have had a lot of uncertainty, and the results might have been inaccurate. Therefore, we decided to verify the equations graphically using data from an online simulation called Falstad Circuit Applet [1]. This applet is a simulation software based on JavaScript and is very beneficial to analyze any kind of circuit.

⁵SEC will be used as a substitute for the Slayer-Exciter Circuit.

⁶This method is probably the most preliminary one (or a low-cost one), and can be vastly improved upon, using better instrumentation.

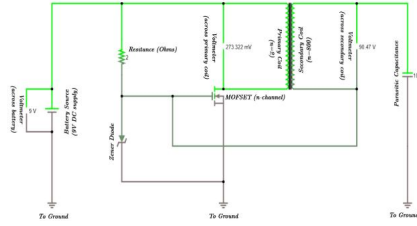


Figure 8: A simulated version of the slayer exciter circuit.

Figure 8 above, shows the final simulated version of the slayer exciter. Let us understand the flow of current in this circuit, with the primary aim of understanding the roles of the different components in the circuit. In figure 9 below, when the battery (B) is turned on, the resistor R drives the current to the base of the transformer (A). Consequently, A turns on and drives the current into the primary coil (PC) of the transformer.

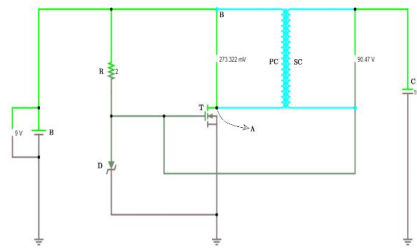


Figure 9: Circuit schematic for the slayer exciter.

The current is limited by the base current value. This creates a magnetic field, which induces an emf, and therefore a current in the secondary coil (SC) of the transformer. The secondary voltage will tend to grow larger. But the tiny parasitic capacitance on the output resists this change (although very small) against the rise of the output end; and so, in return, the voltage on the other end of the transformer goes down, pulling the base of the transistor low. The role of the diode (D) is very important to the circuit. Since we are using a DC input source, the diode prevents the base voltage to fall more than a minimum specific value below the ground. This in turn, step's up the output voltage of the secondary coil (SC). As a result, the transistor (T) turns off and the magnetic field starts to reduce. The base voltage increases and A turns on again and the whole cycle keeps repeating (until the input is cut off).

The first few questions that come in the mind after looking at the schematics is that why have we used a MOSFET [13] instead of a BJT (or for that matter, why have we used a n-p-n transistor rather than a p-n-p transistor?); or why have we not used an LED instead of a Zener diode? Well, the reason we used a MOSFET over a BJT, is because MOSFETs are suitable for high voltage switching circuits like the slayer exciter, because it has a very low drain-source. We saw how the current switching (or resonance) of a circuit helps to maximise the output voltage. The faster the switching process, the higher will be the output voltage. Now, the current in a transistor is due to the flow of majority charge carriers (electrons and holes). Electrons generally travel faster than holes; and since the majority charge carriers for n-p-n transistors are electrons, as opposed to p-n-p transistors (which have holes as the majority charge carriers), we have preferred to use a n-p-n transistor over a p-n-p transistor.

Coming to the diodes, the reason we did not use a simple LED is because the input voltage is quite high (almost 14V), and an LED will fuse out or burn out with a voltage supply as low as 4V! In contrast, a Zener diode has a much higher input resistance and can resist higher amounts of input voltage, which is the reason why we used a Zener diode.

Note: We have provided a link to the simulation text file in the references [14]. Instructions regarding how to initiate the simulation are given in the text file itself.

5 Analyzing the SEC Simulation Data

5.1 Why Perform Analysis?

Any kind of scientific report would be incomplete if it doesn't provide some tangible results. The physical model of the slayer exciter only serves the purpose of demonstrating its working. But that does not help with any kind of numerical analysis of the circuit. What if we want to know how to maximise the voltage output of the circuit? There certainly isn't any way of doing that by just looking at the physical model or by looking at its applications. Of course, one could get voltmeters and ammeters and all kinds of output meters to get some kind of data. But what if one doesn't have all these resources? Well, for that very reason, we sought out for some technique using which we could perform numerical analysis without need of any kind of voltmeters or ammeters or stop-clocks. The best way of doing so was by using the computer simulation we designed in the previous section. We collected the data from the simulation, embedded it into MATLAB, and generated graphical outputs for better visualization.

5.2 What Kind of Analysis?

To serve the purpose of verifying theory, we have decided to plot a graph of how the secondary output voltage varies with time. We will also verify whether the ratio of primary and secondary voltages is equal to the turn ratio of the coil. Barring these, our primary goal is to find an equation that will tell us how to maximise the output voltage by adjusting different parameters in the circuit like resistance, input voltage, inductance, turn ratio and the parasitic capacitance. Lets first see how the output voltage will vary with increasing time.

5.3 Evolution of Output Voltage with Time

We saw in previous sections that the transistor and the transformer have resonant frequencies, which results in the rapid pulsating of current in the circuit. This means that the current, and therefore the voltage change directions as time passes. If we start at time $t = 0s$, and observe the change in voltage, we must expect that the voltage traces out a sine curve. Table 1 shows the data for secondary output voltage (V_S ; in V) w.r.t. time (t ; in s), and table 2 shows the values of other parameters, for which the readings were taken.

Time (s)	Voltage (V)	Time (s)	Voltage (V)	Time (s)	Voltage (V)	Time (s)	Voltage (V)
0	0	12.002	155.175	24.045	-36.5	36.041	-146.464
1.004	16.395	13.006	151.631	25.253	-59.69	37.013	-137.803
2.042	38.879	14.003	145.094	26.005	-74.618	38.005	-126.28
3.015	59.205	15.009	135.584	27.019	-93.41	39.027	-111.827
4	78.643	16.039	122.997	28.02	-110.061	40.056	-94.018
5.012	97.023	17.016	108.662	29	-124.242	41.032	-77.014
6.089	114.401	18.058	91.077	30.014	-136.401	42.017	-57.465
7.007	127.128	19.011	73.264	31	-145.549	43.008	-36.656
8.001	138.496	20.056	52.234	32.007	-151.962	44.022	-14.65
9.02	147.31	21.009	32.025	33.15	-155.517	45.096	8.981
10.01	152.948	22.004	10.395	34.011	-155.48	-	-
11.005	155.602	23	-11.371	35.027	-152.557	-	-

Table 1: Data for V_S vs t

Parameter	Value
Resistance	22Ω
Capacitance	$10\mu F$
Primary Inductance	5H
Input Voltage	10V
Turns Ratio	1000

Table 2: Values of constant parameters.

One can easily notice, by looking at the data sets, that the time intervals are not uniform. That is owing to one of the drawbacks of the simulation, that the readings need to be taken manually by pausing the simulation every now and then. Figure 10 below shows the plot of secondary voltage w.r.t. time. As we expected, the nature of the plot is that of a sine curve. Time (s) is plotted on the x-axis and the secondary voltage (V) is plotted on the y-axis.

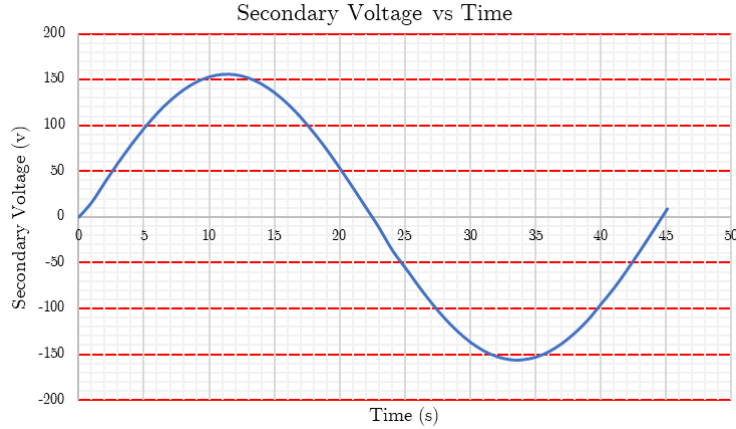


Figure 10: Plot of secondary output voltage versus time elapsed. The nature of the graph is same as that of a sine curve.

An important thing we can infer from figure 10 is that the transformer takes about 22 seconds to maximise the input voltage from 10V to approximately 156V. The graph also comes out to be symmetrical about the time axis as should be expected from a sine curve of a quantity varying with time. Further, we can say that the curve must represent the equation,

$$V_S = k \sin t \quad (9)$$

Here, V_S is the secondary output voltage, t is the time elapsed, and k is the proportionality constant, which will be a combination of the other constant parameters listed in table 2. Note that figure 10 shows only one cycle of resonance in the circuit. This cycle will keep repeating until the input source is switched off.

5.4 Voltage Ratio versus Turn Ratio

According to equation 8, the ratio of secondary to primary voltages of the transformers is proportional to the ratio of the number of turns in secondary to primary coils (i.e. the turn ratio). Table 3 shows the data for voltage ratio and transformer turn ratio, and table 4 shows the values of other constant parameters. The voltage ratio values are not exactly equal to the turn ratio. This is, again, because the readings need to be taken manually by pausing the simulation each time.

Voltage Ratio $\left(\frac{V_S}{V_P}\right)$	Turns Ratio $\left(\frac{n_S}{n_P}\right)$
100	100.708
200	200.197
300	300.296
400	400.398
500	500.499
600	600.593
700	700.693
800	800.799
900	901.239
1000	1000.998

Table 3: Data for voltage ratio and turn ratio.

Parameter	Value
Resistance	22Ω
Capacitance	$10\mu F$
Primary Inductance	4H
Input Voltage	5V

Table 4: Values of constant parameters.

Figure 11 below shows the plot of turn ratio versus voltage ratio for the transformer. The curve is a straight line of the nature $y = mx + c$.

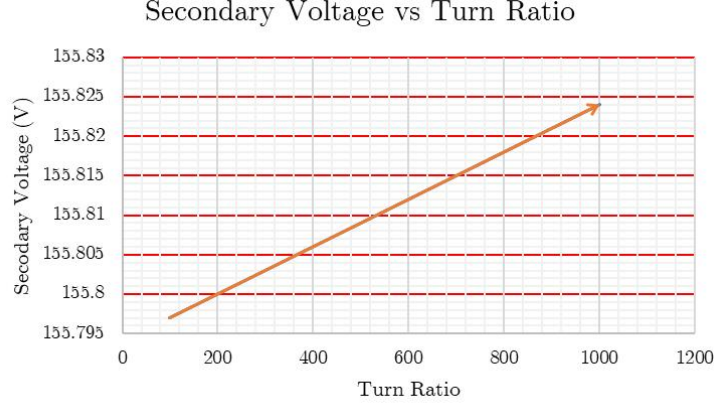


Figure 11: Plot of voltage ratio vs turn ratio.

The relation between voltage ratio and turn ratio that we get from figure 11 is shown below in equation 10.

$$\frac{V_S}{V_P} = 0.992 \frac{n_S}{n_P} \approx \frac{n_S}{n_P} \quad (10)$$

The minor error may be due to the reasons stated before. The analysis upto this point, helps to verify already existing theory. Now, we will shift our focus towards the main goal of finding an equation to maximise output voltage of the slayer-exciter transformer.

6 Finding an Equation to Maximise SEC Output Voltage

As aforementioned, the main purpose of the simulation is to arrive at an equation, which can tell us (approximately, if not exactly) how we could possibly maximize the output voltage for a given input voltage. Apart from time (t ; in s) and input voltage (V_i ; in V), there are a bunch of other parameters which may or may not affect the output voltage. These are the inductance of the primary coil (\mathcal{L}_P ; in H), parasitic capacitance (C ; in μF), circuit resistance (R ; in Ω), and the turn ratio $\left(\frac{n_S}{n_P}\right)$. Let's see how the output voltage varies with each of the above-mentioned parameters, and then we can possibly arrive at an equation that relates the output voltage (V_S ; in V) to L_P , C , R and $\frac{n_S}{n_P}$.

6.1 Variation of V_S with \mathcal{L}_P

From equation (7), we can say that the ratio of secondary and primary voltages is same as the ratio of primary and secondary inductance. Voltage is measured in volts (V) and inductance is measured in Henries (H).

$$\frac{V_S}{V_P} = \frac{\mathcal{L}_S}{\mathcal{L}_P} \quad (11)$$

Combining equation (11) with equation (8),

$$\frac{V_S}{V_P} = \frac{n_S}{n_P} = \frac{\mathcal{L}_S}{\mathcal{L}_P} \quad (12)$$

Now let us understand why increasing the primary inductance leads to an increase in the secondary voltage even if the two quantities are not related in any way. Suppose we increase \mathcal{L}_P in equation (12). This won't have any effect on n_S , n_P , or \mathcal{L}_S . But since \mathcal{L}_P is increased, the voltage across the primary V_P will also increase. Since n_S , n_P and \mathcal{L}_S remain constant, the only way equation (12) is satisfied, is if the secondary voltage (V_S). Hence, even though the primary inductance (\mathcal{L}_P) and secondary output (V_S) are not related in any way, to keep the ratio relation constant, V_S increases when \mathcal{L}_S is increased and vice-versa. Table 5 shows the data collected for output voltage and primary inductance and table 6 shows the values for other parameters.

Secondary Voltage (V)	Primary Inductance (H)
69.746	1
155.788	5
220.268	10
269.741	15
311.453	20

Table 5: Data for secondary voltage and primary inductance.

Parameter	Value
Resistance	22 Ω
Input Voltage	10V
Capacitance	10 μF
Turns Ratio	1000

Table 6: Values of constant parameters.

Figure 12 below shows the plot of V_S vs \mathcal{L}_P . The primary inductance is plotted on the y -axis and the output voltage on x -axis. The result is as expected. The secondary voltage increases with the primary inductance.

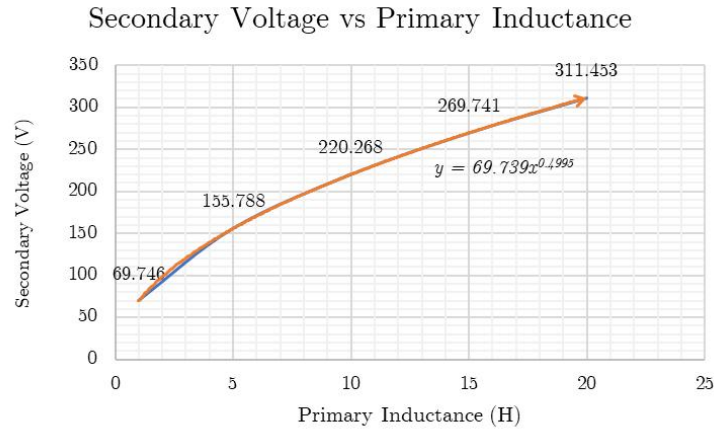


Figure 12: Plot for secondary voltage versus primary inductance. The orange curve represents the most accurate trendline. The blue curve is the original plot.

The mathematical relation between V_S and \mathcal{L}_P , comes out as,

$$V_S = 69.739\mathcal{L}_P^{0.4995} \approx 70\sqrt{\mathcal{L}_P} \quad (13)$$

Here, V_S is the output voltage at secondary and \mathcal{L}_P is the inductance of the primary coil.

6.2 Variation of V_S with C

As discussed before, a parasitic capacitance C (in μF) exists naturally between the secondary coil of the transformer and the ground. As we know, a capacitor stores electrical energy; and for doing so, if it needs to keep the charge Q across its plates constant, it needs to resist any increase in voltage. In other words, capacitance is a ratio of charge and voltage. Therefore, for a given charge, voltage decreases with increasing capacitance.

$$C = \frac{Q}{V_S} \quad (14)$$

Since the parasitic capacitance is connected to the secondary transformer, it resists any change in the secondary output voltage (V_S) beyond a certain maximum value. Owing to this reasoning, we must expect that V_S decreases with increasing C . More the capacitance, more will be the resistance against changing voltage, and hence, lesser will be the secondary voltage. Table 7 shows the data for capacitance C (in μF) and secondary voltage V_S (in V); and table 8 shows the values of other constant parameters.

Capacitance (μF)	Secondary Voltage (V)
1	279.833
2	213.235
3	179.421
4	157.064
5	140.666
6	129.177
7	119.754
8	111.801
9	105.676
10	100.264

Table 7: Data for capacitance and secondary voltage.

Parameter	Value
Input Voltage	5V
Resistance	22 Ω
Primary Inductance	5H
Turns Ratio	1000

Table 8: Values for other constant parameters..

Figure 13 below shows the plot of variation of V_S with C . The blue curve is the original plot and the orange curve is the most accurate trend-line. Clearly, as expected, the secondary voltage decreases with increasing capacitance.

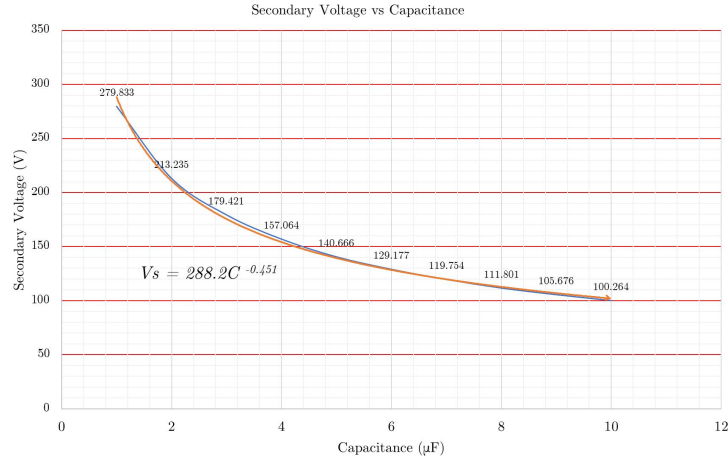


Figure 13: Plot of secondary voltage versus circuit resistance

The relation between V_S and C is given from figure 13, by the equation,

$$V_S = 288.2C^{-0.451} \quad (15)$$

In equation (15), V_S is the secondary voltage and C is the value of the parasitic capacitance. The capacitance may again vary with the separation between the secondary coil of the transformer and the ground.

6.3 Variation of V_S with R

We know that the voltage is inversely proportional to resistance. Hence, we expect that the secondary voltage (V_S) will also be related similarly to the circuit resistance (R). Table 9 shows the data for circuit resistance (in Ω) and secondary voltage (in V); and table 10 shows the values of other constant parameters.

Secondary Voltage (V)	Resistance (Ω)
157.145	10
155.959	20
155.257	30
154.779	40
154.395	50
154.076	60
153.822	70
153.576	80
153.352	90
152.921	100

Table 9: Data for secondary voltage and circuit resistance.

Parameter	Value
Input Voltage	10V
Capcittance	$10\mu F$
Primary Inductance	5H
Turns Ratio	1000

Table 10: Values of constant parameter

Figure 14 below shows the plot for V_S versus R . The variation with resistance is not exactly of the “inverse”

nature, which might be because the resistance of the entire circuit is not taken into consideration. Only the primary resistance provided by the resistor has been considered.

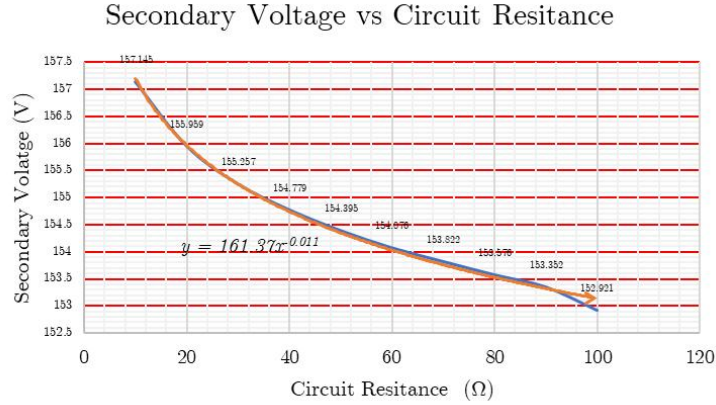


Figure 14: Plot of secondary voltage versus circuit resistance. The blue line is the original plot and the orange one is the most accurate trendline.

The relation between V_S and R is described by the sec,

$$V_S = 161.37R^{-0.011} \quad (16)$$

Here, V_S is the secondary voltage and R is the circuit resistance.

6.4 Variation of V_S with $\frac{n_S}{n_P}$

According to equation (8), for a given primary voltage (V_P), the secondary voltage (V_S) will increase with the turn ratio of the transformer ($\frac{n_S}{n_P}$), where n_S and n_P are the number of turns of the secondary and primary coils respectively. Table 11 shows the data for turn ratio of the transformer and the corresponding voltage produced at the secondary coil; and table 12 shows the values for other constant parameters.

Secondary Voltage (V)	Turns Ratio
155.797	100
155.8	200
155.803	300
155.806	400
155.809	500
155.812	600
155.815	700
155.818	800
155.821	900
155.824	1000

Table 11: Data for secondary voltage and transformer turn ratio.

Parameter	Value
Resistance	22Ω
Capacitance	$10\mu F$
Primary Inductance	5H
Input Voltage	5V

Table 12: Values of constant parameters.

Figure 15 below shows the plot of secondary voltage versus turn ratio of the transformer. As expected, the relation is linear in nature, i.e., the secondary voltage increases with the turn ratio.

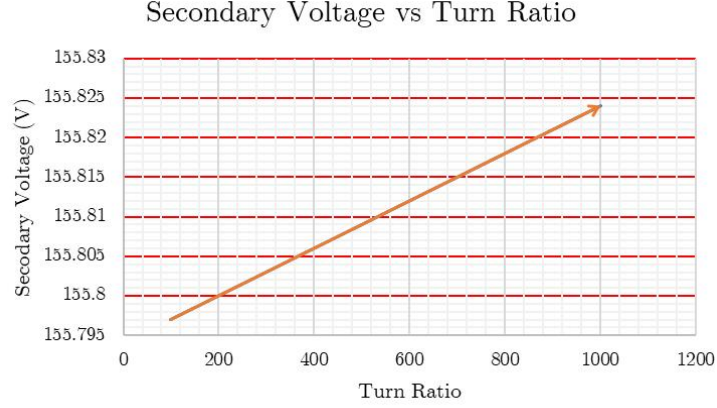


Figure 15: Plot of secondary voltage versus transformer turn ratio.

The relation between the secondary voltage and turn ratio is given from figure 15, by the equation,

$$V_S = 3 \times 10^{-5} \left(\frac{n_S}{n_P} \right) \quad (17)$$

Here, V_S is the secondary voltage and $\frac{n_S}{n_P}$ is the turn ratio of the transformer.

6.5 Equation of the SEC

In sections 6.1. through section 6.4., we have arrived at approximate relations between the secondary voltage (V_S) and other parameters like primary inductance (L_P), parasitic capacitance (C), circuit resistance (R) and transformer ratio ($\frac{n_S}{n_P}$). We are now in a position to derive an equation from our experimental findings. From equations (13), (15), (16) and (17), we see that,

$$\begin{aligned} V_S &\propto \sqrt{\mathcal{L}_P} \\ V_S &\propto C^{-0.451} \\ V_S &\propto R^{-0.011} \\ V_S &\propto \frac{n_S}{n_P} \end{aligned}$$

Combining these, we get,

$$\begin{aligned} V_S &\propto \frac{n_S}{n_P} R^{-0.011} C^{-0.451} \sqrt{\mathcal{L}_P} \\ \Rightarrow V_S &= k \frac{n_S}{n_P} R^{-0.011} C^{-0.451} \sqrt{\mathcal{L}_P} \end{aligned} \quad (18)$$

In equation (18), V_S is the secondary voltage, \mathcal{L}_P is the primary inductance, R is the circuit resistance and $\frac{n_S}{n_P}$ is the transformer turn ratio. The proportionality constant (k) depends on the accuracy of measurement. In other words, the more accurately we measure the different parameters, the more accurate equation (18) gets. Equation (17) is the equation we required. We call this equation the “SEC Equation”. One can call it anything really, because it’s just a name! This equation tells us how we can maximise the output voltage at the secondary coil of transformer, for a given source voltage, by varying different parameters of the SEC.

7 The Apparent Error in the SEC Equation

Before we get too excited by equation (18), it would be better to see how approximate the equation is to the actual expected equation. First of all, what is the actual expected equation? Well as we just discussed in previous sections (equations (6), (12) and (14)), the secondary voltage should vary with other parameters as follows:

$$\begin{aligned} V_S &\propto \mathcal{L}_P \\ V_S &\propto C^{-1} \\ V_S &\propto R^{-1} \\ V_S &\propto \frac{n_S}{n_P} \end{aligned}$$

Combining these we get,

$$\begin{aligned} V_S &\propto \frac{n_S}{n_P} R^{-1} C^{-1} \mathcal{L}_P \\ \Rightarrow V_S &= k \frac{n_S}{n_P} R^{-1} C^{-1} \mathcal{L}_P \end{aligned} \tag{19}$$

Certainly, we can see that equation (18), which we got using the simulation is not a good approximation of the actual equation (19). The most immediate question that comes to mind is why does this difference exist between equation (18) and equation (19)? Well that might be because that measurement using the simulation is a highly error-prone process. Measurement (as stated before) needs to be done manually by pausing the simulation every now and then, and noting down the various parameter values. As mentioned previously, the more accurate the measurement, the more equation (18) will start to look like equation (19).

8 Potential Sources of Error

There are a number of logical precautions and potential sources of error, that may occur while preparing the physical model, as well as the simulated model.

8.1 Physical Model

- The connections may be improper or loose.
- Components may be defective.
- Circuit might get overheated if kept running for a long time. Due to this, components may get damaged.

8.2 Simulated Model

- The simulation has no means to automatically export data. Hence, data has to be obtained manually by pausing the simulation frequently. This may result in some minor errors while measurement of parameters.
- Components in the simulation may be improperly connected. For instance, the Zener diode may be connected in forward bias.

9 Results and Concluding Remarks

- According to the data analysis from simulation, for a given source voltage, the secondary voltage changes with parasitic capacitance, circuit resistance, primary inductance and turn ratio as follows:

$$V_S = k \frac{n_S}{n_P} R^{-0.011} C^{-0.451} \sqrt{\mathcal{L}_P}$$

- According to theory, for a given source voltage, the secondary voltage changes with parasitic capacitance, circuit resistance, primary inductance and turn ratio as follows:

$$V_S = k \frac{n_S}{n_P} R^{-1} C^{-1} \mathcal{L}_P$$

- The output voltage secondary varies as a sine function of the time elapsed.

$$V_S = k \sin t$$

- The proportionality constant k in the above equations depends on the accuracy of measurement of various parameters.

References

- [1] Falstad Circuit Simulation Applet: <http://www.falstad.com/circuit/circuitjs.html>
- [2] Feynman, R. P., R .B. Leighton, and M. Sands, 1965, The Feynman Lectures on Physics, Vol. II: the Electromagnetic Field, Addison-Wesley, Reading, Massachusetts.
- [3] Griffiths, David J. (2013). Introduction to Electrodynamics (4th ed.). Boston, Mas.: Pearson.
- [4] Panofsky, W. K., and M. Phillips, 1969, Classical Electricity and Magnetism, 2nd edition, Addison-Wesley, Reading, Massachusetts
- [5] Jackson, John D. (1998). Classical Electrodynamics (3rd ed.). New York: Wiley.
- [6] David M Cook (2002). The Theory of the Electromagnetic Field. Mineola NY: Courier Dover Publications. p. 335 ff.
- [7] James Clerk Maxwell, "A Dynamical Theory of the Electromagnetic Field", Philosophical Transactions of the Royal Society of London 155, 459–512 (1865).
- [8] Courant, Richard; Hilbert, David (1989), Methods of Mathematical Physics, New York: Interscience Publishers.
- [9] Arfken, George B.; Weber, Hans J. (1995), Mathematical methods for physicists (4th ed.), San Diego: Academic Press.
- [10] Boas, Mary L. (2006), Mathematical Methods in the Physical Sciences (3rd ed.), Hoboken: John Wiley & Sons.
- [11] Hassani, Sadri (1999), Mathematical Physics: A Modern Introduction to Its Foundations, Berlin, Germany: Springer-Verlag.
- [12] Butkov, Eugene (1968), Mathematical physics, Reading: Addison-Wesley.
- [13] Wann, Clement & Noda, Kenji & Tanaka, Tetsu & Yoshida, Makoto & hu, Chenming. (1996). A comparative study of advanced MOSFET concepts. Electron Devices, IEEE Transactions on. 43. 1742 - 1753. 10.1109/16.536820.
- [14] Code: <https://drive.google.com/file/d/1xnTnIfxUGWvO4511rK81KHAQGvHJ5WlR/view?usp=sharing>