

DECH: Software Package for Astronomical Spectral Data Processing and Analysis

Gazinur A. Galazutdinov^{1,2,*}

¹*Federal State Budget Scientific Institution Crimean*

Astrophysical Observatory of RAS, Nauchny 298409, Crimea

²*Special Astrophysical Observatory, Russian Academy of Sciences, Nizhnii Arkhyz, 369167 Russia*

The article provides a brief description of the software package DECH for processing and analysis of astronomical spectra. DECH supports all stages of processing and analysis of spectral data, including image preprocessing, spectra extraction (including those with a variable tilted slit), wavelength calibration by a two-dimensional polynomial, continuum normalization (manual or automatic), measurement of equivalent widths and radial velocities in various ways, cross-correlation analysis, etc. The DECH software package is actively used by astronomers from different countries and continues to be improved. In particular, utilities for processing and analysis of data from the high-resolution fiber-feed echelle spectrograph installed at 6-m telescope of Special Astrophysical Observatory of Russian Academy of Sciences were added in the latest version. Software provides high-precision measurements of radial velocities, including those for detection of extraterrestrial planets.

Keywords: methods: data analysis; techniques: imaging spectroscopy, radial velocities; software: development, public release

1. INTRODUCTION

The first version of the software package DECH¹ was created in the early 90s of the last century, when the digital radiation detectors such as panoramic photon counters, charge-coupled devices (CCDs) with all their advantages and disadvantages began to be actively introduced into astronomical spectroscopy. DECH is a highly specialized tool for solving problems of astronomical spectroscopy, in contrast to universal systems for processing astronomical data, such as, for example, IRAF (Tody 1986) or MIDAS (Banse et al. 1983).

The software package DECH is the Microsoft Windows OS—oriented, which is a significant difference between DECH and other popular programs. However, using MS Windows emulators you can bypass this limitation. In particular, in the environment of such emulators, DECH is fully functional in operating systems Linux and Mac OS. The DECH package was created in frame of the concept "an astronomer writes a program for astronomers" which allowed to achieve a sufficiently high level of interface friendliness: mainly, a work in the command line takes place only during the preprocessing of astronomical images, before the spectra extraction. The extraction and subsequent analysis of the spectra is carried out in the “desktop” mode, when all necessary tools are collected in one place and in the frames of one or two large integrator programs, almost without using the command line. In contrast to fully automatic processing programs (the so-called pipeline), we have abandoned the “black box” concept, in which all intermediate data remain outside of user control (Fig. 1).

DECH has become a popular tool among astronomers in the countries of former Soviet Union and abroad for more than 20 years of use. The development of a software package continues both to correct the identified errors and to solve the new astrophysical problems. This paper describes the main functions of DECH, with a more detailed description of the processing data obtained using a new fiber-feed echelle spectrograph for the 6-m BTA telescope of the Special Astrophysical Observatory (Valyavin et al. 2014).

* runizag@gmail.com

¹ The program that can be freely distributed, available for download <http://www.gazinur.com/Download.html>. The installation instructions—<http://www.gazinur.com/installation.html>

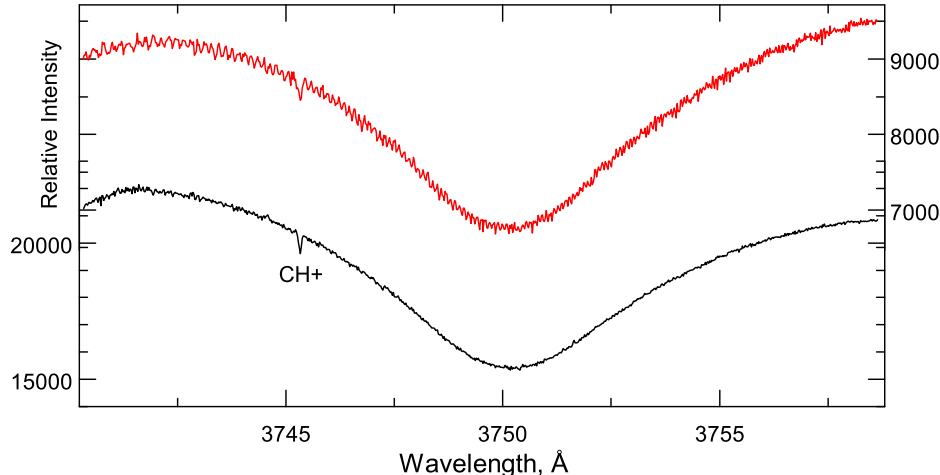


Figure 1. Comparison of processing results obtained using the pipeline UVES spectrograph (top) with those obtained using DECH (below). The sawtooth structure which is seen in the first spectrum probably resulted from an erroneous determination of the order limits in the direction across the dispersion.

2. OBSERVATIONAL DATA

The spectral image—a table with the number of rows and columns which are corresponding or a multiple (if we use software pixel binning) to the physical CCD matrix dimension is the result of observations on modern echelle spectrographs equipped with CCD-type light detectors. Each CCD matrix cell (pixel) works as an independent radiation detector. Properties of CCD-type light detectors such as heterogeneity of pixel sensitivity, light interference on thin films of the device, etc, make it necessary to obtain additional calibration data: bias, an image taken on a CCD without actual exposure time and containing only an unwanted signal from the electronics that process the sensor data; flat-field, a light source with a continuum spectrum, i.e. without spectral lines; comparison spectrum for building a wavelength scale—the emission spectrum of a thorium-argon lamp (ThAr) is usually used in high-resolution spectroscopy.

The potentially high quality of the observational material may be lost due to insufficient or poor quality of calibration data. A few recommendations that will allow you to achieve optimal results, including in unstable weather conditions:

- bias—images without exposure (in fact, very short exposure values are used, for example, 0.1 sec), without illumination of the light detector. The number of bias images is determined by the level of the desired signal-to-noise (S/N) ratio. As a rule, with stable operation of the CCD detector, the average of 10–20 images provides sufficient quality of the average bias image. However, for tasks that require a very high signal-to-noise ratio (800–1000 or more), the number of bias images should be increased to 100–150 (depending on the parameters of the light detector). The ZEROC procedure is used to obtain an average of several images with approximately the same signal level. The procedure is performed on the command line, the original images are cleaned using a median filter, after which the average value of the cleaned images is calculated;;
- Flat field spectrum (flat field) — a continuum like spectrum of a laboratory light source, normally the so-called hollow cathode lamps. The averaged spectrum of the flat field should have a S/N ratio at least not lower than that of the observed objects over the entire wavelength range. Particular attention should be paid to the blue part of the spectrum, where the efficiency of a laboratory light source normally is relatively low. Usually, at least 10 flat field images are

required to obtain an average with a sufficient S/N level over the entire range, but if the S/N should be about 800–1000 or higher, the required number of exposures can reach 100 or more. Dividing of the original spectra (or images) by an averaged flat-field makes it possible to get rid of the effects of inhomogeneity in the sensitivity of individual pixels and interference effects (fringes), which are especially strong in the red wavelength region of spectrum;

- The optimal exposure time. As a rule, the special online calculators are used to determine the exposure time of astronomical objects, e.g. UVES ETC². However, the exposure time calculated using such a calculator is often far from optimal, both due to inaccurate initial data and weather-related reasons. The following approach is recommended: first of all you should get a minute or second exposure depending on the brightness of the subject. Use the CROSSCUT procedure (performed on the command line) to estimate the level of integration achieved with a short exposure, then calculate the optimal exposure time necessary to achieve roughly 70 percent of the maximum possible integration level of the light detector in use. The maximum value is usually around 65000, in which case a value around 40000 – 45000 can be considered optimal. Do not forget to subtract the level of the bias during assessing the integration level of a short exposure;
- Cosmic particles. The sensitivity of CCD detectors to cosmic particles makes it impossible to obtain arbitrarily very long exposures. For efficient cleaning of images from traces of the cosmic particles, it is recommended to observe each object at least twice with the same exposure. The duration of each exposure should not exceed 45–60 minutes;
- Telluric lines. To solve some scientific problems, it becomes necessary to investigate the spectral lines which are located in the region of strong telluric lines (see for example Galazutdinov et al. (2017)). There are two ways to remove telluric lines: either using specialized programs that simulate absorption lines originated in the Earth's atmosphere (for example, *Molecfit* (Smette et al. 2015), *TelFit* (Gullikson et al. 2014) etc.), or using the telluric standard ("divisor") spectrum of a hot star without interstellar reddening (for example HD116658 (Spica) or HD120315), preferably with high rotation velocity. Unfortunately, as a rule, the model spectra of telluric lines, do not always provide an acceptable quality of removal of saturated telluric lines. The model method does not give an acceptable result if the S/N ratio is more than 200. Dividing by the spectrum of the telluric standard can provide a high quality of the cleaned spectrum if the following conditions are observed: the spectrum of the object under study and the spectrum of the standard were obtained at approximately the same zenith distances; the spectrum of the standard does not have lines with a complex profile in the wavelength region of interest. Obviously, the spectrum of the standard should have a high S/N—preferably at least 20 percent higher than that of the object under study. The procedure for removing telluric lines is presented in the *DECH-FITS* module of the program package³. The procedure performs correction (if necessary) of the intensity of telluric lines and correction of their position if the spectra are slightly shifted relative to each other. Examples of the spectrum before and after cleaning can be seen in e.g. Galazutdinov et al. (2017).
- Spectrum for the wavelength calibration — a comparison spectrum. Usually, this is the spectrum of a thorium-argon lamp (ThAr). There are very strong lines of argon in the red spectral range. As a rule, they are saturated, so that even neighboring spectral orders can be affected. To avoid this effect, it is recommended to acquire 20 or more ThAr spectra with a relatively short exposure, and then to create an averaged image using the *ZEROC* procedure. This will make it possible to avoid the excessive influence of strong argon lines on neighboring orders, to achieve a good S/N ratio even for weak thorium lines, and at the same

² <https://www.eso.org/observing/etc/bin/gen/form?~INS.NAME=UVES+INS.MODE=spectro>

³ Option "Curve | Remove Telluric Lines" in the program *DECH95*

time to clear the spectrum of traces of cosmic particles. One can also successfully use the Solar spectrum to control the wavelength scale. To do this, one can, for example, carry out the spectrum of the reflected sunlight from a bright cloud or the Moon. The exact wavelengths of the solar spectrum lines are given by, e.g. Allende Prieto and Garcia Lopez (1998).

3. IMAGE PREPROCESSING

Data preprocessing involves obtaining the average of the bias, the flat field, and the comparison spectrum images, and then subtracting the first from all other images. To obtain an average image of any type, the procedure **ZEROC** is used. To subtract the average image bias from all the others, the procedure **SUB** should be used. The procedure **CROSSCUT** is used for preliminary control of the initial data homogeneity.

An important note regarding the flat-fielding: the fact is that the correction of the spectra of astronomical objects using the flat-field spectrum can be performed in two ways—dividing the object images by a flat-field image during image processing or by dividing of the extracted spectra after the spectral extraction stage. The first method should be used for slit spectrographs. This is due to the variable distribution of the signal over the height of the slit from object to object. A typical example—UVES or MIKE spectrographs, where the slit height is significant, and the width of the spectral orders (in direction across the dispersion) varies depending on the object brightness, the quality of the image on the sky, the tracking accuracy, and other factors. The second method is preferable for fiber-feed spectrographs (including a high-resolution spectrograph at the 6-m telescope of the SAO RAS).

To take into account the flat-field in the first way, that is, before the spectra extraction, after subtracting the bias from the individual flat field images, one should obtain the average flat-field image (using the **ZEROC** program), then subtract the scattered light from it. To do this, one will have to determine the position and width of the spectral orders (see Section 4.1). The image must be normalized after subtracting the scattered light⁴. Dividing of the original images by the normalized flat field with the averaged bias already subtracted can be performed by **FLATC** or **IMARITH** programs.

Fiber-feed spectrograph data preprocessing, including the **FFOREST** spectrograph at the 6-m BTA SAO RAS telescope is performed in two stages. First, the average bias image have to be obtained for the subsequent subtracted of it from all other images, after that the extraction procedure can be performed.

4. EXTRACTION SPECTRA

The **DECH95** program is used to extract spectra from images. The procedure includes the following operations:

- building a mask, that is, determining the position (trajectory along the main dispersion direction) and the boundaries of the spectral orders (width across the dispersion);
- scattered light subtraction;
- extraction.

⁴ Procedure "Mask|Normalize apertures (Apnormalize)" in **DECH95** program

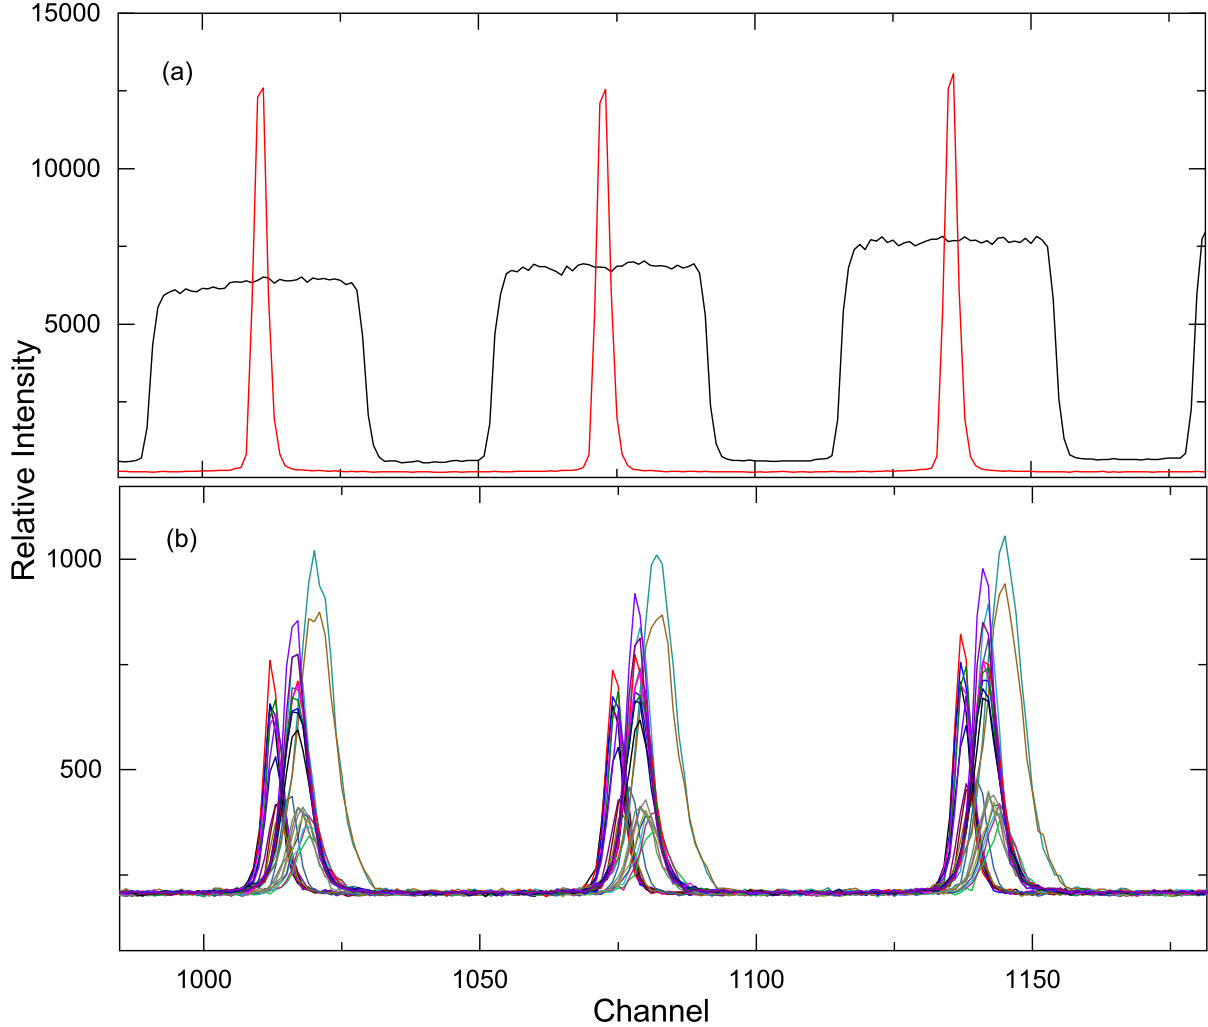


Figure 2. Fragments of the transverse sections of UVES spectrograph images. **(a)** – a flat field spectrum (wide orders) and special image spectrum ORDERREF serving for finding the position of spectral orders. **(b)** — a set of spectra of astronomical objects obtained during one night with the same spectrograph configuration. The variability in the position and shape of the spectral orders from object to object is clearly seen.

4.1. Building a mask

The mask is a table of information about the position and width of the spectral orders. In DECH the mask is given as a set of Chebyshev polynomial coefficients for each spectral order separately. The mask made using the DECH is written in the IRAF processing system format and can be used for spectrum extraction by IRAF tools, such as `apall` or `apsum`.

Fiber feed optic spectrographs are characterized by a high stability of the position of spectral orders; therefore, as a rule, one mask is sufficient for all images which are obtained in a fixed instrument configuration. The situation is more complicated for the slit spectrographs: both the position and the width of the spectral orders can change from object to object for the reasons indicated above. Therefore, a mask correction is needed for each individual image (Fig. 2b).

To construct the main mask, the best choice is spectral images of a flat field or special images carried out with the spectrograph's slit reduced in height, as it is done at the UVES spectrograph (Fig.

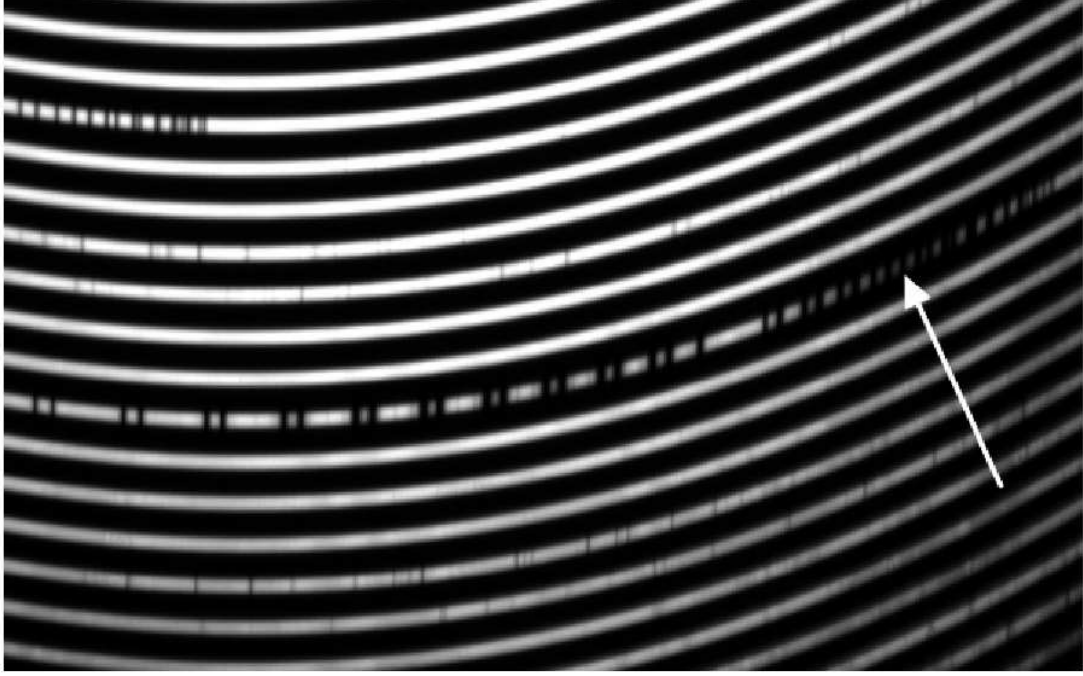


Figure 3. A fragment of the spectral image of an astronomical object. The arrow indicates the area of saturated telluric lines.

2a). Theoretically, to build a mask, it is allowed to use a well-integrated image of any object with a pronounced continuum spectrum, e.g. hot fast rotating main sequence OB stars. However, in this case, one may have problems with determining the position of spectral orders in areas with saturated telluric lines (Fig. 3). This may cause the need for interactive mask correction.

A "preliminary" mask is a set of curves approximately passing through the centers of the cross-sections of the spectral orders over the entire orders length. At the first stage, the orders' width is not determined. The center of the spectral order is a quite conditional term. It is not recommended to use a pixel with maximum signal as the center, in particular for spectra with a low S/N. The cross-sectional profile of the order is often not symmetrical. This is typical, for example, for slit spectrographs or spectrographs with an image slicer. Therefore, it is optimal to use the center of gravity as the center of the cross section of the order (as shown in equation 1). The equation defines the center of gravity of the spectral order m at the cross section through the pixels x . The summation is carried out along the vertical (it is perpendicular to the main dispersion) from the lower ($v1$) to the upper limit of the order ($v2$):

$$G_{mx} = \sum_{y=v1}^{v2} I_{xy} \times y / \sum_{y=v1}^{v2} I_{xy}, \quad (1)$$

where I_{xy} — the signal intensity in a pixel with coordinates x and y .

To create a "preliminary" mask it is necessary to determine the centers of gravity along each spectral order with a certain step⁵. It is usually, every 10–20 pixels along the entire length of the order. Then, an approximating curve is drawn through these centers for each order separately. As a rule, the Legendre or Chebyshev polynomial of 3–5 degrees is used. A spline approximation may be required in some rare cases.

⁵ Procedure "Mask |CreateMask" in the DECH95 program

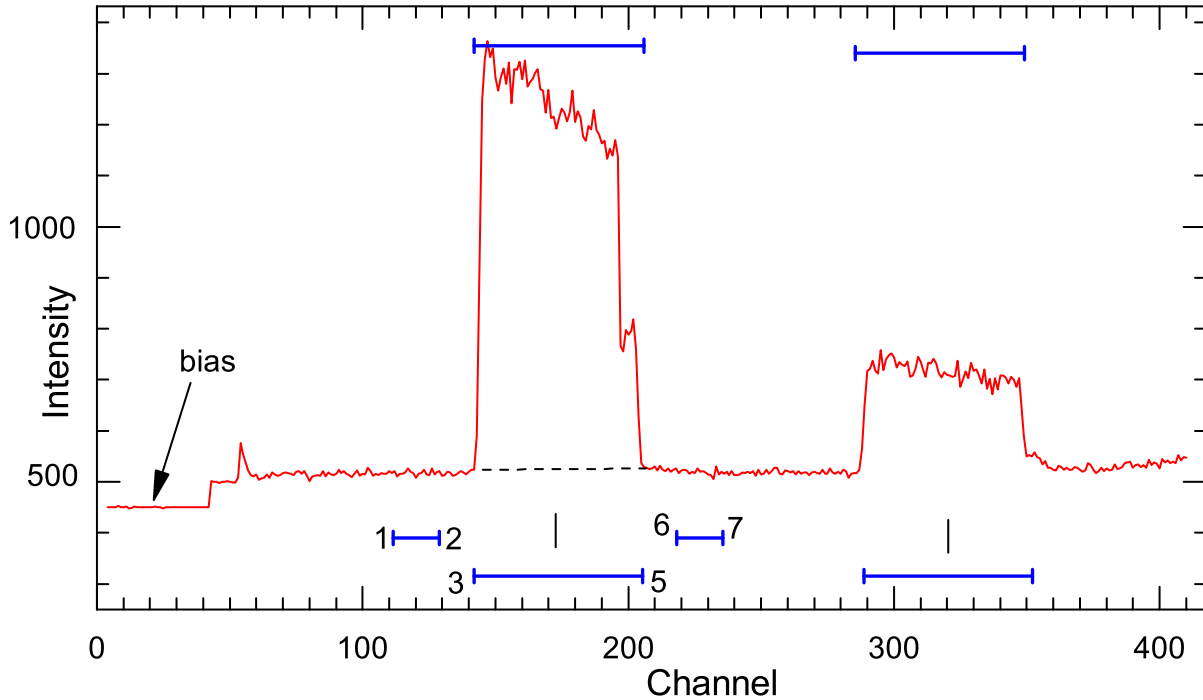


Figure 4. A fragment of the cross section of the echelle spectrum with two spectral orders. Bias level is marked. The boundaries of the left order (from 3 to 5) and the boundaries of two regions of inter-order minima to the left and right of the order are shown (numbers 1, 2 and 6, 7, respectively). The dashed line shows the level of the scattered light.

The next step involves determining the boundaries of the orders and the boundaries of the inter-order minima (Fig. 4). These procedures are performed in mask editing mode⁶. Incorrect definition of the order boundaries can lead to a sawtooth pattern or an unnecessarily low S/N ratio if the order width is insufficient or unreasonably increased. Incorrect determination of the boundaries of inter-order minima leads to errors in the subtraction of scattered light with fatal consequences for the quality of the extracted spectrum: it becomes impossible to correctly take into account the flat field; the intensities of the spectral lines and, accordingly, the equivalent widths will be distorted.

Automatic determination of the order boundaries in DECH is performed after the scattered light level has been determined. To do this, an approximating curve is drawn through the zones of inter-order minima in the mask editing mode. The type of the optimal approximating function is interactively determined. As a rule a broken curve (*PolyLine*) gives a good result. After having determined the level of scattered light, the option to automatically determine the boundaries of the orders becomes available. Automatic order width detection may not be correct for the orders with low S/N ratio. Usually, the manual correction of order boundaries and zones of inter-order minima is required for the first and last orders, where the S/N ratio is the lowest.

The resulting mask is saved in a special file in IRAF format with the possibility of subsequent changes. It is important to note that the type of functions approximating the scattered light distribution is generally not related to the mask. This information is used in the extraction step. The mask contains information only about the trajectory (shape) and the width of the spectral orders.

The scattered light is a two-dimensional function of a complex shape. To subtract the scattered light, at the first stage “carrier” curves are determined as passing through the zones of inter-order

⁶ Procedure "Mask | Edit" in the DECH95

minima in the direction perpendicular to the main dispersion. Such curves are built along the entire image with an equal step, normally, every 10 pixels. At the next stage, fitting curves are drawn through these “carriers” passing in the direction of the main dispersion through each line of an image. Normally, spline interpolation with preliminary smoothing of the initial data by seven points gives a good result.

Each order on the spectrum image of the BTA fiber-feed spectrograph has two sub-orders: one suborder serves to register an astronomical object, the second one to register the spectrum of a thorium-argon lamp. The latter one serves to control the stability of the spectrograph, which is necessary for accurate measurements of radial velocities. Therefore, to extract the spectra obtained using this spectrograph, it is necessary to have two masks: the first one for sub-orders with an astronomical object spectrum, the second for sub-orders with a comparison spectrum. It is not convenient to build a mask, when we use the images with two visible sub-orders. As it was mentioned above, it is more convenient to use the flat field spectrum without using the comparison spectrum channel. Such a mask, constructed from the flat field spectrum, can be used for the extracting the astronomical objects spectra. To create a mask for extracting the comparison spectrum, it is enough to shift the "stellar" mask by a fixed number of pixels to the left (in the FFOREST configuration for 2022) or to the right, depending on the arrangement of sub-orders in the images. This procedure is performed in the mask-edit mode ("Mask | Edit Mask") in DECH95 program.

4.2. Extraction

The spectrum in the conventional sense as a result of extraction is a two column table: the pixel number is in the first column and, the intensity — in the second one⁷. During the further processing, the pixel number is converted into a wavelength.

The extraction procedure includes subtracting the scattered light, taking into account the tilt of the slit (if it is necessary), and actually the spectrum extraction which is the signal summation in the direction perpendicular to the direction of the main dispersion, that is, along the width of the spectral order, within the boundaries defined by the mask and along the entire length of the order. Extraction is performed separately for each spectral order, the result is saved in a FITS format file. As mentioned above, in some cases, for example, for UVES spectra, the flat field is taken into account at the image processing stage. In such a case, scattered light subtraction must be performed prior to extraction. For this case, we use a mask. The sequence of actions is exactly the same as during extraction, with the difference that the scattered light subtraction trigger is turned on in the extraction procedure. The subtracted images of scattered light are saved in files with the "sub" suffix. In the same way, scattered light is subtracted from the averaged flat-field image. Then the flat field image is normalized⁸. After that, all images with scattered light subtracted are divided by the normalized flat field⁹.

There are two main methods of spectra extraction from echelle images: simple integration and the so-called optimal extraction (Horne, 1986). The summation is the simplest and fastest method. To extract the spectrum in vector form, the image data is summed in each column (across the direction of the main dispersion within order width) with equal weights at a given aperture:

$$F(x) = \sum_{y=v1}^{v2} I_{xy}. \quad (2)$$

⁷ Procedure "Extraction | Using mask... in the DECH95

⁸ Procedure "Mask | Normalize Apertures (Apnormalize)..." in the DECH95

⁹ Dividing the images can be performed in a command line using FLATC or IMARITH programs

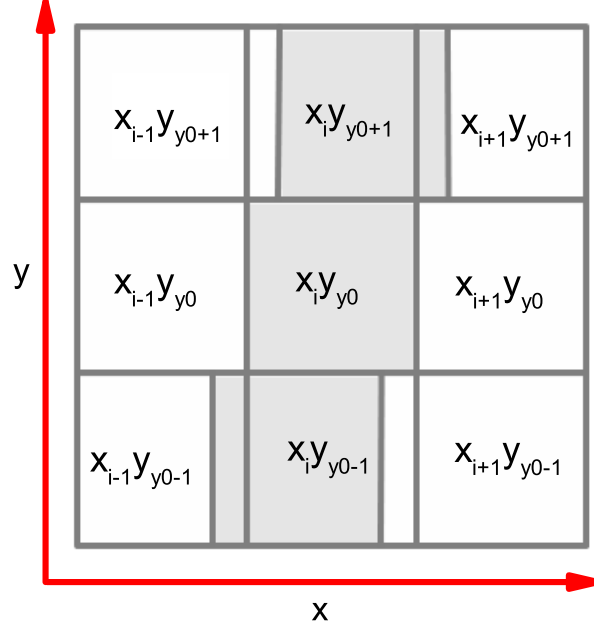


Figure 5. An example of signal distribution on the CCD matrix in the presence of a slit tilt. The gray color shows the projection of the inclined slit onto the CCD array.

The "optimal extraction" method was developed in the works of Horne (1986), Marsh (1989), Mukai (1990). The essence of the method lies in the fact that when we integrate the cross section of the spectrum, the weight of each pixel is preliminarily estimated: the lower the signal at the profile point, the lower its weight. This makes it possible to reduce the effect of pixels on the periphery of the cross-section profile. A more precise definition of the order bounds makes it possible to reduce the importance of applying optimal extraction. Indeed, when we integrate the spectrum, we are faced with a dilemma: on the one hand, it is desirable to have the integration aperture as wide as possible in order to capture the entire useful signal, but, on the other hand, at some distance, conditionally, far from the order center, the signal is already significantly noisy, and if we take into account this signal it can lead to a deterioration in resulting S/N ratio. To solve this problem, we must define a $P(x, y)$ profile that reflects the signal distribution in the order. An indispensable condition is the normalization of the profile within the framework of the integration aperture $\sum P(x, y) = 1$. The optimization itself consists of the subsequent redefinition of $P(x, y)$: for each y coordinate, the cut is approximated by, e.g. a polynomial, and this process is repeated, discarding points that deviate from the fitting curve by more than $k\sigma$ ($k = 2 \dots 3$), until all used points will be within $k\sigma$. However, the described optimal extraction scheme is really effective only when we work with spectra with a sufficient number of points in a profile, that varies slightly with wavelength. The optimal extraction methods with curved spectra and spectra with varying spatial profile were developed in papers of Marsh (1989); Mukai (1990): to determine the spatial profile $P(x, y)$ more accurately, the concept of "virtual re-sampling" of the spectrum is introduced: between spectrum profile pixels (in the cross-dispersion direction) introduce additional virtual "pixels" (usually no more than 10), the counts in which are redefined based on linear regression so that the total signal remains unchanged. If the profile of the spectrum varies greatly with wavelength, the attempt to "smooth" it may ruin the spectrum. In this case, the split of the spectrum into fragments by wavelength, in which the profile change is insignificant can be a simple and effective solution. Both methods of spectrum extraction are implemented in DECH: the standard method and optimal one. The optimal extraction can give a positive effect only for the spectra with a low signal-to-noise

ratio, the conventional simple integration is more preferable for well exposed spectra.

4.2.1. Correction for slit inclination

In some echelle spectrographs (for example, MIKE spectrograph (Bernstein et al. (2003) at 6.5-m telescope Clay in Las Campanas observatory) spectral lines in spectral images deviate significantly from the perpendicularity to the main dispersion, and the degree of deviation varies both along orders and along the direction of the main dispersion. The conventional spectrum extraction from such images leads to a loss of spectral resolution and distortion of the spectral lines profile.

To estimate the slit inclination magnitude we introduce the parameter $N_{xy} = \Delta x / \Delta y$ in such a way that $N_{xy} = 0$ if the slit is located strictly vertically, i.e. there is no tilt. For example, if $N_{xy} \sim 0.2$ (Fig. 5), spectrum integration (extraction) with the tilted slit correction should be performed as follows:

$$\begin{aligned} &+ 0.2I(x_{i+1}, y_{y0+1}) + \dots \\ &+ 0.8I(x_i, y_{y0-1}) \\ &+ 0.2I(x_{i-1}, y_{y0-1}) + \dots \end{aligned} \tag{3}$$

The complete algorithm looks like this:

- Construct a $\Delta x / \Delta y$ values map over the entire image. To build such a map, one should use the thorium-argon spectrum with a sufficiently high slit;
- Approximate the resulting tilt estimates by a two-dimensional polynomial, so that for any coordinate (x, m) of the spectral image (where x — pixel numbers, m — order number), one can calculate the N_{xy} value. In the case of the MIKE spectrograph, the second degree of the polynomial is sufficient for both coordinates¹⁰;
- Apply the obtained resulting solution in the extraction procedure¹¹.

A comparison of results of extraction with and without the tilt correction shown in Fig. 6.

5. WORK WITH THE EXTRACTED SPECTRA

Extraction procedure for each FFOREST's spectral image produces two FITS files: one file contains the actual spectrum extracted from the sub-order of the object, the other one contains the corresponding thorium-argon spectrum extracted from the sub-order of the artificial stars. The second file ends with "_ThAr.fits". The beginning of the file name coincides with the base file name of the object spectrum.

To make the wavelength scale, it is recommended to use the averaged image of the thorium-argon spectra with identical, rather short exposures (see Section 2). The process of building the dispersion curve in the echelle spectrum is approximately the same as in IRAF. First step — identification of thorium lines in adjacent or close two spectral orders¹², approximation of these identified knots by a two-dimensional polynomial¹³ in the form:

$$\lambda(x, m) = \sum_{i=0}^k \sum_{j=0}^n a_{ij} x^i m^j$$

¹⁰ Procedure "Mask | Solve Tilt Surface" in DECH95 program

¹¹ Option "Fix the Tilted Slit" in the procedure "Extraction | Using mask" in DECH95 program

¹² Procedure "Curve | Dispersion Curve Workshop | Create It" in the DECH-FITS

¹³ Procedure "Curve | Dispersion Curve Workshop | Global Fit & Create FDS file" in DECH-FITS program

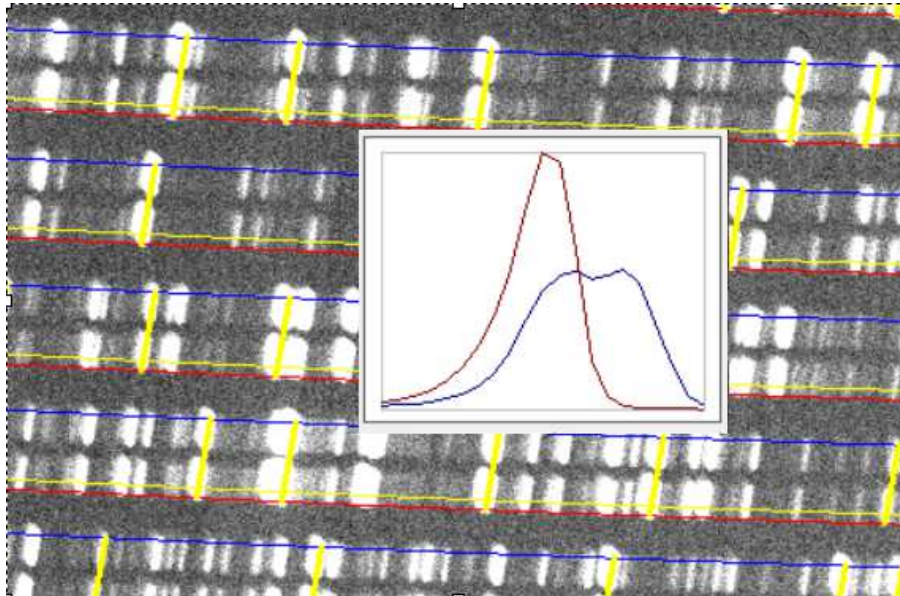


Figure 6. A fragment of a ThAr echelle spectrum obtained using the MIKE spectrograph. A fragment of the tilts map is visible (straight inclined lines passing through selected lines of thorium) built using the procedure "Mask | Make TiltMap" of the DECH95 program. Two extracted profiles are shown: the integration result with taking into account the tilt of the slit (red profile) and, the integration result without the correction (blue profile with two peaks).

where a_{ij} — the polynomial coefficients; x — knots coordinate in the pixel space (along main dispersion); m — knots coordinate in the space of spectral orders. The first resulting solution made for two identified orders is not final, of course, but it allows us to identify the bulk of the lines in other spectral orders in the automatic mode. Sometimes it may be necessary to manually identify the first and last orders to avoid the extrapolation, then repeat the approximation and after that, identify all other lines using the automatic procedure. For the FFOREST spectrograph (as of 2022 year) the recommended degree of the polynomial for the pixels space is 5 and, for the orders is 4. Usually, the dispersion curve is calculated using about of 700–1000 knots. The means square approximation error does not exceed 0.003 Å. The resulting wavelength solution stored in the IRAF format to all spectra of the observing run, then the spectra are ready for further processing and analysis both in DECH or IRAF.

The continuum normalization can be done either manually or automatically. The automatic normalization gives a good result for the spectra with narrow lines, e.g. in solar-type stars (see Fig. 7). In spectra with broad lines, exhibiting emissions and/or strong blending it is preferable to work in the manual mode.

5.1. Measurement of the radial velocities by the cross-correlation method.

The cross-correlation method is actively used in astronomy to measure the radial velocity of observed objects. The method, which was proposed by Simkin (1974) and detailed in the paper of Tonry and Davis (1979) was implemented in DECH as well. To measure the shift of spectral lines in the spectrum of an object observed on different dates two procedures are required: monitoring the stability of mechanical and optical part of the spectrograph; measurement of the shift of spectral lines in the investigated spectrum relative to the sample spectrum (template). The second procedure, in turn, includes the actual measurement of the displacement and the calculation of the

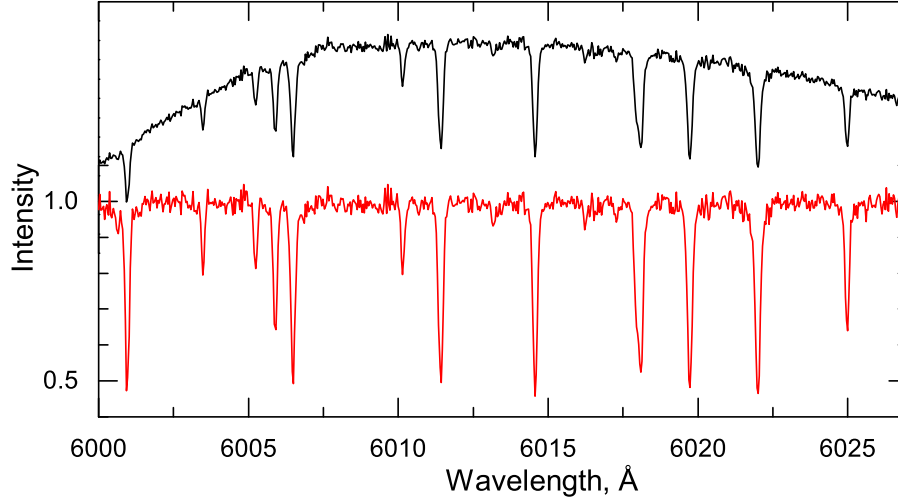


Figure 7. An example of automatic continuum normalization.

barycentric correction based on the algorithm proposed by Stumpf (1979). The accuracy of determining the barycentric correction is not worse than 50 ms^{-1} which places high demands on the accuracy of the initial data, such as the effective exposure time, the coordinates of the observatory and of the observed object.

In the FFOREST spectrograph the projections of the outputs of two fibers that form spectra of neighboring sub-orders are located not strictly vertically under each other, but at a certain angle conditioned by the considerable thickness of the fibers clad and the limitations on the space between sub-orders. The presence of this tilt leads to the fact that the wavelength scale built on the suborder of the thorium-argon has a constant shift relative to the wavelength scale of the sub-order with the spectrum of object. As of August 2022 year, the shift value is approximately 127 km s^{-1} .

As already noted, the control of the mechanical stability of the device is carried out using the thorium-argon spectrum, which is observed simultaneously with the astronomical object. In Fig. 8 one can evaluate the mechanical stability of the device on 19 consecutive exposures obtained within about 60 minutes on September 26, 2021. The experiments with the equipment showed that the largest contribution to the measurement error is made by spectral orders with one or two dominant lines, which are not necessarily saturated. The best result was achieved with masking such lines. For cross-correlation, wavelength areas free lacking the strong lines were chosen. As of August 2022, the measurement error does not exceed $10\text{--}20 \text{ ms}^{-1}$ for stellar spectra and is approximately $1\text{--}2 \text{ ms}^{-1}$ for thorium-argon. With an increase in the number and length of spectral orders after installing a permanent camera, the accuracy should increase at least twice. The mechanical stability of the device will be significantly improved after the installation of a continuous nitrogen supply system at the cryostat of the CCD camera.

To measure the radial velocity at any point in a selected line profile, DECH provides an unique method to match the direct and mirror line profiles. If to combine manually fragments of the mirrored (along the wavelength axis) and the original profile under study, it is possible to estimate the radial velocity of any component or part of a profile of any complexity.

5.2. Measuring equivalent widths

DECH provides a possibility to measure equivalent widths (EW) in several ways. Classical methods include direct integration, line fitting with Gaussian, Lorentzian, Voigt profiles, and automatic blend

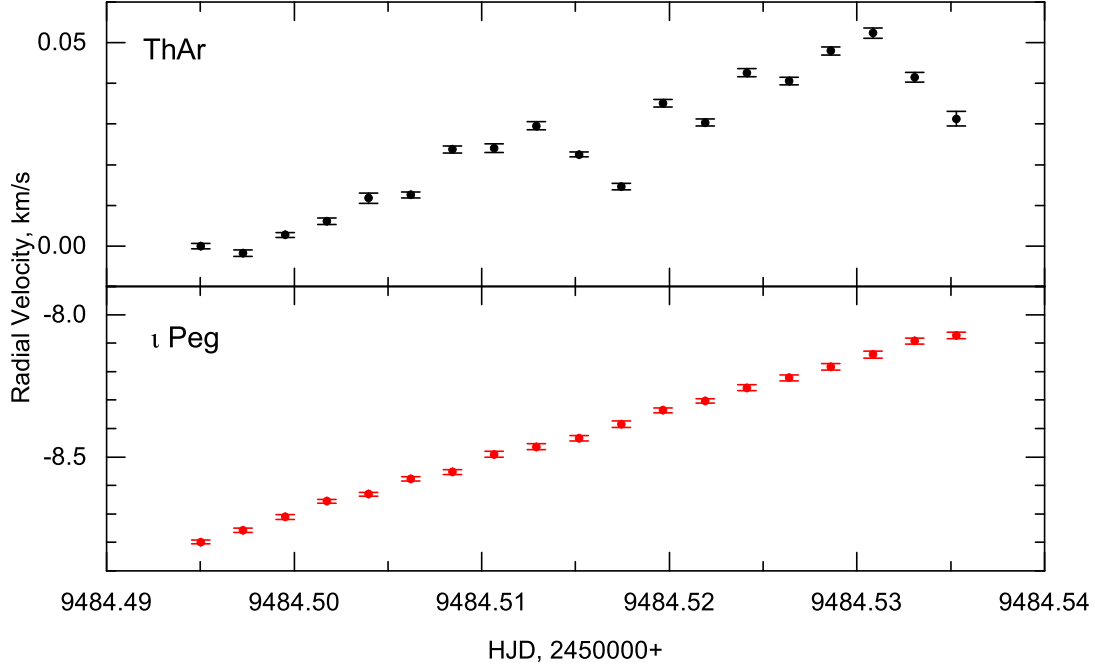


Figure 8. Cross-correlation analysis of spectra of ι Peg (lower plot **(b)**) received within one hour of observations on September, 26, 2021. All corrections are taken into account, including the correction for the mechanical instability of the device **(a)**, controlled using simultaneous registration of thorium-argon spectrum.

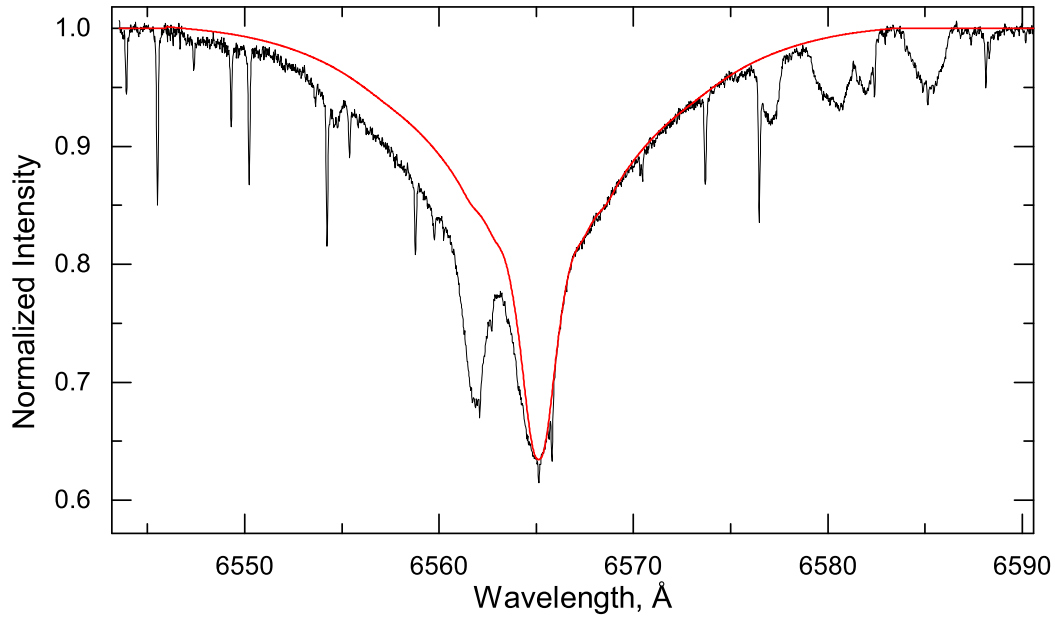


Figure 9. An example of measuring the equivalent width with an arbitrary profile.

separation. It is also possible to estimate the equivalent width by manually constructing a voluntary profile. This method may be the only way to measure lines with strong blending, when the spectrum contains only a (small) part of the profile of the line of interest (Fig. 9).

For the convenience of the measurements and results analysis, it is possible to use an iden-

tification list of known lines in various formats, including data from the VALD (Pakhomov et al. 2019) database. When such lists are used, the measurement results are stored together with all atomic data of the line, which simplifies the subsequent analysis of the spectra by the stellar model atmosphere method. An error estimate in measuring equivalent widths is not a trivial task and has no general solution. In DECH the EW-error is calculated in two ways. For strong and wide lines, it is recommended to use the EW-error estimation based on the equation 7 from the paper of Vollmann and Eversberg (2006) where, the measured line intensity is taken into account. For weak and narrow lines, it is recommended to use the EW-error estimation calculated as the product of the line width and the reciprocal of the signal-to-noise ratio¹⁴.

6. CONCLUSION

As of 2022, the high-resolution fiber-feed echelle spectrograph installed at 6-m telescope of Special Astrophysical Observatory of Russian Academy of Sciences does not have a standard camera, so a significant part of the spectrum at the edges of the spectral orders is vignetted. As a result, a significant part of the light detector of the CCD camera remains unused, so it is recommended to pre-cut the informative part of the observed image¹⁵.

The DECH software package has been used by astronomers from the different countries for processing and analyzing astronomical spectra for more than 20 years. The hundreds of publications have been written based on measurements made with DECH. The DECH software package is under continuous improvement. The latest version includes utilities for analyzing data from the high-resolution fiber-feed echelle spectrograph FFOREST at SAO RAS, which makes it possible to perform high-precision measurements of radial velocities, and to detect exoplanets. A detailed description of the procedures and commands is given the user manual of the spectrograph.

FUNDING

The project was supported by the Ministry of Science and Higher Education of the Russian Federation, grant No. 075-15-2020-780.

CONFLICT OF INTEREST

The authors declare no conflicts of interest.

REFERENCES

- K. Banse, P. Crane, P. Grosbol et al., The Messenger **31**, 26 (1983).
- R. Bernstein, S. A. Shectman, S. M. Gunnels, et al., SPIE **4841**, 1694 (2003).
- C. Allende Prieto, R. J. Garcia Lopez, Astron. and Astrophys. Suppl. **131**, 431 (1998).
- G. A. Galazutdinov, V. V. Shimansky, A. Bondar, et al., Monthly Notices Royal Astron. Soc. **465**, 3956 (2017).
- K. Gullikson, S. Dodson-Robinson, A. Kraus, Astron. J. **148**, 53 (2014).
- K. Horne, Publ. Astron. Soc. Pacific **98**, 609 (1986).
- T. R. Marsh, Publ. Astron. Soc. Pacific **101**, 1032 (1989).

¹⁴ denoted as `errOld` in DECH-FITS program

¹⁵ One can trim an image fragment with the informative part using the command `trim12416332661790 *.fits`. The command must be executed for all images before all subsequent processing steps. After installing the permanent spectrograph camera, this step can be omitted

- K. Mukai, Publ. Astron. Soc. Pacific **102**, 183 (1990).
Yu. V. Pakhomov, T. A. Ryabchikova and N. E. Piskunov, Astronomy Reports **63**, 1010 (2019).
S. M. Simkin, Astron. and Astrophys. **31**, 129 (1974).
A. Smette, H. Sana, et al., Astron. and Astrophys. **576**, A77 (2015).
P. Stumpff, Astron. and Astrophys. Suppl. **78**, 229 (1979).
D. Tody, SPIE **627**, 733 (1986).
J. Tonry, M. Davis, Astron. J. **84**, 1511 (1979).
G. G. Valyavin, V. D. Bychkov, et al., Astrophysical Bulletin , **69**, 224 (2014).
K. Vollmann and T. Eversberg, Astronomische Nachrichten, **327** (9), 862 (2006).